


## RM-MC35ELK for NW-HD5/NW-HD5H

© 2005 Sony Corporation

### Parts and Controls

Front

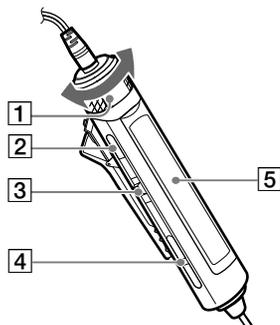


- 1** VOL (volume) +/- control  
Adjusts the volume by turning the VOL+/- control in the direction of the arrow.
- 2** ■ (stop) button  
Press to stop or cancel the operation, and press and hold to turn the player off.
- 3** Jog lever (◀◀, ▶▶/ENT, ▶▶)  
Press ▶▶/ENT to play/pause, ▶▶ to search forward, and ◀◀ to search backward.

Operation	Function
Press ▶▶/ENT.	Play/Pause/Enter
Press and hold ▶▶/ENT.	Add/remove* a bookmark
Move ▶▶/ENT toward ◀◀.	Search/Go backwards quickly.
Move ▶▶/ENT toward ▶▶.	Search/Go forward quickly.

\* You cannot add a bookmark in stop mode.

Rear

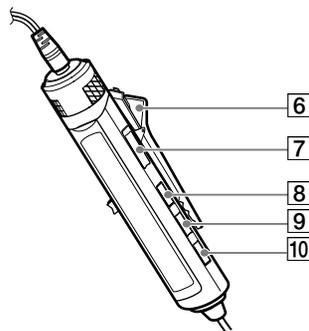

- 4** ⊞ +/- button  
Finds the beginning of tracks in the next/previous album, etc., selected on the list display.
- 5** Display
- 6** Clip
- 7** HOLD switch  
Slide the HOLD switch in the direction of the arrow until the yellow mark appears. Operations using the remote is deactivated. Even if the HOLD function is working, "HOLD" will not appear on the display of the remote.
- 8** DISPLAY button
- 9** P MODE/↔ (repeat) button
- 10** SOUND button

- 8** DISPLAY button
  - The display changes, each time you press the button as follows.
    - Track number, elapsed playing time
    - ↓
    - Track number, remaining time of the track
    - ↓
    - Track number, track title
    - ↓
    - Track number, album title
    - ↓
    - Track number, artist name
    - ↓
    - Track number, playback mode
  - The display lights up when you press and hold the button. Even if you set "Backlight" to "30 sec" on the player, the display on the remote lights up for 10 seconds.
  - The characters A to Z, a to z, and 0 to 9 can be displayed.
- 9** P MODE/↔ (repeat) button
  - The playback mode changes, each time you press the button as follows.
    - Normal (Normal play)
    - ↓
    - 1Track (Single play)
    - ↓
    - Track SHUF (Shuffle track play)
    - ↓
    - Item SHUF (Shuffle items play)
  - The repeat mode is set to "On" when you press and hold the button.

- 10** SOUND button  
The setting for the sound quality changes as you press the button. Press and hold it to customize the sound quality (Ⓢ "Changing the Sound Quality and Settings"\* in the PDF of the Operating Instructions).  
\* To select sound item, move the Jog lever. You cannot use ◀◀/▶▶ on the player for this operation.

#### Customizing sound quality (6-Band Equalizer - Custom)


- 1** Press SOUND repeatedly to select "Sound 1" or "Sound 2," and then press and hold it until the display changes.
- 2** Move the jog lever to select "Custom 1" or "Custom 2," and then press the jog lever. "1" or "2" appears to the right of SOUND.
- 3** Move the jog lever to select the frequency range (flashing), and then press ⊞ +/- or turn the VOL+/- control to select the sound level.
- 4** Repeat step 3 to make adjustments for the remaining frequency ranges, and then press the jog lever to enter the setting. Press ■ to cancel set up.

Continued ➞

## Adjusting treble and bass emphasis (Digital Sound Preset)

- 1 Press **SOUND** repeatedly to select “Sound 3” or “Sound 4,” and then press and hold it until the display changes.
- 2 Move the jog lever to select “Custom 3” or “Custom 4,” and then press the jog lever.  
“3” or “4” appears to the right of **SOUND**.
- 3 Move the jog lever to select the frequency range (flashing), and then press  $\square$  +/- or turn the **VOL +/-** control to select the sound level.
- 4 Press the jog lever to enter the setting. Press  $\blacksquare$  to cancel set up.

## Display

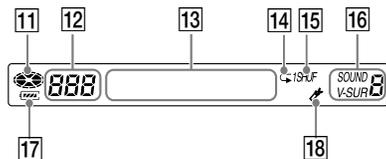


- 11 Playing status
- 12 Track number
- 13 Character information display
- 14 Repeat indicator
- 15 Play mode indicator
- 16 Sound indicator
- 17 Remaining power of the battery indicator
- 18 Bookmark indicator

## When the indicators do not appear properly

Remove and insert the remote again, or remove the battery from the player and reinsert it.

## To change the direction of the clip

- 1 Remove the clip on the back of the remote.
- 2 Reinsert the clip in the opposite direction, left to right or right to left.

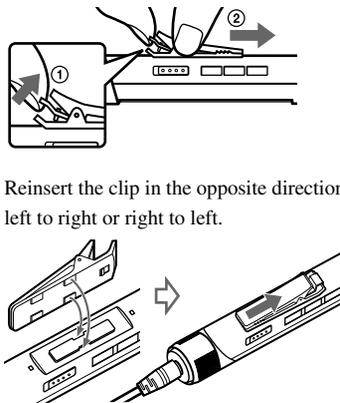

## Playing back transferred tracks

### 1 Press **SEARCH/MENU**.

The Find display appears.  
(See “Selecting Tracks to Playback (Artist, Album, Genre, etc.)” in the PDF of the Operating Instructions)

### 2 Press $\mathcal{Z}$ to select “Artist,” “Album,” or “Genre” in the Find display on the player, and then press $\blacktriangleright$ .

### 3 Press $\square$ +/- to select an album. Or move the jog lever toward $\blacktriangleleft/\blacktriangleright$ to select a track.

### 4 Press the jog lever.

Playback starts from the first track of the item (artist, album, etc.) you selected.

