

# USB Charging AC Power Adaptor

## Operating Instructions 使用説明書

### AC-U50A

© 2005 Sony Corporation Printed in China



#### English

Before operating the unit, please read this manual thoroughly and retain it for future reference.

#### WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.  
To reduce the risk of fire, do not cover the ventilation of the apparatus with news papers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.  
To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus.  
To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.



**Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

#### Precautions

##### On safety

- The nameplate indicating operating voltage, power consumption, etc., is located on the rear exterior.
- Before operating the system, be sure that the operating voltage of the system is identical with that of your local power supply.
  - The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
  - Unplug the system from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull the cord by grasping the plug. Never pull the cord itself.
  - Should any liquid or solid object fall into the system, unplug the system's power cord and have the system checked by qualified personnel before operating it any further.

##### Installation

Do not place the AC power adaptor in a location where it is:


- Subject to extreme high temperature (E.g., in a car with its windows closed)
- Subject to direct sunlight or near a heat source
- Subject to mechanical vibration or shock
- Subject to a magnetic field (E.g., near a magnet, speaker, or TV)
- Subject to excessive dust.

##### Operation

- Make sure the current and voltage of the equipment matches that of the outlet.
  - For safety, if the input current is too high, the unit will automatically shut down.
  - radio tuner as it may cause noise.
  - To prevent damage, be careful not to drop or otherwise cause a mechanical shock to the unit.
  - After using, disconnect the unit from the wall outlet and the equipment.
  - Disconnect the unit from the AC outlet by pulling on the plug. Do not pull on the cord.
  - To avoid short-circuiting, do not allow the terminals of the unit or connector to touch any metal object.
- ##### Cleaning
- Clean the unit with a soft, dry cloth. If the unit is very dirty, wipe it off with a soft cloth lightly moistened with a mild detergent solution, and then wipe with a soft dry cloth.
  - Do not use any type of solvent such as alcohol, thinner, or benzene as it may damage the finish of the cabinet.
  - If you use any chemical cleaner, observe the instructions provided with the product.
  - If the cabinet of the unit is splashed with any type of solvent such as insecticide, or remains in contact for a long time with rubber or vinyl, the finish of the cabinet may be damaged.

#### How to use

- 1 Connect the USB charging AC power adaptor to the device (Network Walkman\*, etc.) using the USB cable supplied with the device.**  
\* "WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.
- 2 Plug the USB charging AC power adaptor into an AC outlet.**

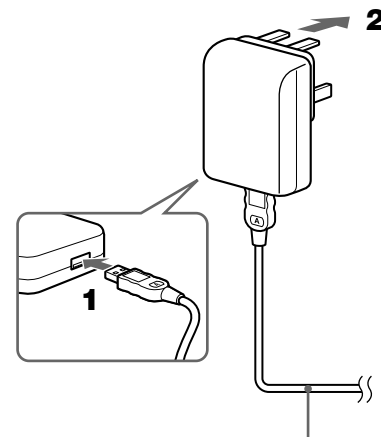

USB cable supplied with the device to connect to unit

- 3 Set the device to recharge.**

It may not be necessary to set the device to recharge. (See device's instruction manual.)

##### Notes

- Plug the USB charging AC power adaptor into a nearby AC output. In the case of a problem, unplug from the AC outlet immediately.
- Do not place the device on a bookshelf or in a confined place such as a cabinet.
- Do not use the device in a place subject to liquid or moisture to avoid fire or electric shock. Furthermore, do not place liquid-filled vessels, such as a vase, etc., on the device.
- Use in ambient temperature between 5-35 °C
- Performance is not guaranteed in case of using an USB hub or USB extension cable. Follow the connection method designated by the connected device (Network Walkman, etc.).

#### Using your AC power adaptor abroad

You can use your AC power adaptor in any country or area that uses 100 V to 240 V AC, 50/60 Hz, by connecting a plug adaptor. If the country you visit employs a different shaped socket, use the correct plug adaptor.

Please consult your nearest travel bureau for the type of the plug adaptor needed in your travels.

#### Specifications

Input voltage	100 – 240 V, 50/60 Hz
Rated output voltage	DC 5.0 V
Rated output current	500 mA
Power consumption	5 W
Dimensions	Approx. 55 × 75 × 55 mm (Approx. 2 1/4 × 3 × 2 1/4 in) (w/h/d)
Mass	Approx. 60 g (2.12 oz)

##### Supplied accessories

Operating Instructions (1)

Design and specifications are subject to change without notice.

操作本裝置之前，請仔細閱讀本手冊並妥善保管，以備今後參考。

## 警告

爲了減少火災或觸電的危險，切勿將本設備暴露在雨中或潮濕中。

爲了減少火災的危險，切勿用報紙、桌布、窗簾等蓋住設備的通風孔。切勿將點燃的蠟燭放在設備上。

爲了減少火災或觸電的危險，切勿將盛滿液體的花瓶等放在設備上。

爲了避免觸電，切勿打開機殼。只能由有資格的人員進行維修。

切勿將設備安裝在狹窄的空間內，如書櫃或壁櫥。

## 注意事項

### 安全須知

指示操作電壓、功率消耗等指標的標牌在背面。

- 操作本系統之前，必須確定系統的操作電壓與您當地電源的電壓一致。
- 只要本裝置與電源插座相連接，則即使裝置本身已經關閉，但仍然未切斷與交流電源的連接。
- 如果要長時間不使用本裝置，請拔掉系統的電源插頭。若要拔電線，請抓住插頭拔。切勿拉電線。
- 一旦有液體或固體物進入系統，請拔掉系統的電源線，並請有資格的人員對系統進行檢查後方可繼續使用。

### 安裝

切勿將交流電源轉接器放在以下位置：

- 極端高溫（如：車窗緊閉的車內）
- 陽光直射或靠近熱源
- 機械振動或震擊
- 磁場（如：磁體、揚聲器或電視機）
- 過多灰塵。

### 操作


- 確保設備的電流和電壓與插座的一致。
- 爲了安全，如果輸入電流過高，則裝置將自動關閉。
- 切勿將本裝置連接至收音機或帶有收音機調諧器的裝置，否則可能產生噪音。
- 爲防止損壞，請小心不要掉落，否則對本裝置造成機械沖擊。
- 使用後，請拔掉插座和設備上的電源線。
- 從電源插座拔電源線時請抓住插頭。切勿拉電線。
- 爲避免短路，切勿將本裝置的端子或連接器接觸任何金屬物。

### 清潔

- 用乾燥的軟布清潔本裝置。如果裝置非常髒，請用軟布稍沾適度的清潔液擦拭，然後再用柔軟的乾布擦拭。
- 切勿使用任何類型的溶劑，如酒精、稀釋劑或汽油，這些物質會損壞表面塗層。
- 如果您要使用任何類型的化學清潔劑，請遵守隨產品提供的說明。
- 如果本裝置的外殼濺到殺蟲劑等任何類型的溶劑，或長時間保持接觸橡膠或塑料製品，則可能會損壞外殼的塗層。

## 使用方法

- 使用隨設備（Network Walkman 等）提供的 USB 電纜將 USB 充電交流電源轉接器連接至該設備。
- 將 USB 充電交流電源轉接器的插頭插入交流電源插座。

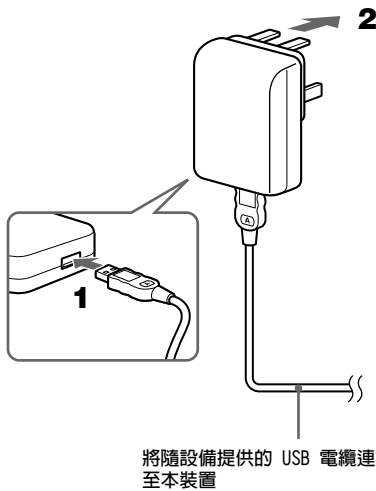

- 設定設備再充電。也可能不需要設定設備再充電。（參閱設備的使用說明書。）

### 注意

- 將 USB 充電交流電源轉接器的插頭插入近旁的交流電源插座。如果有故障，請立即拔掉交流插座上的插頭。
- 切勿將設備放在書架上或放在櫥櫃等狹窄的空間內。
- 切勿在受液體或潮濕影響的地方使用設備，以免引起火災或觸電。此外，切勿將盛滿液體的花瓶等放在設備上。
- 請在 5-35°C 的環境溫度中使用。
- 在使用 USB 集線器或 USB 延長電纜的情況下將無法保證其性能。請按照所連接設備（Network Walkman 等）指定的方法進行連接。

## 在海外使用交流電源轉接器

您可以在使用 100V-240V AC、50/60Hz 的任何國家或地區，通過連接插頭轉接器使用此交流電源轉接器。如果您所到的國家採用另外形狀的插座，則請使用正確的插頭轉接器。

請詢問您附近的旅行社，以了解您在旅行中所需要的插頭轉接器類型。

## 規格

輸入電壓	100 - 240 V, 50/60 Hz
額定輸出電壓	DC 5.0 V
額定輸出電流	500 mA
功耗	5 W
尺寸	約 55 × 75 × 55 mm (寬/高/厚)
質量	約 60 g

### 附件

使用說明書（1）

設計和規格如有變更，恕不另行通知。