


## RM-MC35ELK for NW-A1000 series/ A3000 series

© 2005 Sony Corporation

### Parts and Controls


Front

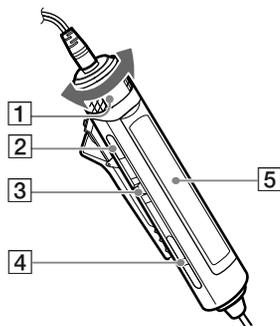

- 1** VOL (volume) +/--control  
Adjusts the volume when you turn the VOL+/- control in the direction of the arrow.
- 2** ■ (stop) button  
Press to pause, and press and hold to turn the player off.
- 3** Jog lever (◀◀, ▶▶/ENT, ▶▶)

Operation	Function
Press ▶▶/ENT.	Play/Pause
Press and hold ▶▶/ENT.	Add a track to the default Bookmark list/ turn off the Walkman when it is in the pause mode.
Move ▶▶/ENT toward ◀◀.	Go to the beginning of a playing track quickly.
Move ▶▶/ENT toward ▶▶.	Go to the beginning of the next track.

Rear

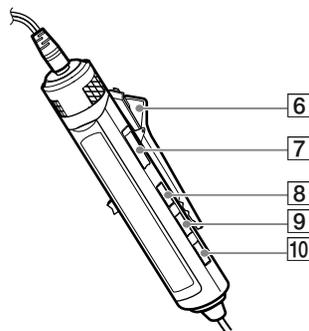

Operation	Function
Press and hold ▶▶/ENT toward ◀◀.	Go backwards from the current track quickly.
Press and hold ▶▶/ENT toward ▶▶.	Go forwards from the current track quickly.

- You cannot remove a track from a Bookmark list using the remote.
- For details on changing the default Bookmark list, refer to the Operation Guide of the Walkman.
- You cannot add a track to a Bookmark list in the following cases:
  - while arranging the order of tracks of the default Bookmark list using the Walkman.
  - while displaying a track list of the default Bookmark list in the Walkman.
  - when the track you are trying to add has already been added to the default Bookmark list.
  - when you are trying to add more than 100 tracks to the default Bookmark list.

**4** ☒ +/- button

Depending on the selected search mode, works as follows:

- “All Songs”  
Finds the beginning of the first track in the previous index or in the next index.
- “Album,” “Artist,” “Genre,” “Recent Transfers”  
Finds the beginning of the first track in the previous album or in the next album.
- “Playlists (such as Bookmark List 1 - 5 or Trash bin list),” “Favorite 100”  
Finds the beginning of the first track in the list of tracks selected.
- “☆ Rating”  
Finds the beginning of the first track of each star rating.
- “Release Date”  
Finds the beginning of the first track of each artist for the list of selected release year.
- “Play History”  
Finds the beginning of the first track of the list of each played date.

**Notes**

If the player’s firmware version is older than 2.01, this button may not work as described as above, depending on the selected search mode. For details about a firmware update, refer to the Operation Guide of the Walkman.

**5** Display


**6** Clip

**7** HOLD switch

Slide the HOLD switch in the direction of the arrow until the yellow mark appears. Operations using the remote are deactivated. Even if the HOLD function is working, “HOLD” will not appear on the display of the remote.

**8** DISPLAY button


- The display changes each time you press the button, as follows.

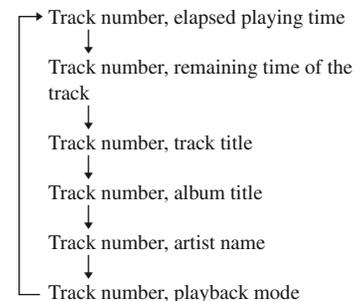

- The display lights up when you press and hold the button.  
While using the remote, the display lights up for 10 seconds. When “New Song Pop Up” in the “Display” setting on the Walkman is set to “On”, the display lights up when a track changes.
- The characters A to Z, a to z, and 0 to 9 can be displayed.

### 9 P MODE/ (repeat) button

- The playback mode changes each time you press the button, as follows. The Preview Play function is deactivated and an artist name appears in the display.

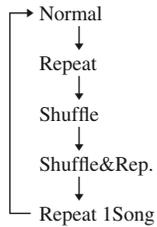


- When you press and hold the button while “Normal” or “Shuffle” is selected, the repeat mode is set to “On” and the setting changes to “Repeat” or “Shuffle&Rep.”
- When you press and hold the button while “Repeat” or “Shuffle&Rep.” is selected, the repeat mode is set to “Off” and the setting changes to “Normal” or “Shuffle.”

### 10 SOUND button

The setting for the sound quality changes as you press the button (Ⓢ “Customizing Sound Quality” in the Operation Guide).

### Display

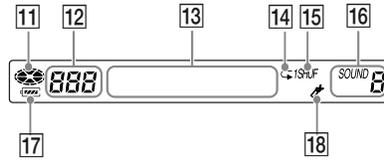


- 11 Playing status
- 12 Track number
- 13 Character information display
- 14 Repeat indicator
- 15 Play mode indicator
- 16 Sound indicator
- 17 Remaining power of the battery indicator
- 18 Bookmark indicator

### When the indicators do not appear properly


Remove and insert the remote again, or reset the Walkman.

### To change the direction of the clip

- 1 Remove the clip on the back of the remote.

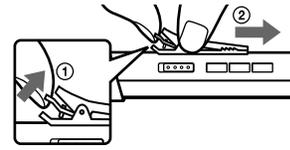

- 2 Reinsert the clip in the opposite direction, left to right or right to left.

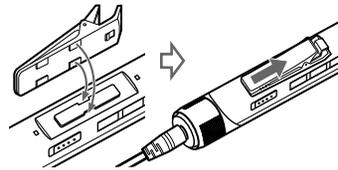

- Depending on the position of the clip, characters may appear upside-down on the display and may be hard to read. In this case, reinsert the clip in the opposite direction, left to right or right to left.