

Trinitron Color TV

Operating Instructions _____

GB

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

WEGA

KV-SZ29

KV-SZ25

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.



 

 

 
 


 
 
 <p>For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.</p>	 <p>For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.</p>	 <p>To prevent fire or shock hazard, do not expose the TV to rain or moisture.</p>
 <p>Do not place any objects on the TV. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.</p>	 <p>Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.</p>	 <p>Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.</p>
 <p>Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.</p>	 <p>Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.</p>	 <p>Do not plug in too many appliances to the same power source. Do not damage the power cord.</p>
 <p>Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.</p>	 <p>Clean the TV with a dry and soft cloth. Do not use benzene, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.</p>	 <p>Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.</p>

Table of Contents

Installation

Securing the TV	4
Getting Started	5
Setting up your TV ("Initial Setup")	6

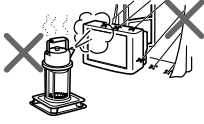Overview of Controls

TV front and rear panels	8
Using the remote control and basic functions	9

Advanced Operations

Selecting the picture and sound modes	11
--	----

Menu Adjustment

Introducing the WEGA GATE navigator	12
"Settings" Adjustment	13
Changing the "Picture" setting	14
Changing the "Sound" setting	16
Changing the "Channel Setup" setting	17
Changing the "Setup" setting	19


Additional Information

Connecting optional components ...	20
Troubleshooting	22
Specifications	Back cover

GB

■ Securing the TV

 
To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.




screws



 
clamps




band

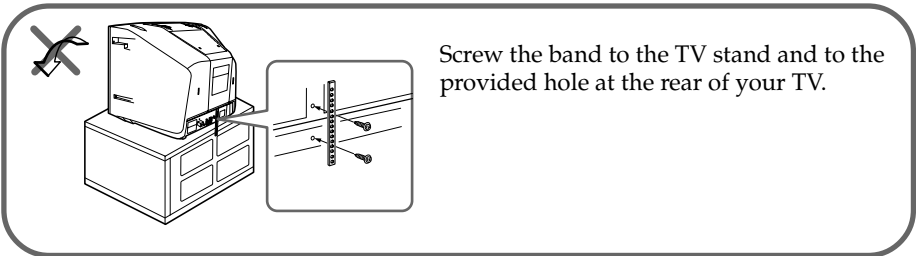 

or

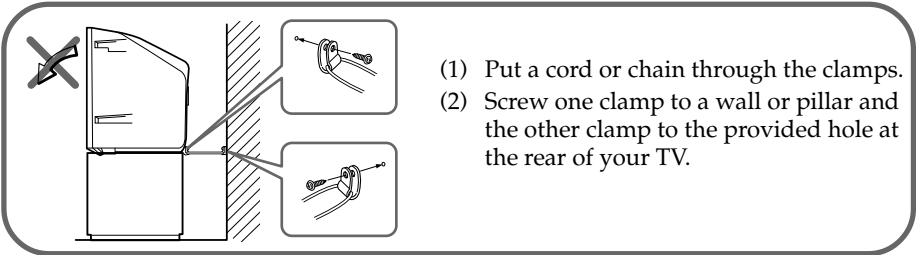 


or

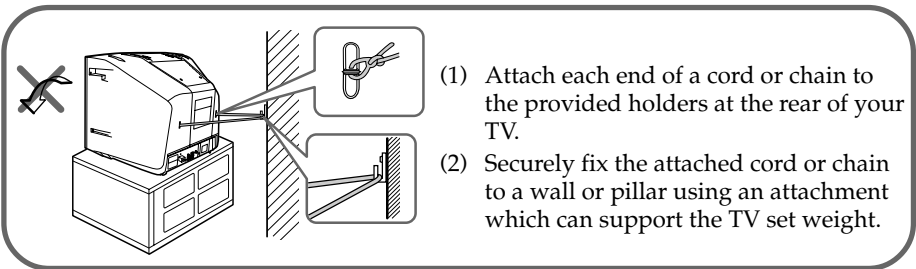 

Note

- Use only the supplied screws. Use of other screws may damage the TV.

 ■ Getting Started

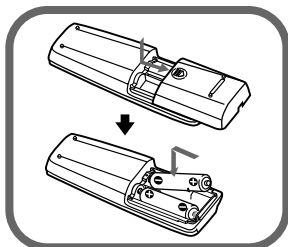


Step 1


Insert the batteries (supplied) into the remote.

Note

 - Do not use old or different types of batteries together.

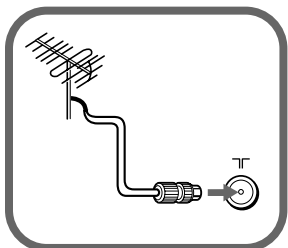


 Step 2


Connect the antenna cable (not supplied) to  (antenna input) at the rear of the TV.

Tip

 
- You can also connect your TV to other optional components (see page 20).

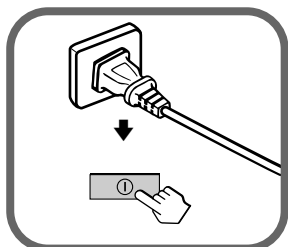

Step 3

Plug in the power cord, then press  on the TV to turn it on.

Note

- The  (standby) indicator flashes green for a few seconds when turning on the TV. This does not indicate a malfunction.



Step 4

Set up the TV by following the instructions of the “Initial Setup” menu (see page 6).

■ Setting up your TV (“Initial Setup”)

When you turn on your TV for the first time, the “Initial Setup” menu will appear. You may change the menu language, preset the TV channels automatically, sort or edit the channels and adjust the picture position using the buttons on the remote control or TV front panel.

- 1** Press **▲** or **▼** to select the desired menu language, then press **[↔]**.

The selected menu language appears.

 
 


- 2** Press **▲** or **▼** to select “Yes”, then press **[↔]** to preset the channels automatically.

The screen will indicate automatic presetting is in progress.

After all available channels have been tuned and stored, the “Program Sorting/Edit” menu appears automatically on the screen.

 
 
To skip automatic channel presetting, select “No”, then press **[↔]**.

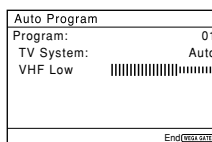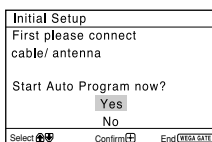






 


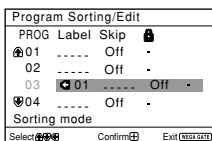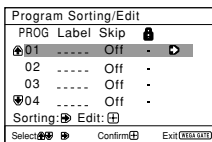
 
If the message “No channel found. Please connect cable/antenna” appears, check your TV connections, then press **[↔]**.

- 3** The “Program Sorting/Edit” menu enables you to sort and edit the channels.





- If you wish to keep the channels in the current condition, press WEGA GATE to exit.
- Press **▲** or **▼** to select the program number with the channel you wish to change. The selected channel will appear on the screen.
 - If you wish to store the channels in a different order:
 - Press **▶** to enter sorting mode.
 - Press **▲** or **▼** to select the new program number position for your selected channel, then press **◀**.

 
 
 


- d) If you wish to edit the channels, press  to change to edit mode.
Press  until the mode that you wish to edit is highlighted: Label, Skip,  (block symbol).
Then press .

- 1) To label, press  or  to select the alphanumeric characters for the label.
Then press .
- 2) To skip the program number, press  or  to select "On". Then press .




You can skip this program number when using PROG +/-.

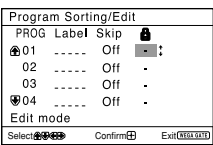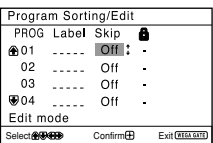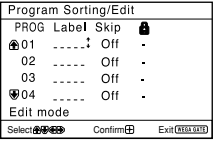- 3) To block unwanted program number, press  or  to select . Then press .

 





- e) Repeat step b) to d) if you wish to change other channels.

Press WEGA GATE to go to the next menu.


- 4** Press  or  to adjust the bars on the top and bottom of the menu if they are slanted, then press .

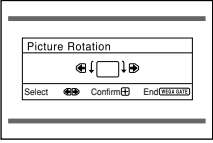



"Picture V-Position" menu appears.

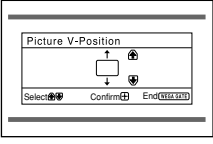 


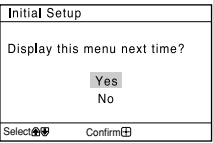 
- 5** If the upper and lower bars are not equally positioned to the top and bottom of the screen, press  or  to adjust them, then press .

If no adjustment is necessary, then press .



- 6** To prevent this "Initial Setup" menu from appearing again when you turn on the TV by pressing , press  or  to select "No", then press .

 
To allow this menu to appear again, select "Yes", then press .



Tip


- You can immediately go to the end of the "Initial Setup" menu by pressing WEGA GATE.

TV front and rear panels

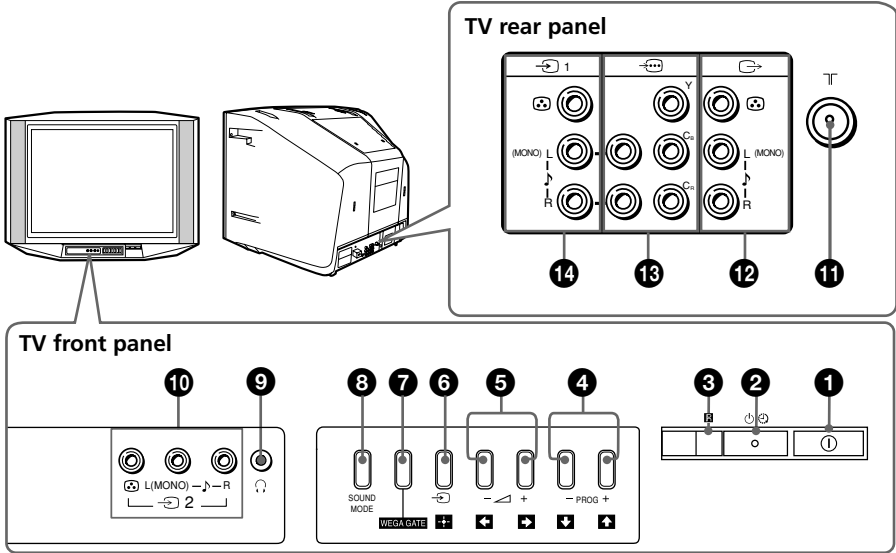

Button/Terminal	Function	Page
1 ⏻	Turn off or turn on the TV.	5
2 ⏻	Standby indicator.	5
2 ⌚	Wake Up indicator.	10
3 📺	Remote control sensor.	-
4 PROG +/-	Select program number.	-
5 🔊 +/-	Adjust volume.	-
6 ↺	Select TV or video input.	20
WEGA GATE menu operations		
4, 5 ⬆, ⬇, ⬅, ➡	Select and adjust items.	12
6 ⏏	Confirm selected items.	12
7 WEGA GATE	Display or cancel WEGA GATE menu.	12
8 SOUND MODE	Select sound mode options with a 5-Band Graphic Equalizer display.	11
9 🎧	Headphone jack.	-
10 ↺2	Video input terminal 2.	20
11 📡	Antenna input terminal.	20
12 📺	Monitor output terminal.	20
13 📺	Component video input terminal.	21
14 ↺1	Video input terminal 1.	20



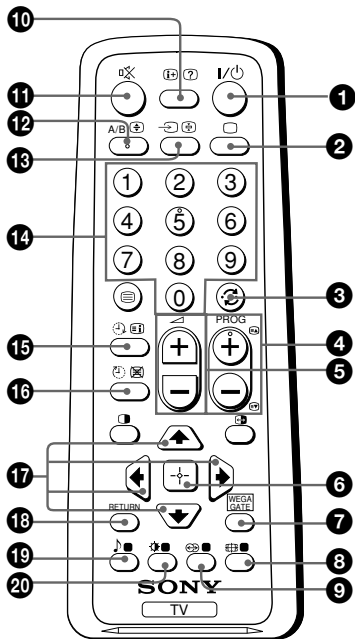 



■ Using the remote control and basic functions



Button	Description	Page
1 I/⏻	Turn off temporarily or turn on the TV.	-
2 □	Display the TV program.	-
3 ↺	Jump to last program number that has been watched for at least five seconds.	-
4 PROG +/-	Select program number. To select quickly, press and hold until the desired program number appears.	-
5 ▽ +/-	Adjust volume.	-
8 📺	Change the picture size: "On" (16:9 wide-mode), "Off".	-
9 🔊	Select surround mode options.	16
10 ⓘ	Display on-screen information.	-
11 🔇	Mute the sound.	-
13 ↶	Select TV or video input.	20
14 0 - 9	Input numbers. For program numbers 10 and above, enter the second digit within two seconds.	-
19 🎵	Select sound mode options with a 5-Band Graphic Equalizer display.	11
20 🌞	Select picture mode options.	11
WEGA GATE menu operations		
6 ⏹	Confirm selected items.	12
7 WEGA GATE	Display or cancel the WEGA GATE menu.	
17 ⬆, ⬇, ⬅, ➡	Select and adjust items.	
18 RETURN	Return to the previous level.	


continue

 continued


Button	Description	Page
<p>Timer operations</p> <p> (Wake up timer)</p>	<p>Set TV to turn on automatically according to the desired period of time (max. of 12 hours).</p> <p>The  indicator on TV lights up amber once you set the wake up timer.</p> <p>If no buttons or controls are pressed for more than one hour after the TV is turned on using the wake up timer, the TV automatically goes into standby mode.</p>	-
<p> (Sleep timer)</p>	<p>Set TV to turn off automatically according to the desired period of time (max. of one hour and 30 min.).</p>	-
<p>Teletext operations (green label)</p> <p> (red, green, yellow, blue)</p>	<p>Not function for your TV.</p>	-
<p>PIP operations</p> <p></p>	<p>Not function for your TV.</p>	-
<p>Stereo/bilingual operations</p> <p> A/B</p>	<p>Not function for your TV.</p>	-

■ Selecting the picture and sound modes

 You can select picture and sound modes and adjust the setting to your preference in the “Custom” option.

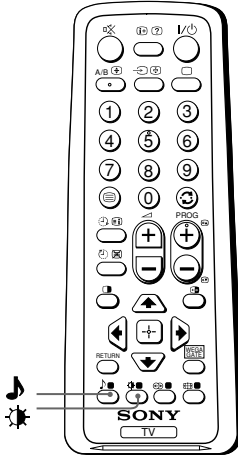




 
Selecting the picture mode

Press  to select the desired picture mode.

Select	To view
“Vivid”	bright, contrast and sharp pictures.
“Standard”	normal pictures.
“Custom”	the last adjusted picture setting from the “Picture Adjustment” option in the menu (see page 15).


Selecting the sound mode

Press  (or SOUND MODE on the front panel) to select the desired sound mode. 5-Band Graphic Equalizer display will appear.


Select	To listen to
“Dynamic” 	dynamic and clear sound that emphasizes both the low and high tones.
“Standard” 	sound that emphasizes voice and high tones.
“Custom” 	the last adjusted sound setting from the “Sound Adjustment” option in the menu (see page 16).

■ Introducing the WEGA GATE navigator

 
WEGA GATE is a gateway that allows you access to preset TV channels, connected external inputs and “Settings” menu.

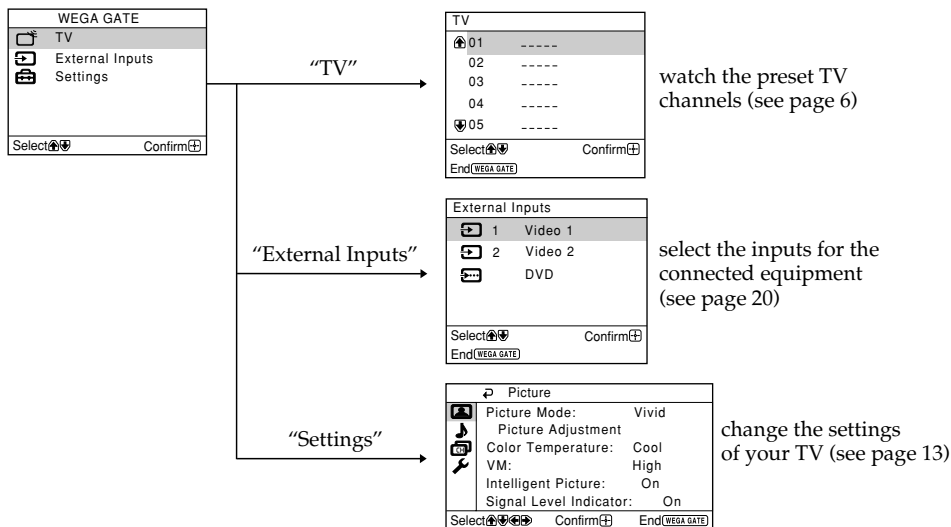


How to use WEGA GATE

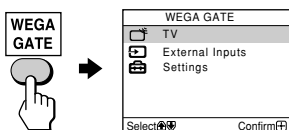 

 
(1) Press WEGA GATE to display or cancel the WEGA GATE menu.

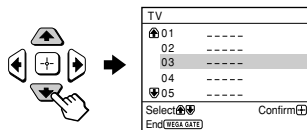

 (3) Press \uparrow or \downarrow to select the desired item.

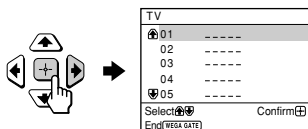

 (2) Press \rightarrow (or \rightarrow) to confirm your selection or go to the next level.

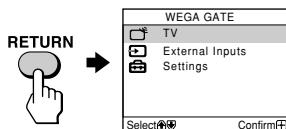

(4) Press RETURN to move to the previous level.

Tip

 
- The WEGA GATE, \rightarrow and $\uparrow, \downarrow, \leftarrow, \rightarrow$ buttons on the front panel can also be used for the operations above.

■ "Settings" Adjustment

You are able to change the settings of your TV from "Settings" in WEGA GATE menu.

Press WEGA GATE button to display WEGA GATE menu. Press **▲** or **▼** to select "Settings" and press **⏏**.

The following is an overview of the items that can be adjusted.

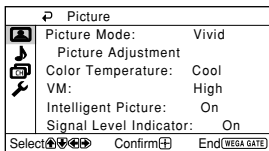

"Picture" (see page 14)

"Picture Mode": "Vivid" → "Standard" → "Custom"

 
"Picture Adjustment": "Picture", "Brightness", "Color", "Hue", "Sharpness", "Reset"

"Color Temperature": "Cool" → "Neutral" → "Warm"

"VM": "High" → "Low" → "Off"

"Intelligent Picture": "On" → "Off"

"Signal Level Indicator": "On" → "Off"

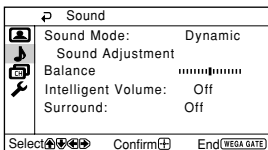

"Sound" (see page 16)

 
"Sound Mode": "Dynamic" → "Standard" → "Custom"

"Sound Adjustment": "Adjust", "Reset"

"Balance"

"Intelligent Volume": "On" → "Off"

"Surround": "On" → "Simulated" → "Off"

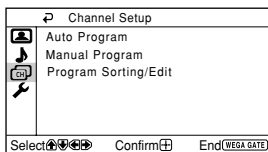

"Channel Setup" (see page 17)

"Auto Program"

"Manual Program"

"Program": "00" - "99"

 
"TV System": "B/G" → "I" → "D/K" → "M"

"VHF Low" / "VHF High" / "UHF"

"Fine": "Auto" → "Manual"

"Signal Booster": "Auto" → "Off"

"Program Sorting/Edit"

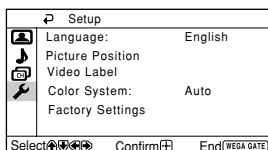

"Setup" (see page 19)

"Language": "English" → "عربي" (Arabic)

"Picture Position": "Picture Rotation", "Picture V-Position"

"Video Label": "Video Input", "Label"

"Color System": "Auto" → "PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"

"Factory Settings": "Yes" → "No"

Note

 
- When a feature is dimmed in the menu, it is not selectable.

■ Changing the “Picture” setting


The “Picture” menu allows you to adjust settings below.

1 Press WEGA GATE and select “Settings”.

2 Make sure the “Picture” icon (🖥️) is selected, then press (⏪).

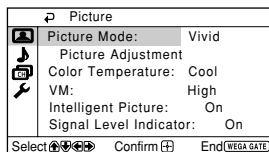

3 Press ↑ or ↓ to select the desired item (e.g., “Picture Mode”), then press (⏪).

Select	To
“Picture Mode”	choose either “Vivid”, “Standard” or “Custom”* (see page 11).
“Color Temperature”	adjust white color tint. Choose either “Cool” (blue tint), “Neutral” (neutral tint) or “Warm” (red tint).
“VM” (Velocity Modulation)	sharpen the edges of each object. Choose either “High”, “Low” or “Off”.
“Intelligent Picture”	optimize picture quality. Press ↑ or ↓ to select “On”, then press (⏪). To cancel, select “Off”, then press (⏪).
“Signal Level Indicator”	display the signal level when the “Intelligent Picture” is functioning. “Intelligent Picture Signal Level” indicator will be displayed, followed by picture improvement when you change the program number or the input mode.  red (weak) amber (average) green (good) Press ↑ or ↓ to select “On”, then press (⏪). To cancel, select “Off”, then press (⏪). “Intelligent Picture” is still functioning.

* You can adjust the setting to your personal preference in the “Picture Adjustment”, “Color Temperature” and “VM” options only when the “Custom” mode is selected (see page 15).

Adjusting the “Picture Adjustment” items under “Custom” mode

1 Press **▲** or **▼** to select either “Picture” (contrast), “Brightness”, “Color”, “Hue” (color tones) or “Sharpness”, then press **⏏**.

Selecting “Reset” will set your TV to the factory settings.

2 Press **▲**, **▼**, **◀** or **▶** to adjust the setting of your selected item, then press **⏏**.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select “Custom”.


 
Notes


- “Hue” can be adjusted for the NTSC color system only.
- Reducing “Sharpness” can also reduce picture noise.

■ Changing the “Sound” setting



The “Sound” menu allows you to adjust settings below.

 1 Press WEGA GATE and select “Settings”.

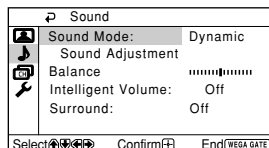2 Press \uparrow or \downarrow to select the “Sound” icon (), then press .




3 Press \uparrow or \downarrow to select the desired item (e.g., “Sound Mode”), then press .

Select	To
“Sound Mode”	choose either “Dynamic”, “Standard” or “Custom”* (see page 11).
“Balance”	Press \downarrow or \leftarrow to emphasize the left speaker. Press \uparrow or \rightarrow to emphasize the right speaker.
“Intelligent Volume”	adjust the volume of all program numbers and video inputs automatically. Press \uparrow or \downarrow to select “On”, then press  . To cancel, select “Off”, then press  .
“Surround”	choose either “On” (surround), “Simulated” (stereo-like monaural sound) or “Off”.


* You can adjust the setting to your personal preference in the “Sound Adjustment” option only when the “Custom” mode is selected.

Adjusting the “Sound Adjustment” items under “Custom” mode

The 5-Band Graphic Equalizer feature allows you to adjust sound frequency settings of “Custom” mode in the menu.


1 Make sure that “Adjust” is selected, then press .

Selecting “Reset” will set your TV to the factory settings.

2 Press \leftarrow or \rightarrow to select the desired sound frequency, then press \uparrow or \downarrow to adjust the setting and press .

The adjusted settings will be received when you select “Custom”.

Notes

 
- Adjusting higher frequency will affect higher pitched sound and adjusting lower frequency will affect lower pitched sound.
- You may display the settings directly by using the SOUND MODE button on the TV front panel (see page 8) or  button on the remote control (see page 9).

■ Changing the “Channel Setup” setting

The “Channel Setup” menu allows you to adjust settings below.

1 Press WEGA GATE and select “Settings”.

2 Press \uparrow or \downarrow to select the “Channel Setup” icon (📺), then press \leftarrow .

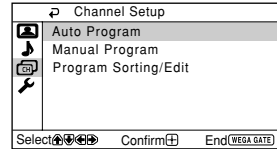

3 Press \uparrow or \downarrow to select the desired item (e.g., “Auto Program”), then press \leftarrow .

Select	To
“Auto Program”	preset channels automatically.
“Manual Program”	manually preset desired channels and channels that cannot be preset automatically (see Presetting channels manually in page 18).
“Program Sorting/Edit”	change the order in which the channels appear on the screen, label the program number, skip the program number and block unwanted programs (see step 3 of the section “Initial Setup” in page 6).

Notes





- If you preset a blocked program number, that program number will be unblocked automatically.
- If you sort a blocked program, that program will remain blocked.

 
continue

continued

Presetting channels manually

1 After selecting “Manual Program”, select the program number to which you want to preset a channel.




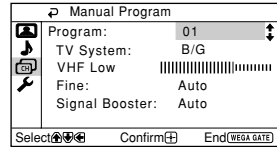

 
- (1) Make sure “Program” is selected, then press .
- (2) Press  or  until the program number you want to preset appears on the menu, then press .



 


 


 



 
2 Select the desired channel.

- (1) Make sure either “VHF Low”, “VHF High” or “UHF” is selected, then press .
- (2) Press  or  until the desired channel’s broadcast appears on the TV screen, then press .

 





3 If the sound of the desired channel is abnormal, select the appropriate TV system.

- (1) Press  or  to select “TV System”, then press .
- (2) Press  or  until the sound becomes normal, then press .

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the “Fine” tuning feature.

- (1) Press  or  to select “Fine”, then press .
 - (2) Press  or  to select “Manual”, then press .
 - (3) Press , ,  or  until the picture and sound quality are optimal, then press .
- The + or – icon on the menu flashes while tuning.


5 If the TV signal is too strong (picture distorted; picture with lines; signal interference) or weak (snowy picture), you may be able to improve the picture quality by setting the “Signal Booster” feature.

 
- (1) Press  or  to select “Signal Booster”, then press .
- (2) Press  or  to select either “Off” (for picture distorted; picture with lines; signal interference) or “Auto” (for snowy picture), then press .

■ Changing the “Setup” setting

The “Setup” menu allows you to adjust settings below.

1 Press WEGA GATE and select “Settings”.

2 Press \uparrow or \downarrow to select the “Setup” icon () , then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$.

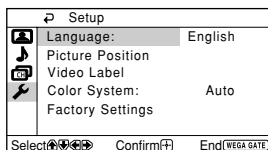


3 Press \uparrow or \downarrow to select the desired item (e.g., “Language”), then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$.


Select	To
“Language”	change the menu language. Press \uparrow or \downarrow to select either “English” or “عربي” (Arabic), then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$.
“Picture Position”	adjust the picture position when it is not aligned with the TV screen. Press \uparrow or \downarrow to select “Picture Rotation” or “Picture V-Position”, then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$. Press \uparrow , \downarrow , \leftarrow or \rightarrow to adjust the picture position, then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$.
“Video Label”	label the connected equipment. (1) Select “Video Input” and press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$. Press \uparrow or \downarrow to select the input you want to label, then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$. (2) Select “Label” and press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$, then press \uparrow or \downarrow to select the label options: “Video 1” / “Video 2” / “DVD”, “VCR”, “SAT”, “Game” or “Edit”*. * You may edit the video label to your favorite name. Press \uparrow or \downarrow to select alphanumeric characters for the label, then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$.
“Color System”	select the color system. Press \uparrow or \downarrow to select either “Auto”, “PAL”, “SECAM”, “NTSC3.58” or “NTSC4.43”, then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$. Normally, set this to “Auto”.
“Factory Settings”	reset your TV to factory settings. Press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$ and press \uparrow or \downarrow to select “Yes”, then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$. To cancel, select “No”, then press $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix} \right]$.

■ Connecting optional components

 Connecting to the video input terminal (→)

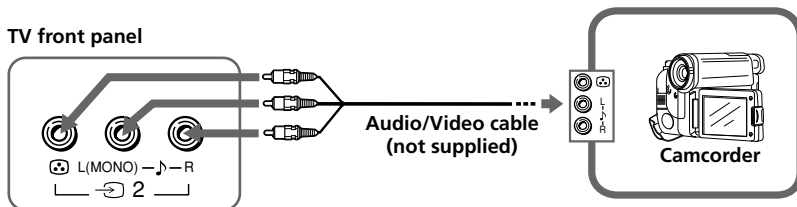

TV rear panel

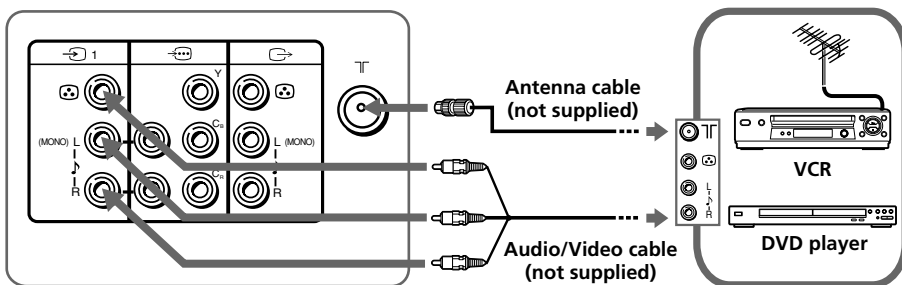 


Note

- If you connect a VCR to T (antenna input), preset the signal output from the VCR to the program number 0 on the TV (see page 18).


Connecting to the monitor output terminal (⇨)

 TV rear panel

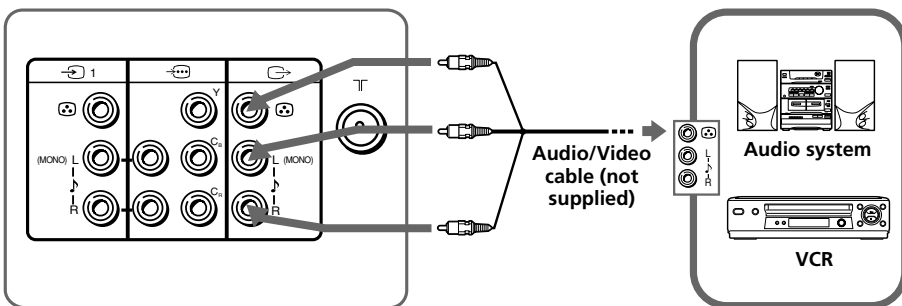



Connecting to the component video input terminal ()

 TV rear panel

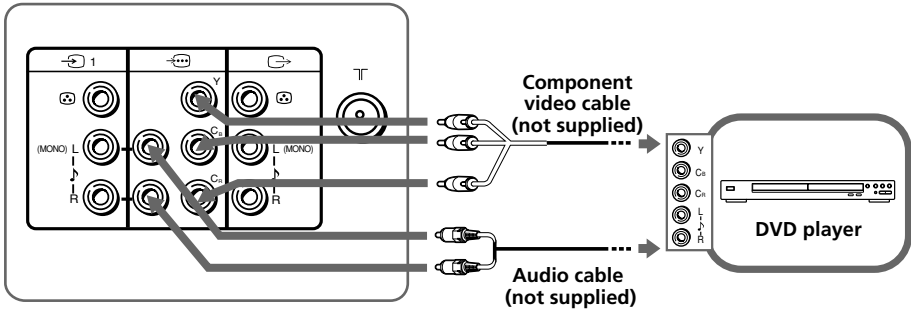

Notes

 - If your DVD player can output interlace and progressive mode signals, select the interlace output when connecting to  (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- The component video terminals on your DVD player are sometimes labeled Y/C_B/C_R, Y/P_B/P_R, Y/C_b/C_r or Y/B-Y/R-Y.
- If you select "DVD" on your TV screen, the signal from the  (monitor output) jacks will not be output properly. This does not indicate a malfunction.

Troubleshooting

If you find any problem while viewing your TV, you can either use the “Factory Settings” function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

“Factory Settings” function

Press the WEGA GATE button. Choose “Settings” and go to “Setup” (🔧) menu. From “Setup” menu, select “Factory Settings”. Then select “Yes” and press (↵). Your TV will go blank for a few seconds, then the “Initial Setup” menu will appear. Your TV will be set to factory settings, but certain problems may be solved.

Symptom	Solutions
Snowy picture, noisy sound	<ul style="list-style-type: none"> • Check the antenna cable and connection on the TV, VCR and at the wall (see page 20). • Check the antenna setup. Contact a Sony dealer for advice. • Display the “Channel Setup” menu and select “Manual Program” to preset the channel again (see page 18). • Display the “Channel Setup” menu and set the “Signal Booster” to “Auto” from “Manual Program” (see page 18). • Try using an external booster.
Distorted picture, noisy sound	<ul style="list-style-type: none"> • Turn off or disconnect the external booster if it is in use. • Display the “Channel Setup” menu and set the “Signal Booster” to “Off” from “Manual Program” (see page 18).
Good picture, noisy sound	<ul style="list-style-type: none"> • Display the “Channel Setup” menu and select the appropriate “TV System” from “Manual Program” (see page 18).
No picture, no sound	<ul style="list-style-type: none"> • Check the power cord, antenna and VCR connections (see page 20). • Press I/⏻ (power) to turn on the TV (see page 9). • Press Ⓛ (main power) on the TV to turn off the TV for about five seconds, then turn it on again (see page 8).
Good picture, no sound	<ul style="list-style-type: none"> • Press ⏮ + to increase the volume level (see page 9). • Press 🔇 to cancel the muting (see page 9).
Dotted lines or stripes	<ul style="list-style-type: none"> • Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.
Double images or “ghosts”	<ul style="list-style-type: none"> • Use a highly directional antenna. • Use the fine tuning (“Fine”) function (see page 18). • Check the antenna setup. Contact a Sony dealer for advice. • Turn off or disconnect the external booster if it is in use.
No color	<ul style="list-style-type: none"> • Display the “Picture” menu and select “Custom” from “Picture Mode”, then adjust the “Color” level from “Picture Adjustment” (see page 15). • Display the “Setup” menu and check the “Color System” setting (usually set this to “Auto”) (see page 19). • Check the antenna setup. Contact a Sony dealer for advice.

Symptom	Solutions
Picture slant	<ul style="list-style-type: none"> • Keep external speakers or other electrical equipment away from the TV. • Display the “Picture Position” under “Setup” menu, then adjust “Picture Rotation” and “Picture V-Position” so that the picture is aligned to the TV screen (see page 19).
Abnormal color patches	<ul style="list-style-type: none"> • Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	<ul style="list-style-type: none"> • Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.
The TV screen sometimes goes blank for slightly longer than usual during channel change.	<ul style="list-style-type: none"> • The “Signal Booster” is functioning to detect a weak signal. This does not indicate a malfunction.
TV cabinet creaks.	<ul style="list-style-type: none"> • Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.
A small “boom” sound is heard when the TV is turned on.	<ul style="list-style-type: none"> • The TV’s demagnetizing function is working. This does not indicate a malfunction.

■ Specifications

	KV-SZ29M80	KV-SZ25M80	Note
Power requirements	110-240 V AC, 50/60 Hz		
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K, M		
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43		
Channel coverage			
B/G	VHF : E2 to E12 /UHF : E21 to E69 / CATV : S01 to S03, S1 to S41		
I	UHF : B21 to B68 /CATV : S01 to S03, S1 to S41		
D/K	VHF : C1 to C12, R1 to R12 / UHF : C13 to C57, R21 to R60 / CATV : S01 to S03, S1 to S41, Z1 to Z39		
M	VHF : A2 to A13 /UHF : A14 to A79 / CATV : A-8 to A-2, A to W+4, W+6 to W+84		
⌚ (Antenna)	75-ohm external terminal		
Audio output (Speaker)	6 W + 6 W		
Number of terminal			
📺 (Video)	Input: 2	Output: 1 Phono jacks; 1 Vp-p, 75 ohms	
🎵 (Audio)	Input: 3	Output: 1 Phono jacks; 500 mVrms	
📺 (Component Video)	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative C _B : 0.7 Vp-p, 75 ohms C _R : 0.7 Vp-p, 75 ohms	
🎧 (Headphone)	Output: 1	Stereo minijack	
Picture tube	29 in.	25 in.	
Tube size (cm)	72	64	Measured diagonally
Screen size (cm)	68	60	Measured diagonally
Dimensions (w/h/d, mm)	774 × 590 × 506	704 × 530 × 506	
Mass (kg)	46	35	

Design and specifications are subject to change without notice.