

Precautions

On safety

 
- Should any solid objects or liquid fall into the CD player, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 4.5 V (external power input) jack.

On power sources

- When you are not using the CD player for a long time, disconnect all power sources from the CD player.

On the AC power adaptor

- Use only the AC power adaptor supplied. If your player is not supplied with an AC power adaptor, use a commercially-available AC power adaptor* (rated output voltage/current: 4.5 V DC/700 mA). Do not use any other AC power adaptor. It may cause a malfunction.



- * The voltage of power supply is different depending on the country. Please buy an AC power adaptor in the country where the product is to be used.
- Depending on the AC power adaptor, noise may be heard while using the system. Refer to the operating instructions of the AC power adaptor.
- Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.

On dry batteries

- Do not throw the batteries into fire.
- Do not carry the batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally contacted by a metallic object.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- When the batteries are not to be used for a long time, remove them.
- If battery leakage occurs, wipe off any deposit in the battery compartment, and install new batteries. In case the deposit adheres to you, wash it off thoroughly.

On the CD player

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.
- Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.
- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

On headphones

Road safety

Do not use headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

To clean the plugs

If the plugs become dirty, there is no audio or noise is heard. Clean them with a dry soft cloth periodically.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

“Hold” appears in the display when you press a button, and the CD does not play.

→ The buttons are locked. Slide HOLD back.

The volume does not increase even if you press VOL + repeatedly.

→ Press and hold SOUND/AVLS until “AVLS” flashes once so that you can cancel the AVLS function.

The CD player does not operate properly.

→ Moisture condensation has occurred. Leave the player aside for several hours until the moisture evaporates.

Even though the file number is displayed, the player skips the file and does not play it.

→ A file with a format that is unplayable on this player is recorded on the CD.

Specifications

System: Compact disc digital audio system

Laser diode properties:

Emission duration: Continuous
Laser output: Less than 44.6 μW (This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

Power requirements:

- Two LR6 (size AA) batteries: 1.5 V DC × 2
- AC power adaptor (DC IN 4.5 V jack): 100 V - 240 V, 50/60 Hz (Model for Mexico)

Dimensions (w/h/d) (without projecting parts and controls):

Approx. 140.0 × 32.7 × 140.0 mm (5 ⁵/₈ × 1 ⁵/₁₆ × 5 ⁵/₈ in.)

Mass (excluding accessories):

Approx. 210 g (7.5 oz.)

Operating temperature:

5°C - 35°C (41°F - 95°F)

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Design and specifications are subject to change without notice.

Supplied accessories

AC power adaptor (1)¹⁾

Headphones (1)

Remote control (1)²⁾

¹⁾ Supplied with D-NE241, E18 and E92 models only.

²⁾ Supplied with D-NE241, E18 and JE models only.

“E18,” “E92” and “JE” are the area code. For the area code of the model you purchased, check the upper left side of the bar code on the package.

SONY®

2-892-695-63(2)

Portable CD Player

Operating Instructions

“WALKMAN”, , and  are registered trademarks of Sony Corporation.

D-NE240
D-NE241

COMPACT
disc
DIGITAL AUDIO


WALKMAN®

©2006 Sony Corporation Printed in China

<http://www.sony.net/>

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.


The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)




This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Applicable Accessories: Headphones, remote control

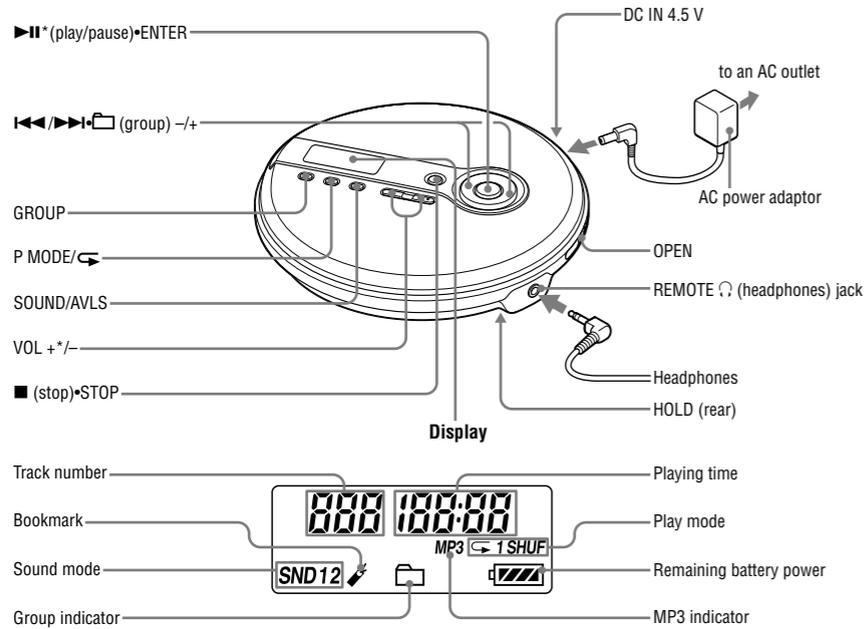

Remote control**

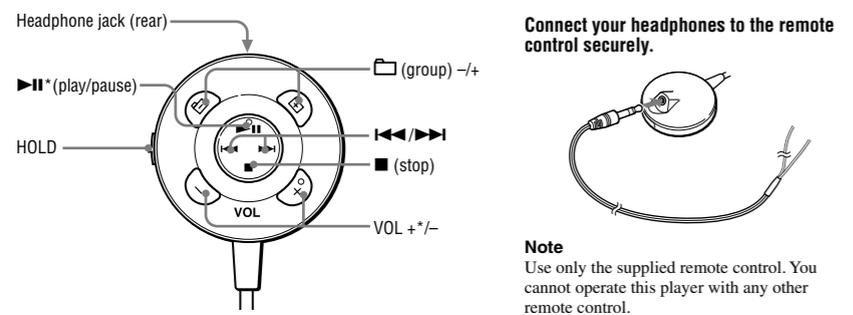

* The button has a tactile dot.
 ** D-NE241, E18 and JE models only.
 "E18" and "JE" are the area code. For the area code of the model you purchased, check the upper left side of the bar code on the package.

Discs Playable on this CD Player


- **Audio CDs** (CD-DA format CDs)
- **MP3 CDs** (CD-R/CD-RW on which audio data compressed in the MP3 format has been recorded)*
 * Only ISO 9660 Level 1/2 and Joliet extension format discs can be played.

Bit rates and sampling frequencies this CD player can play are as follows. Variable Bit Rate (VBR) files can also be played.

	Bit rates	Sampling frequencies
MPEG-1 Layer3	32 kbps – 320 kbps	32/44.1/48 kHz
MPEG-2 Layer3	8 kbps – 160 kbps	16/22.05/24 kHz
MPEG-2.5 Layer3	8 kbps – 160 kbps	8/11.025/12 kHz

- MP3 CDs**
- The usable number of groups and files
 - Maximum number of groups: 256
 - Maximum number of files: 512

Playing order
 The playing order may differ depending on the method used to record MP3 files on the disc. In the following example, files are played in order of ① to ⑧.

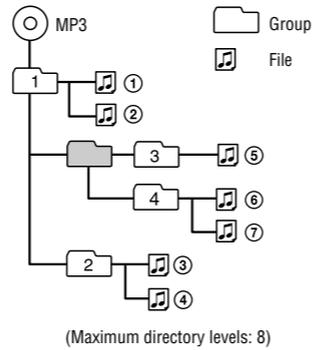

- Notes**
- Depending on the quality of the disc and/or the condition of the recording device, it may take a while for playback to start. It is also possible playback may not start at all.
 - On a disc that has MP3 files, do not save files in other formats and do not make unnecessary folders.
 - Be sure to add the file extension "mp3" to the file name. However, if you add the extension "mp3" to a file other than an MP3 file, the player will not be able to recognize the file properly.
 - To compress a source in an MP3 file, we recommend setting the compression parameters to "44.1 kHz," "128 kbps," and "Constant Bit Rate."
 - To record up to the maximum capacity, set the writing software to "halting of writing."

Power Sources

To use the batteries (not supplied)

- 1 Slide OPEN to open the player lid and open the battery compartment lid inside the CD player.
- 2 Insert two LR6 (size AA) alkaline batteries by matching the ⊕ to the diagram inside the CD player and close the lid until it clicks into place. Insert the ⊖ end first (for both batteries).

Battery life* (approx. hours)

(When the CD player is used on a flat and stable place.)
 Playing time varies depending on how the CD player is used.

When using two Sony alkaline batteries LR6 (SG) (produced in Japan)

G-PROTECTION	G-on	G-off
Audio CD	16	11
MP3 CD (Recorded at 128 kbps)	23	23

- * Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).
- The indicator sections of (battery icon) roughly show the remaining battery power. One section does not always indicate one-fourth of the battery power.

To use the AC power adaptor
 Connect the AC power adaptor as illustrated.

Playing a CD

- 1 Slide OPEN to open the lid and fit the CD to the pivot, then close the lid.
 - 2 Press >>||.
- To play from the first track, press and hold >>|| until playback starts while the CD player is stopped.
 To jump to the succeeding/previous groups*, press GROUP first, then press (group) + or (group) -. (On the remote control: Press (group) + or (group) -.)
 *MP3 CD only
- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.
 - This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.
 - Depending on the CD, this player may display a total number of files that includes both playable and unplayable files. However, because the player skips unplayable files automatically, only the playable ones will be played.

Note on DualDiscs
 A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Digital MEGA BASS function
 During play, press SOUND/AVLS repeatedly to select "SND 1" or "SND 2."
 If the sound is distorted, turn down the volume.

AVLS* function
***Automatic Volume Limiter System**
 Press and hold SOUND/AVLS.
 If "AVLS" flashes three times, the function is enabled. If "AVLS" flashes once, the function is disabled.

AMS* / search function
***Automatic Music Sensor**
 To find the beginning of the previous/current/next succeeding track(s): Press <<<||>>> repeatedly.
 To go backward/forward quickly: Press and hold <<<||>>>.

Play mode function
 During play, press P MODE/ repeatedly:
 No indication (normal play) → (group play)¹⁾ → "1 (single track play)" → "SHUF (shuffle play)" → (group shuffle play)²⁾ → (Bookmark play)
 To repeat the play mode you selected, press and hold P MODE/ until "P" appears.
¹⁾ All files in the selected group are played once. MP3 CD only.
²⁾ All files in the selected group are played once in random order. MP3 CD only.

G-PROTECTION function
 The function provides protection against sound skipping during many active uses.*
 The default setting is "G-on." To select "G-off," press >>|| while you keep pressing >>|| during stop. To enjoy high quality CD sound, select "G-off".
 *Sound may skip: if the CD player receives stronger continuous shock than expected / if a dirty or scratched CD is played / when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.

Bookmark play
 If you add Bookmarks to your favorite tracks, you can listen to these tracks only from the track with the lowest number.
1 During playback of the track where you want to add a Bookmark, press and hold >>|| until (Bookmark) flashes on the display.
2 Repeat step 1 to add Bookmarks to the tracks you want.
3 Press P MODE/ repeatedly until (Bookmark) flashes.
4 Press >>||.

To remove the Bookmarks
 During playback of the track with a Bookmark, press and hold >>|| until (Bookmark) disappears from the display.
 If you change CDs and start playing, all the bookmarks added for the previous CD will be erased.