

This Quick Start Guide will introduce you to the essential procedures for using your VCR. Use the Auto Set Up function to preset all of the receivable channels. Then follow the additional steps in the Operating Instructions to change the programme position to your favourite order.

- 1** Unpacking
- 2** Inserting the batteries
- 3** Connecting the VCR
- 4** Using the Auto Set Up function
- 5** Tuning your TV to the VCR



Dew caution

If the VCR is brought directly from a cold to a warm location, moisture may condense inside the VCR and cause damage to the video head and tape. When you first install the VCR, or when you move it from a cold to a warm location, wait for about three hours before operating the VCR.


1 Unpacking

Check that you have received the following items with the VCR:


- Remote commander
- Aerial cable

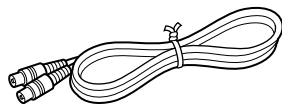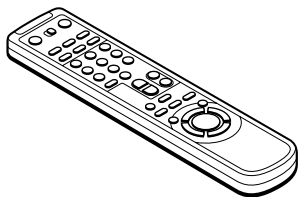

- R6 (size AA)

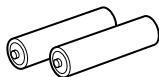


2 Inserting the batteries

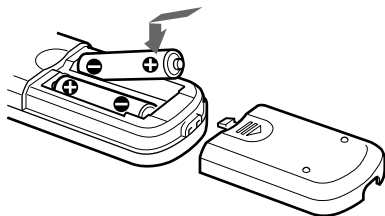


Insert two R6 (size AA) batteries by matching the + and – on the batteries to the diagram inside the battery compartment. Insert the negative (–) end first, then push in and down until the positive (+) end clicks into the position.

3 Connecting the VCR

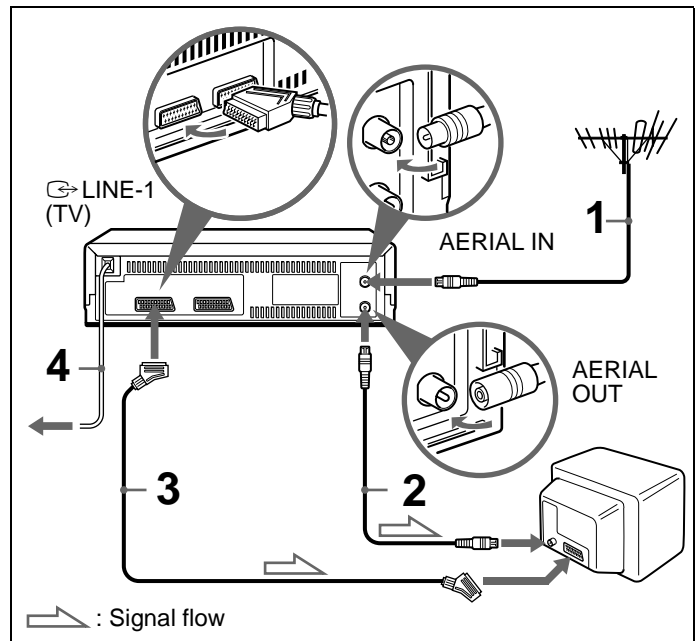

- 1** Connect the aerial to AERIAL IN of the VCR.
- 2** Connect AERIAL OUT to the aerial input of your TV using the supplied aerial cable.
- 3** For better picture and sound, connect LINE-1 (TV) to your TV using a Scart cable if your TV has a Scart (EURO-AV) connector.
- 4** Connect the mains lead to the mains.

4 Using the Auto Set Up function

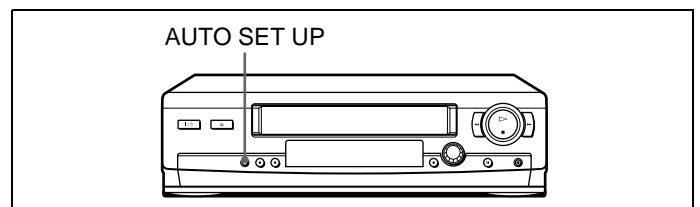

You can preset channels.


Hold down AUTO SET UP for three seconds.

When all of the receivable channels are preset, "SET UP" disappears from the display window. You can rearrange the programme positions to your favourite order (see "Changing/disabling programme positions" in the Operating Instructions).

VCR's display window




5 Tuning your TV to the VCR

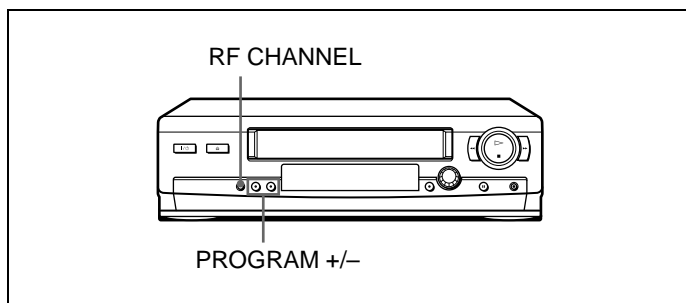

If your TV does not have a Scart (EURO-AV) connector.


- 1 Press RF CHANNEL on the VCR lightly.
- 2 Turn on your TV and select a vacant programme position.
- 3 Tune the TV to the display window's RF channel to show the message below. Refer to your TV's instruction manual for tuning instructions.

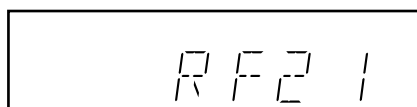

- 4 Press RF CHANNEL.

If your TV has a Scart (EURO-AV) connector.

- 1 Press RF CHANNEL on the VCR lightly.
- 2 Press PROGRAM +/- to set the RF channel to off.

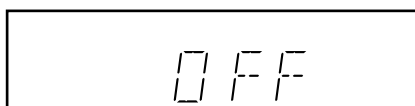

- 3 Press RF CHANNEL.


Now you can operate your VCR.

For details on how to use your VCR, refer to the Operating Instructions.

You can enter your personal code to mark your new VCR for identification. See "Setting your personal code."

Setting your personal code


For security, you can enter a personal code (up to eleven characters), such as your post code. If your VCR is stolen and then recovered, you can identify your VCR using your personal code. Once you enter the code, you can never change it. Please make a note of the code to quote to the police if your VCR is stolen.

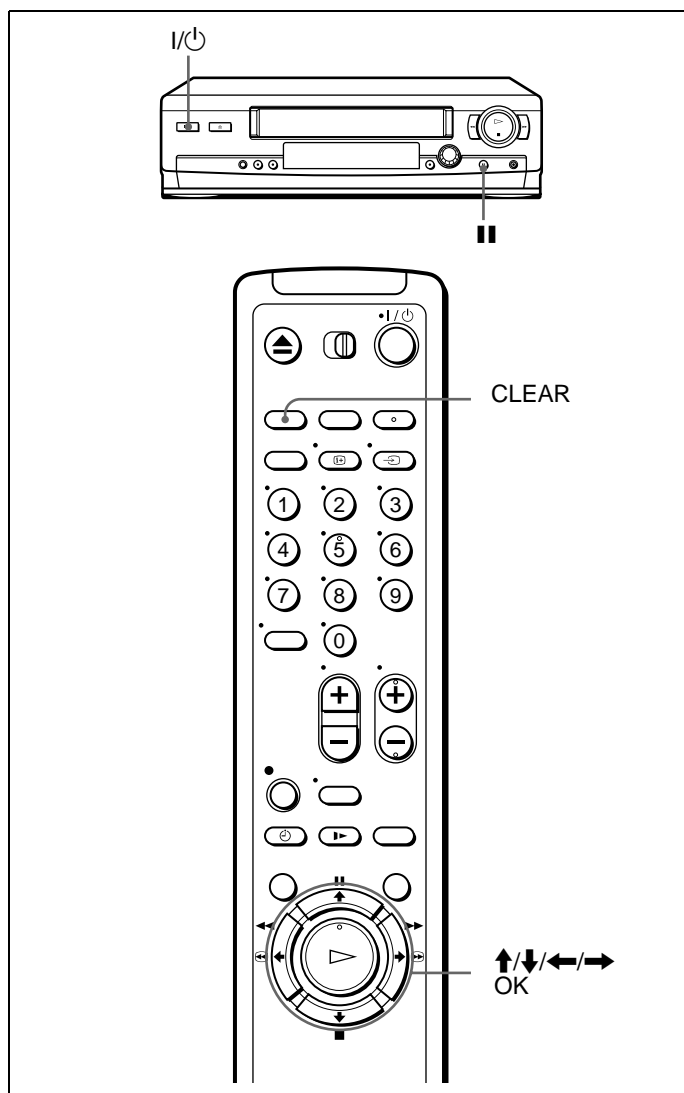

Before you start...


- Turn on your TV and set the TV to the video channel.
- If there is a tape in the VCR, remove it.
- Turn off the VCR.

- 1 Hold down **||** (pause) and **I/⏻** (on/standby) on the VCR simultaneously for three seconds.

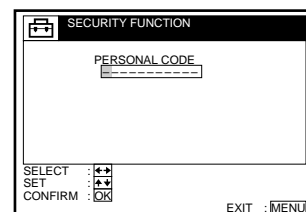

- 2 Enter your personal code.
 - 1 Press **↑/↓** to select a character.
A → B → ... → Z → 0 → 1 → ... → 9 → (blank space) → - (hyphen) → A
 - 2 Press **→** to set the next character.
 - 3 Repeat steps 1 and 2 until you have entered the entire personal code.

- 3 Press OK.

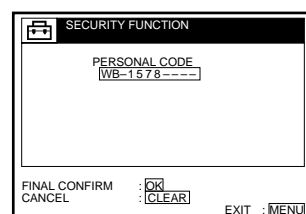

- 4 If the displayed personal code is correct, press OK. If not, press CLEAR and repeat from step 2.