

FM/AM Portable CD Player

Operating Instructions

About the area code

The area code of the location in which you purchased the CD player is shown on upper left of the bar code label on the package.

For accessories supplied with your CD player, check the area code of your model and see "Accessories (supplied/optional)."



D-FJ737

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Don't throw a battery, dispose it as the injurious wastes.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

Table of Contents

Getting started

Locating the controls	4
-----------------------------	---

Playing a CD

1. Connect your CD player.	6
2. Insert a CD.	6
3. Play a CD.	7

Playback options

Playing tracks repeatedly (Repeat play)	10
Playing a single track (Single play)	10
Playing tracks in random order (Shuffle play)	10
Playing tracks in your favorite order (PGM play)	11

Using the Radio

Inserting the battery	12
Listening to the radio	13

Available features

G-PROTECTION function	15
Emphasizing the bass sound (SOUND)	15
Protecting your hearing (AVLS)	16
Locking the controls (HOLD)	16
Turning off the operation beep sound	17

Connecting your CD player

Connecting a stereo system	18
----------------------------------	----

Connecting to a power source

Using the rechargeable batteries	20
Using the dry batteries	22
Using the external battery case	22
Notes on the power source	23

Additional information


Precautions	24
Maintenance	24
Troubleshooting	25
Specifications	27
Accessories (supplied/optional)	29

Getting started


Locating the controls

For details, see pages in parentheses.


CD player (front)

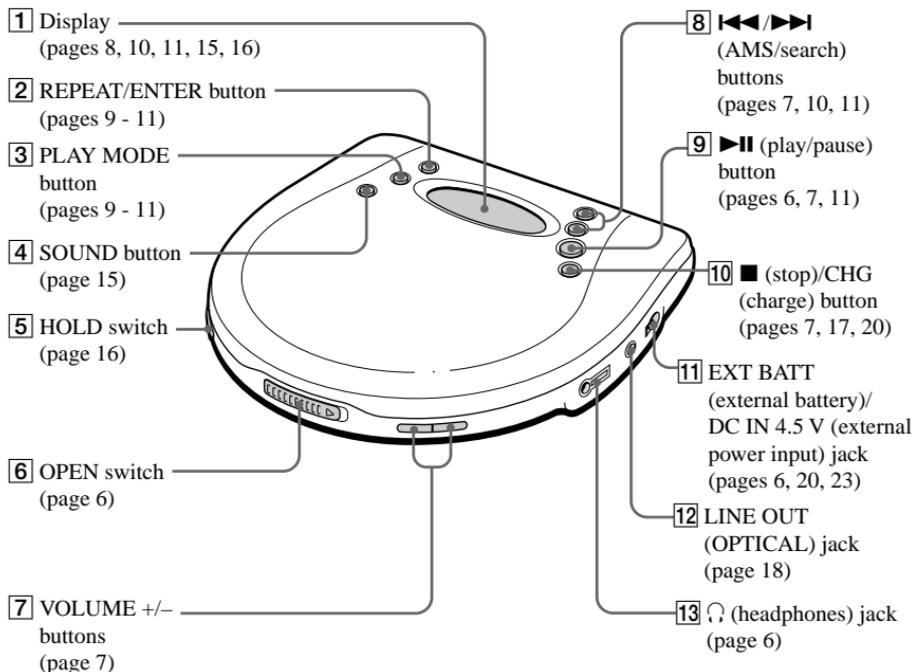

CD player (inside)

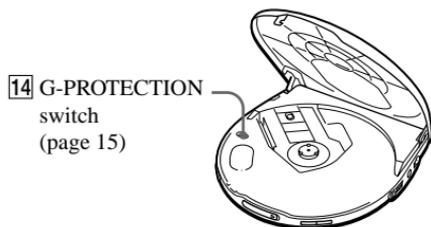


CD player (rear)

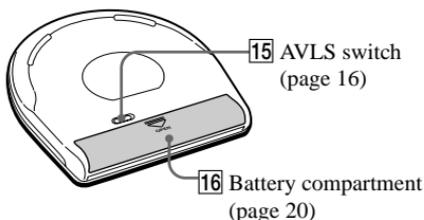

Tuner-remote control


(Front)

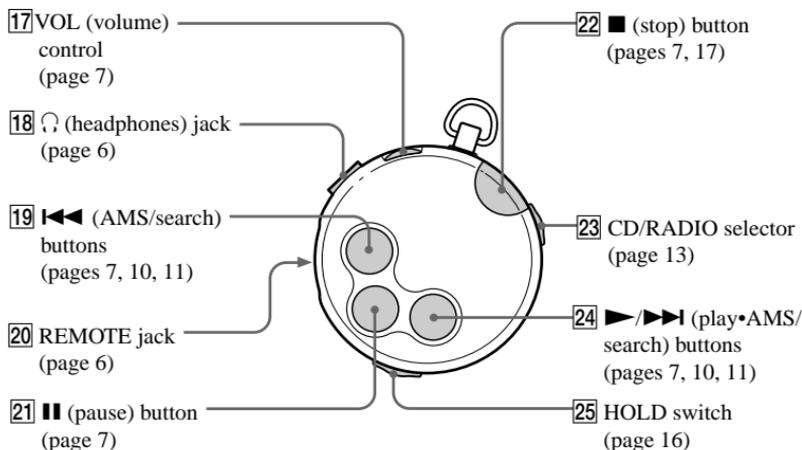

(Rear)

Attaching the strap to the tuner-remote control

To keep the high sensitivity, attach the supplied strap to the remote control and wear it on your belt, etc.

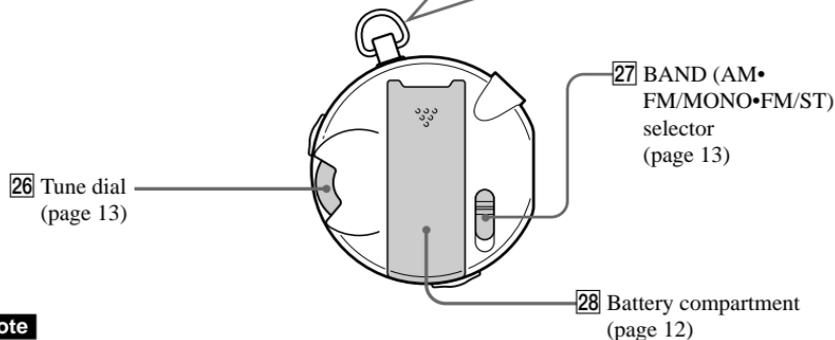**Note**

Use only the supplied remote control. You cannot operate this CD player with the remote control supplied with other CD players.

Playing a CD


You can also use rechargeable batteries and dry batteries as a power source.

1. Connect your CD player.

- 1 Connect the AC power adaptor.
- 2 Connect the headphones/earphones to the tuner-remote control.
- 3 Connect the remote control cord to the CD player and the tuner-remote control.


Notes

- Connect the headphones/earphones to the tuner-remote control securely. Also connect the remote control cord to the CD player and the tuner-remote control securely. A loose connection may cause noise during playback or radio reception.
- Use only the supplied remote control cord. Do not use any other cord.

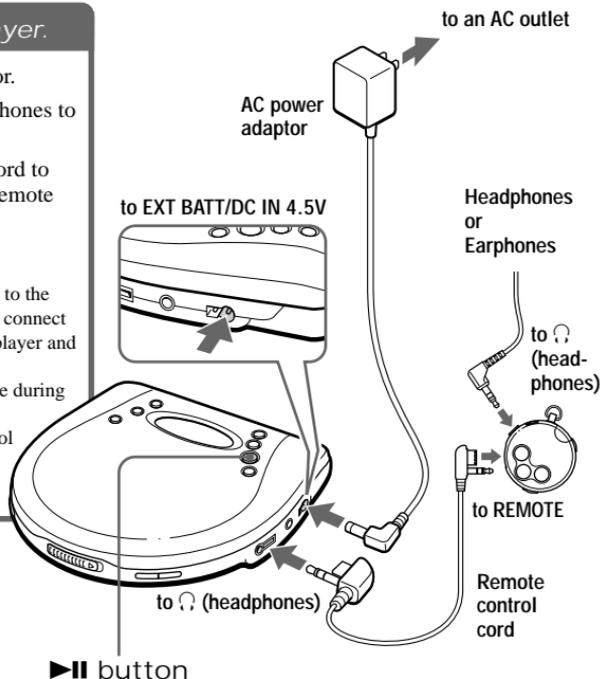


2. Insert a CD.



- 1 Slide OPEN to open the CD player lid.

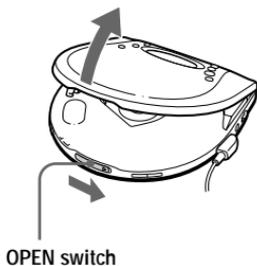

- 2 Place the CD on the tray and close the lid.

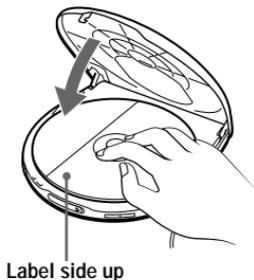

3. Play a CD.

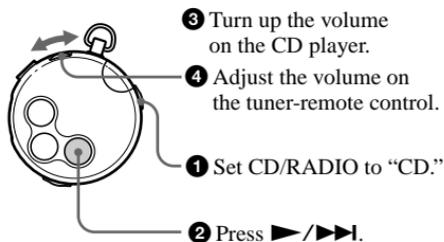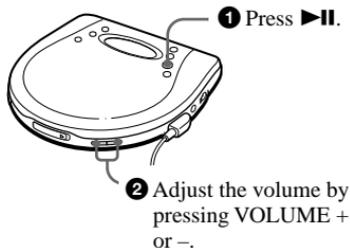

To	Press
Play	▶ (▶/▶▶ for the tuner-remote control)
Pause	▶ (for the tuner-remote control)
Stop	■/CHG (■ for the tuner-remote control)* ²
Find the beginning of the current track (AMS* ¹)	◀◀ once quickly* ²
Find the beginning of the previous tracks (AMS)	◀◀ repeatedly* ²
Find the beginning of the next track (AMS)	▶▶ (▶/▶▶ for the tuner-remote control) once quickly* ²
Find the beginning of the succeeding tracks (AMS)	▶▶ (▶/▶▶ for the tuner-remote control) repeatedly* ²
Go backwards quickly	Hold down ◀◀ * ²
Go forward quickly	Hold down ▶▶ (▶/▶▶ for the tuner-remote control) * ²

*¹ Automatic Music Sensor

*² These operations can be done during both play and pause.

(Continued)

About the display

- When you press ►|| (►/►► for the tuner-remote control) after changing the CD or turning off and on the player, the total number of tracks in the CD and total playing time appear for about two seconds.
- During play, the track number and the elapsed playing time of the current track appear.
- During pause, the elapsed playing time flashes.

If the volume level does not increase

- If AVLS is set to “LIMIT”, set it to “NORM.” For details, see “Protecting your hearing (AVLS).”
- If the headphones are connected to the LINE OUT (OPTICAL) jack, connect them to the  (headphones) jack.

Setting the maximum volume level


- 1 Set VOL (volume) on the tuner-remote control to maximum.
- 2 Adjust the volume on the CD player to the level that you want it to be.
This level becomes the maximum volume for the remote control.

About CD-Rs/CD-RWs

This CD player is compatible with CD-Rs/CD-RWs but playback capability may vary depending on the quality of the disc, the recording device and application software.

Removing the CD

Remove the CD while pressing the pivot in the center of the tray.

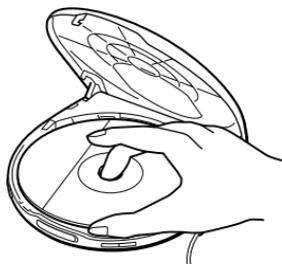

Playback options

You can enjoy various ways of playback using PLAY MODE and REPEAT/ENTER.

PLAY MODE button

Each time you press the button, you can change the playback mode.

No indication
(Normal play)

↓

"1"
(Play a single track)

↓

"SHUF"
(Play tracks in random order)

↓

"PGM"
(Play tracks in your favorite order)


REPEAT/ENTER button

REPEAT

You can repeat play that is selected using PLAY MODE.

ENTER

You can select tracks for PGM play mode.

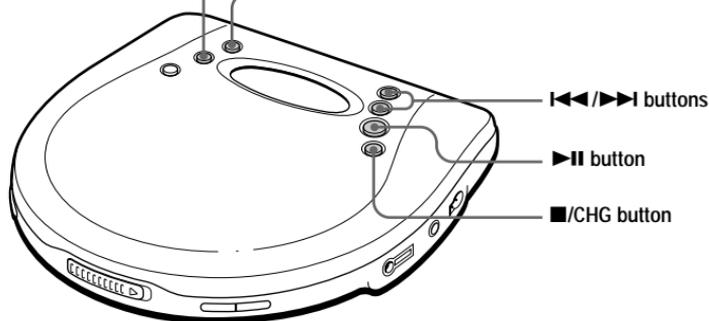

Playing tracks repeatedly (Repeat play)

You can play tracks repeatedly in normal, single, shuffle and PGM play modes.

During playback, press REPEAT/ENTER.



Note on I◀◀/▶▶I

During Repeat play, you can locate the first track after the last track by pressing ▶▶I repeatedly. You can also locate the last track after first track by pressing I◀◀ repeatedly.

Playing a single track (Single play)

During playback, press PLAY MODE repeatedly until "1" appears.



Playing tracks in random order (Shuffle play)

During playback, press PLAY MODE repeatedly until "SHUF" appears.




Playing tracks in your favorite order (PGM play)

You can program the CD player to play up to 64 tracks in your favorite order.

- 1** During playback, press **PLAY MODE** repeatedly until “PGM” appears.



- 2** Press **◀◀** or **▶▶** to select a track.

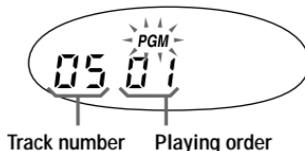

- 3** Press **REPEAT/ENTER** quickly (less than 0.5 second) to enter the selected track.
“00” appears and the playing order increases by one.



- 4** Repeat steps 2 and 3 to select the tracks in your favorite order.

- 5** Press **▶||**, or hold down **REPEAT/ENTER** until play starts.

To check the program

During programming:

Press **REPEAT/ENTER** repeatedly before step 5.

During the PGM play:

Press **PLAY MODE** repeatedly until “PGM” flashes, then press **REPEAT/ENTER**. Each time you press **REPEAT/ENTER**, the track number appears.

Notes

- When you finish entering the 64th track in step 3, the first selected track appears in the display.
- If you select more than 64 tracks, the first selected tracks are erased.

Using the Radio

You can listen to the radio using the tuner-remote control attached to the CD player or using it separately.

When using the tuner-remote control attached to the CD player, you do not need to install the battery in the remote control.

When using the tuner-remote control separately, insert a battery in the remote control.

Inserting the battery

When using the tuner-remote control separately as a radio, insert one R03 (size AAA) battery (not supplied) or LR03 (size AAA) battery (not supplied).

Slide and open the battery compartment lid and insert the battery with correct polarity.




When to replace the battery

Replace the battery when radio reception becomes weak or distorted.

If the battery compartment lid comes off

Attach it as illustrated below.

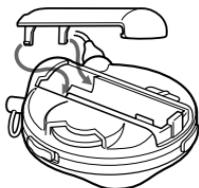

To use the tuner-remote control separately

The tuner-remote control can be used individually as a radio when disconnected from the CD player. In this case, insert a battery in the remote control as described above.


Note

When the tuner-remote control is connected to the CD player, the power will be supplied from the CD player even when a battery is installed in the remote control.

Listening to the radio

You can enjoy FM and AM programs.

- 1 Set CD/RADIO to “RADIO” to turn on the radio.**

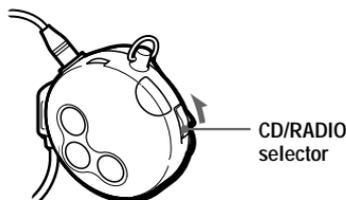


- 2 Slide BAND to select FM or AM.**

When listening to stereo broadcast

Set BAND to FM ST (stereo).

Set it to FM MONO (monaural) when reception is poor.


AM broadcasts are received only in monaural.

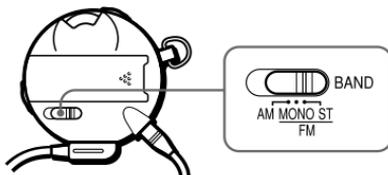

- 3 Turn the tune dial to select a station. Adjust the volume with VOL.**

The radio volume can only be adjusted on the remote control.

Note that the volume cannot be completely turned down.

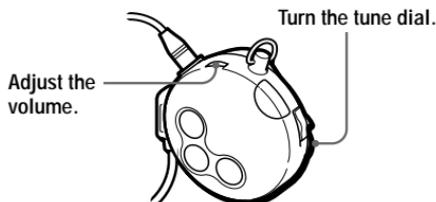

To turn off the radio

Set CD/RADIO to CD.

Notes

- When you do not use the radio, make sure to set the CD/RADIO selector to “CD” to prevent battery exhaustion.
- CD operation is deactivated when CD/RADIO is set to “RADIO.”

To improve reception

For FM, extend the headphones/earphones cord and the remote control cord.



For AM, reorient the tuner-remote control itself.



If noise is heard

- Disconnect the AC power adaptor.
- Reception may become poor if the tuner-remote control is used near other radios, television sets, computers, CD players, etc. Use it away from such devices.

G-PROTECTION function

The G-PROTECTION function has been developed to provide excellent protection against sound skipping during jogging. This function provides a higher level of shock protection than the traditional one.

Set G-PROTECTION (under the lid) to "ON."

G-PROTECTION



While jogging, be sure to hold your CD player with the OPEN switch facing forward.

To turn off the G-PROTECTION function

Set G-PROTECTION to "OFF."

Note

 
Sound may skip:

- if the CD player receives stronger continuous shock than expected,
- if a dirty or scratched CD is played or
- when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.

Emphasizing the bass sound (SOUND)

You can emphasize the bass-boosted sound.

Press SOUND to select "BASS ■■" or "BASS ■■■."



The selected sound mode is displayed.

"BASS ■■■" enhances the bass sound more than "BASS ■■".


Note

If the sound is distorted when using the SOUND function, turn down the volume.

Protecting your hearing (AVLS)

The AVLS (Automatic Volume Limiter System) function keeps down the maximum volume to protect your hearing.

Set AVLS to "LIMIT."

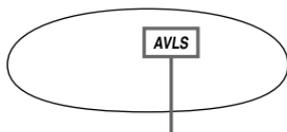

Flashes when the volume is turned up and beyond a certain level.


To turn off the AVLS function

Set AVLS to "NORM."

Locking the controls (HOLD)

You can lock the controls on your CD player to prevent accidental button presses.

Slide HOLD in the direction of the arrow.

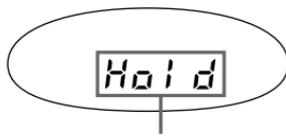

Displayed when the HOLD function is working.

You can use the HOLD function with both the CD player and the tuner-remote control. You can still operate your CD player using the tuner-remote control when HOLD on the tuner-remote control is set to off.

To unlock the controls

Slide HOLD in the opposite direction of the arrow.

Turning off the operation beep sound

You can turn off the beep sound that is heard from your headphones/earphones when you operate your CD player.

-
- 1 Remove the power source (AC power adaptor, rechargeable batteries or dry batteries) from the CD player.**
 - 2 Connect the power source while pressing ■/CHG on the CD player or ■ on the tuner-remote control.**
-


To turn on the beep sound

Remove the power source and then connect the power source without pressing ■/CHG or ■.

Connecting a stereo system

You can listen to CDs through a stereo system and record CDs on a cassette tape and a MiniDisc. For details, see the instruction manual that comes with the connected device.

Be sure to turn off all connected devices before making connections.

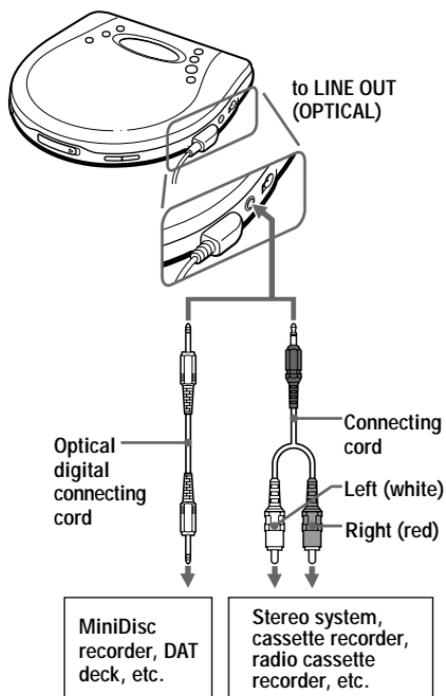

Notes

- Before you play a CD, turn down the volume of the connected device to avoid damaging the connected speakers.
- Use the AC power adaptor for recording. If you use the rechargeable batteries or dry batteries as a power source, batteries may become completely depleted during recording.
- Adjust the volume properly on the connected device so that the sound will not be distorted.

When using the connecting cord

If the sound is distorted, connect the device to the  jack.

When using the optical digital connecting cord

To record a CD on a MiniDisc, DAT, etc., make sure that the CD player is in pause before operating the recording procedures.

About the G-PROTECTION and SOUND functions when using the connecting cord or optical digital connecting cord

- To record high quality CD sound, set the G-PROTECTION switch to "OFF."
- The SOUND function works only on the output sound from the  jack and not work on the output sound from the LINE OUT (OPTICAL) jack.

About Joint Text (CD text copying function)

The Joint Text function allows you to copy the disc and track names that are on a CD containing CD text information. By connecting a Sony MD Walkman (MZ-R900/R909), which supports Joint Text, to this CD player, you can copy the CD text onto an MD during recording. You must use an optical digital connecting cable (POC-15B or other model, not supplied) and the RK-TXT1 CD text connecting cable (not supplied) to make the connections.

For details, refer to the operating instructions of the MD Walkman.

▶ Connecting to a power source

You can use the following power sources:

- Rechargeable batteries
- AC power adaptor (see “Playing a CD”)
- LR6 (size AA) alkaline batteries


For the battery life and charging time of the rechargeable batteries, see “Specifications.”

Using the rechargeable batteries


Charge the rechargeable batteries before using them for the first time. You can use only the following rechargeable batteries for your CD player.

- NC-WMAA
- NH-WM2AA


1 Open the battery compartment lid.

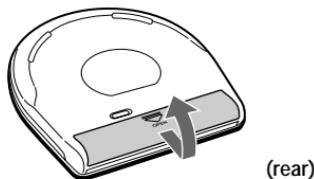

2 Insert two rechargeable batteries by matching the ⊕ to the diagram in the battery compartment and close the lid.

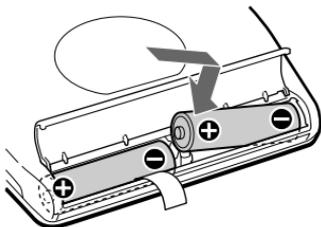

3 Connect the AC power adaptor to the EXT BATT/DC IN 4.5 V jack of your CD player and an AC outlet, then press ■/CHG to start charging.

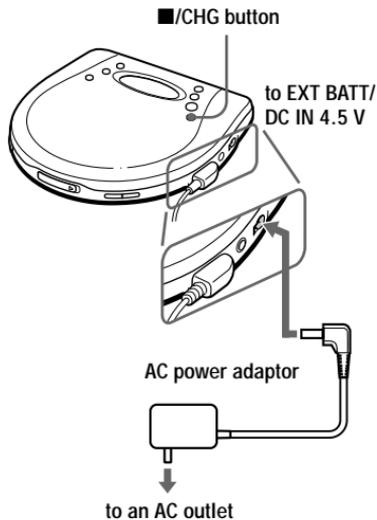


The CD player charges the batteries. The “CHG” indicator turns on in the display, and the indicator sections of  light up in succession. When the batteries are completely charged, the “CHG” and  indicators turn off.

If you press ■/CHG after the charge has already been completed, the  indicator flashes and “Full” appears in the display.

4 Disconnect the AC power adaptor.


To remove the rechargeable batteries

Remove the batteries as illustrated below.

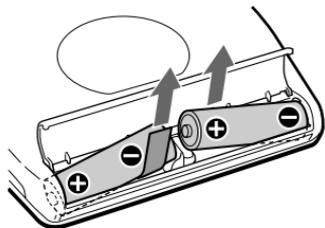

When to charge the rechargeable batteries

You can check the remaining power of the batteries in the display.

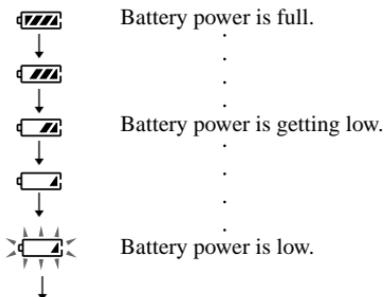

Battery power is full.

Battery power is getting low.

Battery power is low.

Lo batt* Batteries are depleted.

* Beep sounds.

To keep the original battery capacity for a long time, charge the batteries only when they are completely depleted.

Notes

- The indicator sections of  roughly show the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of  may increase or decrease.

When to replace the rechargeable batteries

If the battery life becomes shorter by about half, replace the batteries with new rechargeable batteries.

Note on the rechargeable batteries


If the battery is new or has not been used for a long time, it may not be charged completely until you charge and discharge it several times.

Note on carrying the rechargeable batteries

Use the supplied battery carrying case to prevent unexpected heat. If the rechargeable batteries and the metallic objects are contacted, heat or fire may occur due to a short circuit.

To attach the battery compartment lid

If the battery compartment lid is detached by an accidental drop, excessive force, etc., attach it as illustrated below.

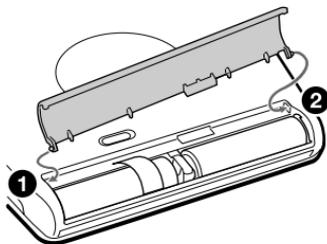

Using the dry batteries

Use only the following dry battery type for your CD player:

- LR6 (size AA) alkaline batteries

Note

Be sure to remove the AC power adaptor when using the dry batteries.

1 Open the battery compartment lid.


2 Insert two LR6 (size AA) batteries by matching the ⊕ to the diagram in the battery compartment.

To remove the batteries

Remove the batteries in the same way as rechargeable batteries.

When to replace the batteries

You can check the remaining power of the batteries in the display.

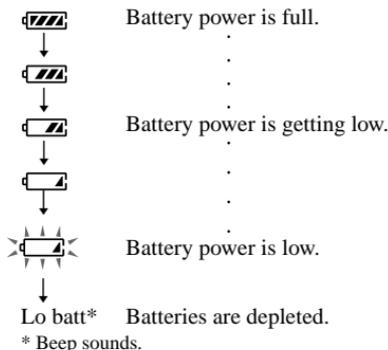

When the batteries are depleted, replace both batteries with new ones.

Using the external battery case


You can extend power by inserting the rechargeable batteries or dry batteries in the CD player and attaching the external battery case.

The batteries in the CD player and external battery case are discharged simultaneously.


Notes

- Be sure to remove the AC power adaptor when attaching the external battery case.
- When using the rechargeable batteries and dry batteries together to extend power, use fully charged rechargeable batteries and new dry batteries.

1 Unlock the cap of the external battery case, and insert two LR6 (size AA) alkaline batteries by matching the ⊕ to the diagram outside the external battery case and close the cap of the external battery case.

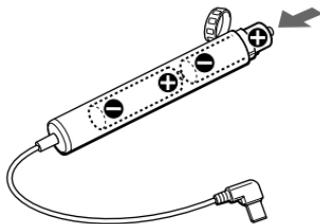

2 Connect the external battery case to the CD player.

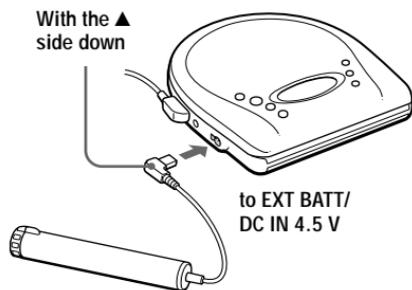

Notes on the power source

Disconnect all power sources when the CD player is not used.

On AC power adaptor

- Use only the AC power adaptor supplied or recommended in “Accessories (supplied/ optional).” Do not use any other AC power adaptor. It may cause a malfunction.

Polarity of the plug



- When disconnecting the AC power adaptor from the AC outlet, grasp the adaptor itself. Do not pull it by the cord.
- Do not touch the AC power adaptor with wet hands.

On rechargeable batteries and dry batteries

- Do not charge the dry batteries.
- Do not throw the batteries into fire.
- Do not carry the batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally contacted by a metallic object.
- Do not mix rechargeable batteries with dry batteries.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- When the batteries are not to be used for a long time, remove them.
- If battery leakage occurs, wipe off any deposit in the battery compartment, and install new batteries. In case the deposit adheres to you, wash it off thoroughly.

Precautions

On safety

- Should any solid objects or liquid fall into the CD player, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 4.5 V (external power input) jack.

On the CD player

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.
- Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.
- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

On handling CDs

- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.



Not these ways

- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzine or thinner.

Troubleshooting

Should any problem persist after you have checked these symptoms, consult your nearest Sony dealer.

CD player

Symptom	Cause and/or corrective actions
The volume does not increase even if you press the VOLUME + button repeatedly.	<ul style="list-style-type: none">→ Set the AVLS switch to "NORM." (page 16)→ The headphones are connected to the LINE OUT (OPTICAL) jack. Connect them to the  (headphones) jack. (page 6)
Cannot adjust the volume.	<ul style="list-style-type: none">→ The headphones are connected to the LINE OUT (OPTICAL) jack. Connect them to the  (headphones) jack. (page 6)→ Turn up the volume on the CD player and then, adjust the volume using the VOL on the tuner-remote control. (page 7)
No sound, or noise is heard.	<ul style="list-style-type: none">→ Connect the plugs firmly. (page 6)→ Plugs are dirty. Clean the plugs with a dry soft cloth periodically.
The playing time is too short when powered with the dry batteries.	<ul style="list-style-type: none">→ Check that you are using alkaline batteries and not manganese batteries. (page 22)→ Replace the batteries with new LR6 (size AA) alkaline batteries. (page 22)
The playing time is too short when powered with the rechargeable batteries.	<ul style="list-style-type: none">→ Charge and discharge the rechargeable batteries several times. (pages 20, 21)
When you press ► , "Lo batt" or "00" appears in the display. The CD does not play.	<ul style="list-style-type: none">→ The rechargeable batteries are used up completely. Charge the batteries. (pages 20, 21)→ Replace the batteries with new LR6 (size AA) alkaline batteries. (page 22)
"Hi dc In" appears in the display.	<ul style="list-style-type: none">→ Use only the AC power adaptor or car battery cord in "Accessories (supplied/optional)." (page 29)→ Remove all power sources, then insert the batteries or connect the AC power adaptor again. (pages 6, 20 - 23)
The CD does not play or "no dISC" appears in the display when a CD is placed in the CD player.	<ul style="list-style-type: none">→ The buttons are locked. Slide the HOLD switch back. (page 16)→ The CD is dirty or defective. (page 24)→ Check that the CD is inserted with the label side up. (page 6)→ Moisture condensation has occurred. Leave the CD player aside for several hours until the moisture evaporates.→ Close the lid of the battery compartment firmly. (page 20)→ Make sure the batteries are inserted correctly. (pages 20 - 23)→ Connect the AC power adaptor to an AC outlet securely. (page 6)→ The CD-R/CD-RW was not finalized. Finalize the CD-R/CD-RW with the recording device.→ There is a problem with the quality of the CD-R/CD-RW, recording device, or application software.

(Continued)

Troubleshooting

Symptom	Cause and/or corrective actions
"Hold" appears in the display when you press a button, and the CD does not play.	→ The buttons are locked. Slide the HOLD switch back. (page 16)
You cannot operate the CD player using the tuner-remote control.	→ The buttons are locked. Slide the HOLD switch back on the tuner-remote control. (page 16) → The CD/RADIO selector on the tuner-remote control is set to "RADIO." Set it to "CD." (page 13) → Check that the remote control cord is connected to the CD player and the tuner-remote control securely.
During recording with optical digital connection, the track number cannot be recorded correctly.	→ Record the track number again using the MiniDisc recorder, DAT recorder, etc. (page 18) → See the instruction manual that comes with the recording device. (page 18)
The CD player does not start charging.	→ During stop, press ■/CHG. (page 20)
Playback starts from the point you stopped. (resume function)	→ The resume function is working. To start playing from the first track, press ► until the play of the first track starts, or open the lid of the CD player. Or remove all power sources, then insert the batteries or connect the AC power adaptor again. (pages 6, 20 - 23)

Radio

Symptom	Cause and/or corrective actions
Cannot operate the radio.	→ The CD/RADIO selector on the tuner-remote control is set to "CD." Set it to "RADIO." (page 13)
Inserted a new battery into the tuner-remote control but cannot operate your CD player.	→ The tuner-remote control is connected to your CD player and weak batteries are in the battery compartment of the CD player. When you want to use the tuner-remote control separately, disconnect it from the CD player. When you want to use the tuner-remote control connected to the CD player, replace the batteries in the CD player with new LR6 (size AA) alkaline batteries. (page 22)
When using the tuner-remote control separately, you cannot adjust the volume with the VOL control.	→ The plug of the headphones/earphones is connected to the REMOTE jack of the tuner-remote control. Connect it to the ◡ (headphones) jack. (page 6)
When listening to the radio, noise is heard.	→ Disconnect the AC power adaptor or the car battery cord from the CD player. → Use the tuner-remote control away from the CD player. → Reorient the tuner-remote control. → Do not use the radio in the buildings or the area where the noise is often heard.
CD sound and radio sound are heard at the same time.	→ Set the CD/RADIO selector on the tuner-remote control to "CD." Reset it to "RADIO" or "CD."

Specifications

System

Compact disc digital audio system

Laser diode properties

Material: GaAlAs

Wavelength: $\lambda = 780 \text{ nm}$

Emission duration: Continuous

Laser output: Less than $44.6 \mu\text{W}$

(This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

D-A conversion

1-bit quartz time-axis control

Frequency response

20 - 20 000 Hz $_{-2}^{+1}$ dB (measured by JEITA CP-307)

Output (at 4.5 V input level)

Line output (stereo minijack)

Output level 0.7 V rms at 47 k Ω

Recommended load impedance over 10 k Ω

Headphones (stereo minijack)

Approx. 5 mW + Approx. 5 mW at 16 Ω

Optical digital output (optical output connector)

Output level: $-21 - -15 \text{ dBm}$

Wavelength: 630 - 690 nm at peak level

Frequency range (tuner-remote control)

FM: 87.5 - 108.0 MHz

AM: 531 - 1 602 kHz

Power requirements

For the area code of the model you purchased, check the upper left side of the bar code on the package.

CD player:

- Two Sony NC-WMAA rechargeable batteries: 2.4 V DC
 - Sony NH-WM2AA rechargeable batteries: 2.4 V DC
 - Two LR6 (size AA) batteries: 3 V DC
 - AC power adaptor (DC IN 4.5 V jack):
U2/U/CA2/E92/MX2/TW2/BR3 model: 120 V, 60 Hz
CED/CET/CEW/CEX/CE7/EE/EE1/E13/G5/G6/G7/G8/BR1 model: 220 - 230 V, 50/60 Hz
CEK/3CE7 model: 230 - 240 V, 50 Hz
AU2 model: 240 V, 50 Hz
JE.W/E33/EA3/KR4 model: 100 - 240 V, 50/60 Hz
HK2 model: 220 V, 50/60 Hz
AR1/CN2 model: 220 V, 50 Hz
- Tuner-remote control (when used separately):
- One R03 (size AAA) battery: 1.5 V DC

Battery life* (approx. hours)

(When you use the CD player on a flat and stable surface.)

Playing time varies depending on how the CD player is used.

When using	G-PROTECTION function	
	on	off
Two NC-WMAA (charged for about 3 hours**)	8	10
NH-WM2AA (charged for about 5 hours**)	20	22
Two Sony alkaline batteries LR6(SG)	35	38
Four Sony alkaline batteries LR6(SG)	82	86
Two rechargeable batteries NC-WMAA and two Sony alkaline batteries LR6(SG)	44	50
Rechargeable batteries NH-WM2AA and two Sony alkaline batteries LR6(SG)	54	64

Tuner-remote control

Sony alkaline battery LR03 (SG)	25
Sony manganese battery R03 (SB)	10

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).

** Charging time varies depending on how the rechargeable battery is used.

Operating temperature

5°C - 35°C (41°F - 95°F)

Dimensions (w/h/d) (excluding projecting parts and controls)

CD player:

Approx. 131.6 × 25.5 × 140.9 mm

Tuner-remote control:

Approx. 53 × 60 × 22.5 mm

Mass

CD player (excluding rechargeable batteries):

Approx. 193 g

Tuner-remote control (excluding a battery):

Approx. 30 g

Design and specifications are subject to change without notice.

Accessories (supplied/optional)

Supplied accessories

For the area code of the location in which you purchased the CD player, check the upper left side of the bar code on the package.

- AC power adaptor (1)
- Headphones/earphones with tuner-remote control (1)
- Remote control cord (1)
- Strap for the tuner-remote control (1)
- Rechargeable batteries (2)
- Battery carrying case (1)
- Carrying pouch (1)
- External battery case (1)

Optional accessories


AC power adaptor	AC-E45HG
Active speaker system	SRS-Z1 SRS-Z500
Car battery cord	DCC-E345
Car battery cord with car connecting pack	DCC-E34CP
Car connecting pack	CPA-9C
Connecting cord	RK-G129 RK-G136
Optical digital connecting cord	POC-15B POC-15AB
CD text connecting cable	RK-TXT1
Rechargeable battery	NH-WM2AA
Earphones	MDR-E848LP MDR-EX70LP
Headphones	MDR-A44L MDR-A110LP

When connecting optional headphones/earphones to the supplied remote control

Use only headphones with stereo mini plugs. You cannot use headphones with micro plugs.



 Stereo miniplug



Micro plug

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information about the accessories in your country.

<http://www.world.sony.com/>

Sony Corporation