

# Microcassette™ Corder




Operating Instructions  
Manual de instrucciones

## M-100MC

©1998 Sony Corporation Printed in China

<http://www.sony.net/>

### A

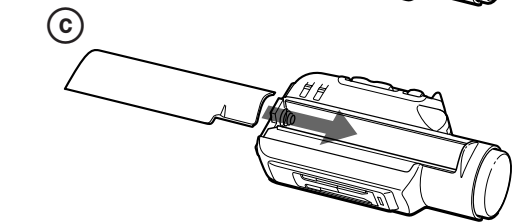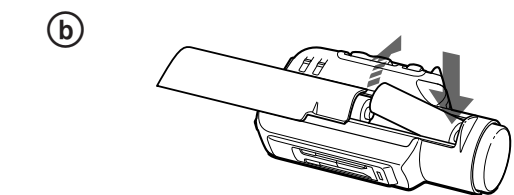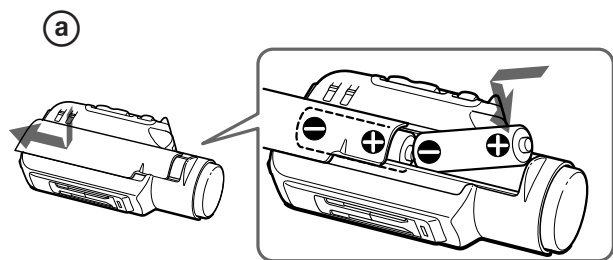

**(d)**

When batteries are new  
Si las pilas son nuevas

light  
se ilumina

go off  
se apaga

Replace batteries  
Sustituya las pilas

go off  
se apaga








flash  
parpadea

to the wall outlet  
a la toma de alimentación


DC IN 3V

AC power adaptor (not supplied)  
Adaptador de CA (no suministrado)


### B

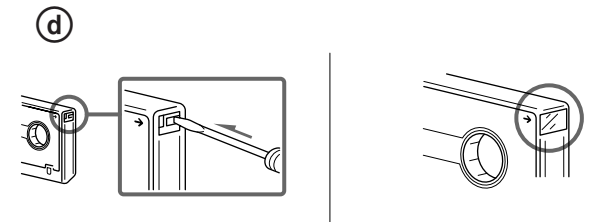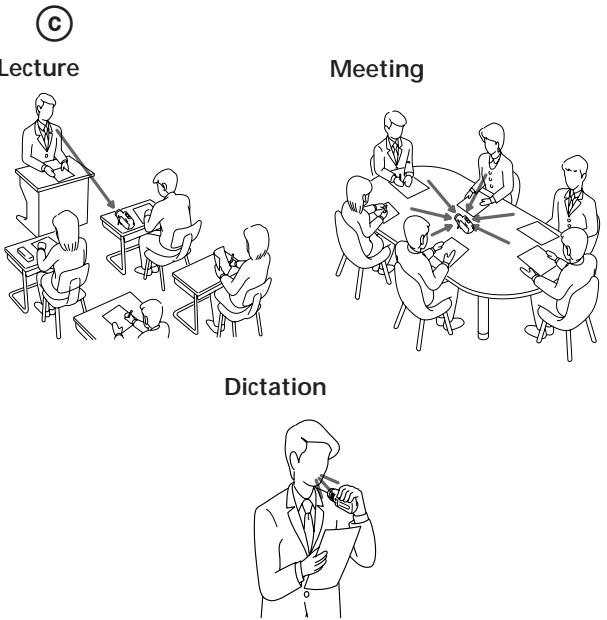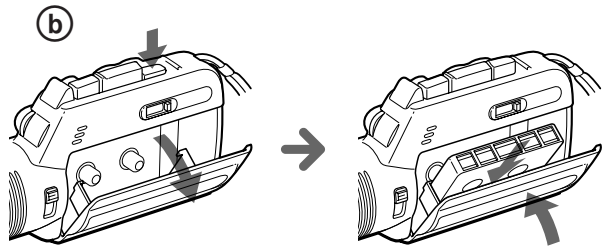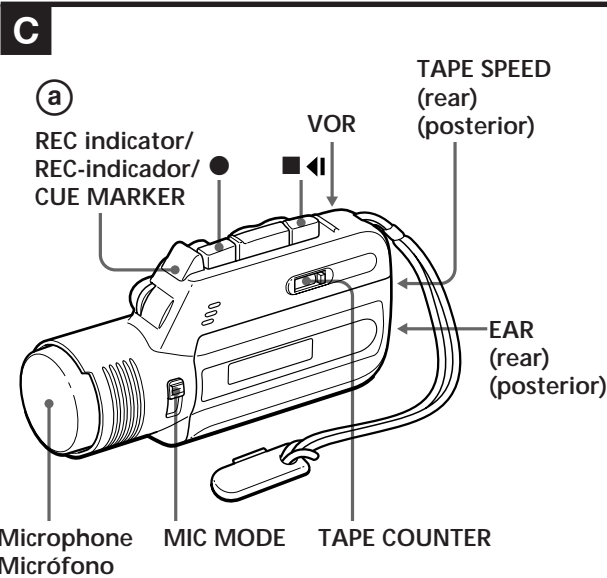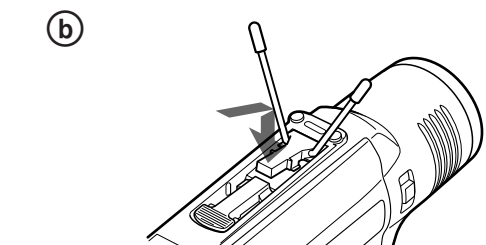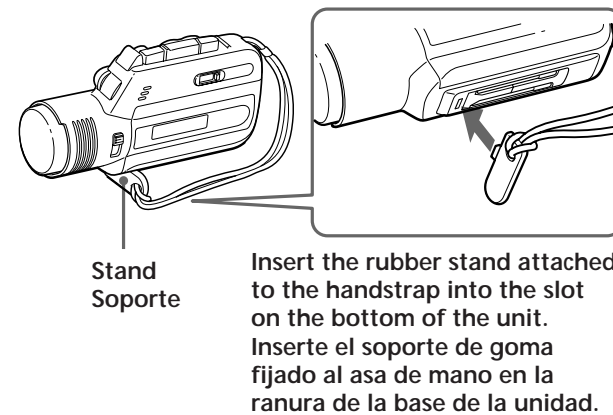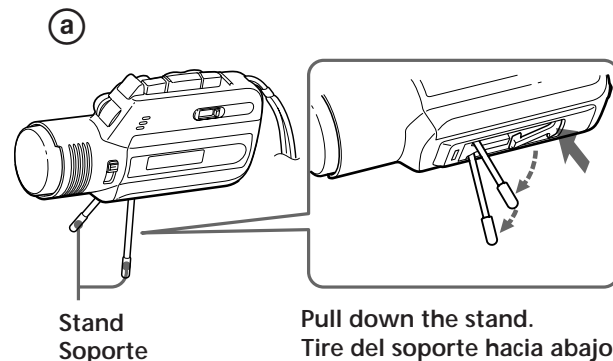


### D

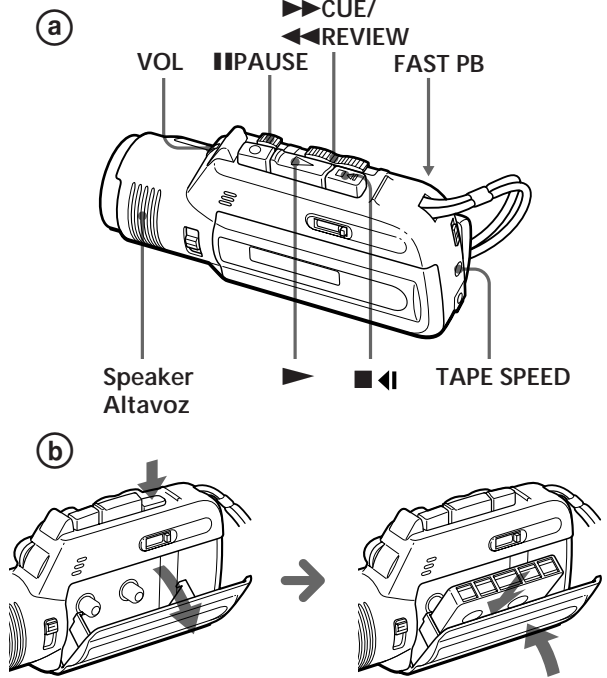

### E

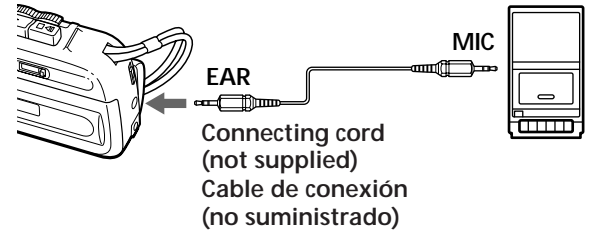

### F

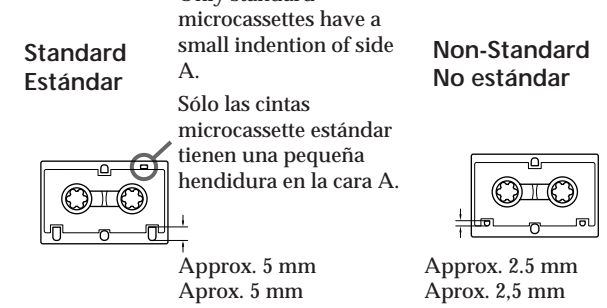

### G

