

TV Stand

SU-ES29G/ES34G

Instructions


This TV stand is designed to hold the Sony KV-ES29/ES34 color TV on top, and a VCR or other equipment inside.

Instructions

This TV stand is designed to hold the Sony KV-ES29/ES34 color TV on top, and a VCR or other equipment inside.

Instructions

This TV stand is designed to hold the Sony KV-ES29/ES34 color TV on top, and a VCR or other equipment inside.

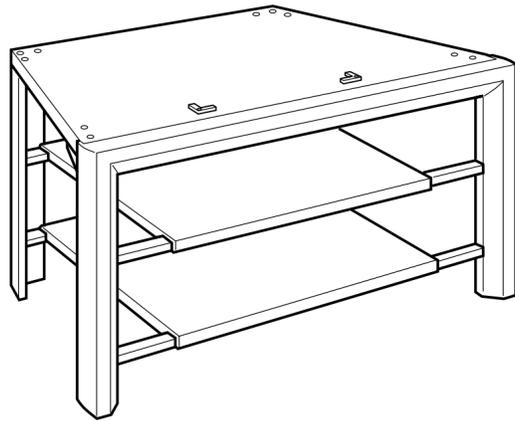


Sony Corporation © 1999 Printed in Japan


Specifications Spec Spec

SU-ES29G


Dimensions Unit: mm
Weight: 16.5 kg

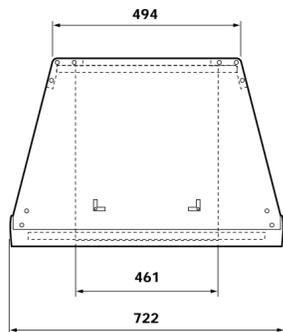

Dimensions Unit: mm
Weight: 16.5 kg

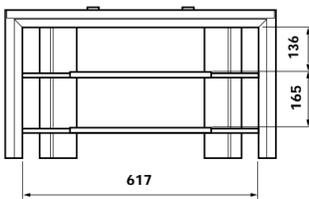


Dimensions Unit: mm
Weight: 16.5 kg

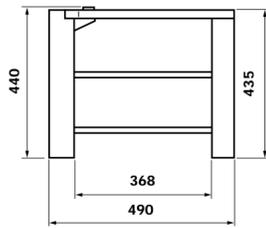


SU-ES34G


Dimensions Unit: mm
Weight: 22.9 kg

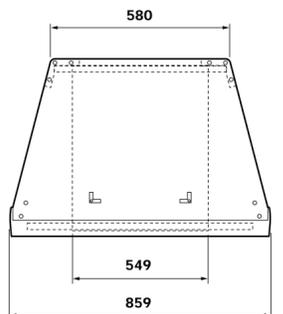

Dimensions Unit: mm
Weight: 22.9 kg

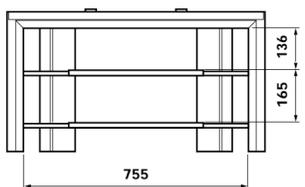

Dimensions Unit: mm
Weight: 22.9 kg

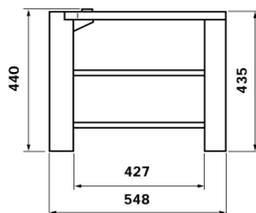


Design and specifications are subject to change without notice.

Design and specifications are subject to change without notice.

Design and specifications are subject to change without notice.

Note on carrying capacity Note on carrying capacity Note on carrying capacity

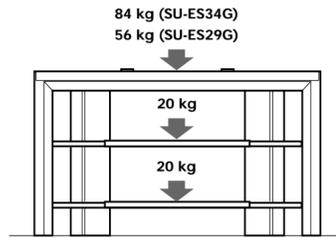


Do not place any equipment which exceeds the maximum weight for each divider as indicated in the illustration. Otherwise, the divider may break.

Do not place any equipment which exceeds the maximum weight for each divider as indicated in the illustration. Otherwise, the divider may break.

Do not place any equipment which exceeds the maximum weight for each divider as indicated in the illustration. Otherwise, the divider may break.

Installing the TV Installing the TV

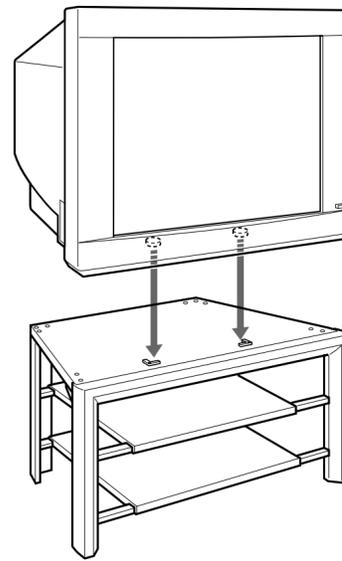

Notes

- Place the TV in the correct position.
- Do not put the TV legs on the stoppers.
- Do not put the TV power cord between the top board and the TV legs. If you do so, the cord may be damaged and it may cause an electric shock or fire.


Notes

- Place the TV in the correct position.
- Do not put the TV legs on the stoppers.
- Do not put the TV power cord between the top board and the TV legs. If you do so, the cord may be damaged and it may cause an electric shock or fire.

Notes

- Place the TV in the correct position.
- Do not put the TV legs on the stoppers.
- Do not put the TV power cord between the top board and the TV legs. If you do so, the cord may be damaged and it may cause an electric shock or fire.

Preventing the TV from tipping Preventing the TV from tipping Preventing the TV from tipping

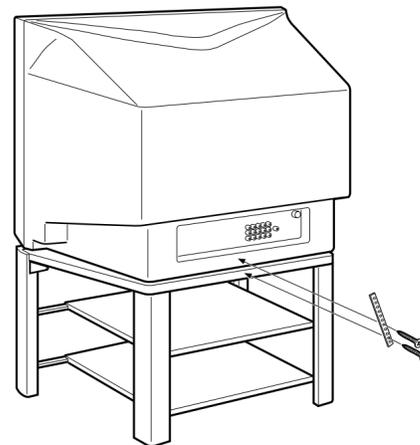

Use the hold band to prevent the TV from tipping or falling off the TV stand.

 
 
Use the hold band to prevent the TV from tipping or falling off the TV stand.


Use the hold band to prevent the TV from tipping or falling off the TV stand.

Notes on use Notes on use Notes on

- Do not place the stand in a location near a heat source, such as a radiator, or in a place subject to direct sunlight.
- Clean the stand periodically with a soft cloth. If fingerprints, food and beverage stains, etc., are difficult to remove, use a cloth moistened with a mild detergent solution. Do not use scouring powder, an abrasive pad, or a solvent.
- Do not place the stand in a location near a heat source, such as a radiator, or in a place subject to direct sunlight.
- Clean the stand periodically with a soft cloth. If fingerprints, food and beverage stains, etc., are difficult to remove, use a cloth moistened with a mild detergent solution. Do not use scouring powder, an abrasive pad, or a solvent.
- Do not place the stand in a location near a heat source, such as a radiator, or in a place subject to direct sunlight.
- Clean the stand periodically with a soft cloth. If fingerprints, food and beverage stains, etc., are difficult to remove, use a cloth moistened with a mild detergent solution. Do not use scouring powder, an abrasive pad, or a solvent.

Parts list Parts list Parts list

Symbol Symbol Symbol	Parts name Parts name Parts name		
(A)	Stays A Stays A Stays A		× 4
(B)	Stay B (front stay) Stay B (front stay) Stay B (front stay)		× 1
(C)	Stay C (rear stay) Stay C (rear stay) Stay C (rear stay)		× 1
(D)	Screws Screws Screws		× 8

 Symbol Symbol Symbol	Parts name Parts name Parts name		
(E)	Top board Top board Top board		× 1
(F)	Screws (large) Screws (large) Screws (large)		× 2
(G)	Screws (small) Screws (small) Screws (small)		× 8
(H)	Dividers Dividers Dividers		× 2




Assembling the TV stand Assembling the TV stand Assembling the TV stand

- 1** Attach the stays A (A) to the stay B (B) and the stay C (C).
Attach the stays A (A) to the stay B (B) and the stay C (C).
Attach the stays A (A) to the stay B (B) and the stay C (C).


- ① Attach the lower stays A (A) as shown below, and screw the screws (D) in loosely.
- ① Attach the lower stays A (A) as shown below, and screw the screws (D) in loosely.
- ① Attach the lower stays A (A) as shown below, and screw the screws (D) in loosely.

- ② Attach the upper stays A, and screw the screws (D) in loosely.
- ② Attach the upper stays A, and screw the screws (D) in loosely.
- ② Attach the upper stays A, and screw the screws (D) in loosely.

- ③ Tighten all the screws (D).
- ③ Tighten all the screws (D).
- ③ Tighten all the screws (D).

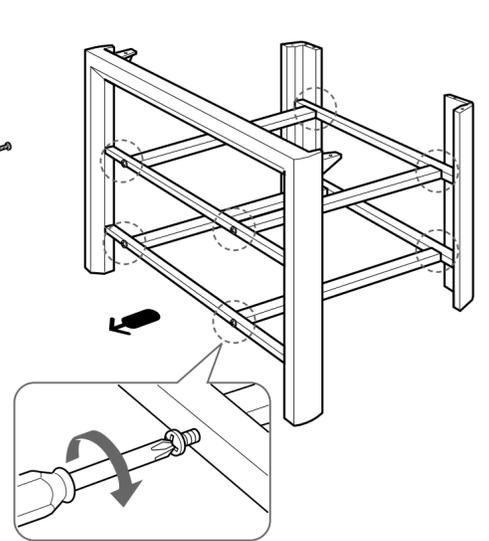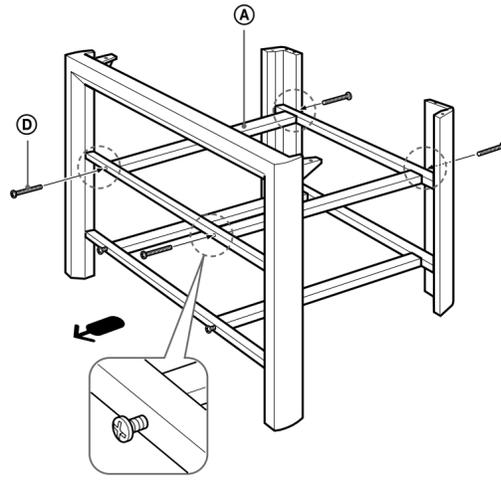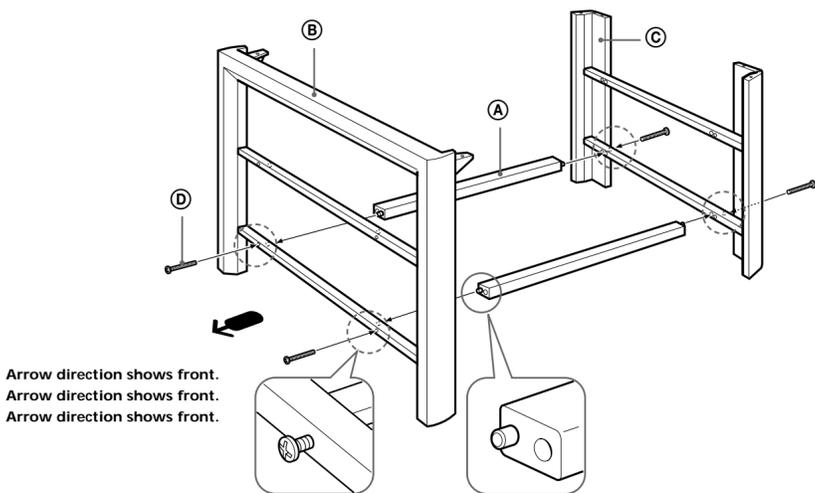

- 2** Attach the Top board (E).
Attach the Top board (E).
Attach the Top board (E).

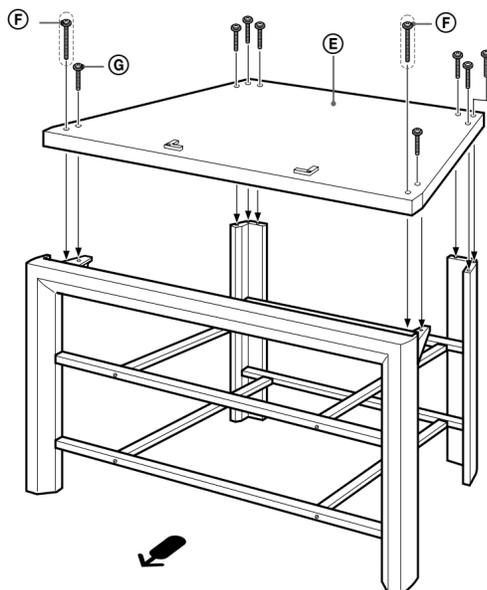

- 3** Attach the Dividers (H).
Attach the Dividers (H).
Attach the Dividers (H).

Note
Place the dividers properly into the grooves, otherwise they will bend.

Note
Place the dividers properly into the grooves, otherwise they will bend.

Note
Place the dividers properly into the grooves, otherwise they will bend.

