

Thank you for purchasing this Sony product.

After following this step by step guide you will be able to:

Insert Batteries into the Remote Control.

Connect the AC Cable, Aerial and VCR to your TV.

Select the language of the menu screens.


Select the country in which you wish to operate the set.

Tune your TV.


Change the broadcast channels into a different order.

View TV Programmes.

One Remote Control (RM-932):

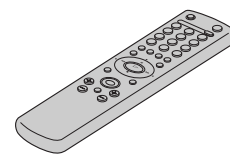

One coaxial cable:

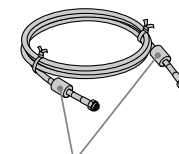

Do not remove ferrite cores.

One AC Cable (Type C):



Do not remove ferrite cores.

⚠ Use this AC cable (with safety earth) if you use the set outside the United Kingdom.

Two batteries (R6 Type):



 
Two Brackets:



One Cleaning cloth:



One AC Cable (Type BF):




Do not remove ferrite cores.


⚠ Use this AC cable (with safety earth) if you use the set in the United Kingdom.  
• See "NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM" on page 2 of the instruction manual when using the cable.  
• This cable may not be supplied depending on the country.

## Inserting Batteries into the Remote Control

⚠ Make sure you insert the supplied batteries using the correct polarity. Always remember to dispose of used batteries in an environmentally friendly way.

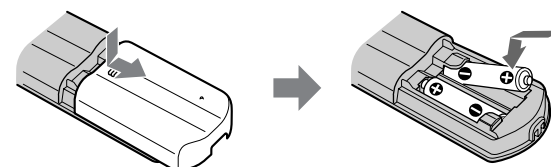

- Use the supplied AC cable (type BF, with safety earth).
- Use the supplied coaxial cable for aerial connection.
- Other connecting cables are not supplied.

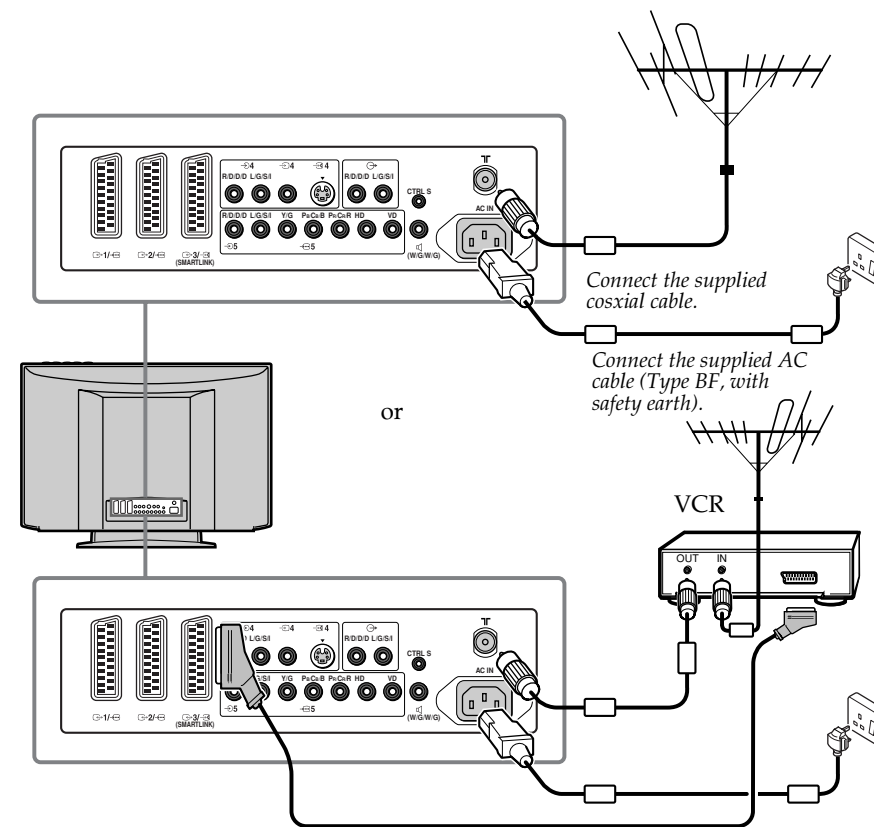


- The Scart lead is optional, however if you use a Scart lead to connect your VCR it can improve picture and sound quality when using it.
- For more details of VCR connection, please refer to the section "Connecting Optional Equipment" on page 28 of the instruction manual.
- ⚠ If you do not have a Scart lead, after automatically tuning the TV, tune in the VCR test signal to the TV programme number "0" by using the "Manual Programme Preset" option. (for details of how to manually programme these presets, see page 22, step A of the instruction manual). Refer to your VCR instruction manual to find out how to find the output channel of your VCR.

Attach the supplied bracket to the rear of the TV, and pass a sturdy cord or chain through it to attach it to a wall or pillar. Consult your dealer when attaching the bracket, since the screws for the bracket also hold the rear cabinet in a place.


1 Remove one of the screws attached at the rear of the TV.

⚠ Do not remove both screws at the same time as these screws secure the rear cabinet. Never use the TV with the screws removed.

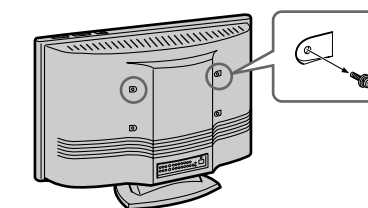


2 Attach the supplied bracket with the screw.

⚠ Be sure to use the screw that attaches the rear cabinet. A different screw may damage the TV and result in electric shock.

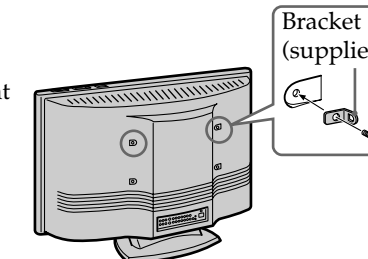


3 Repeat steps 1 and 2 to attach the other bracket.

4 Attach a sturdy cord or chain securely to each bracket on the rear of the TV.

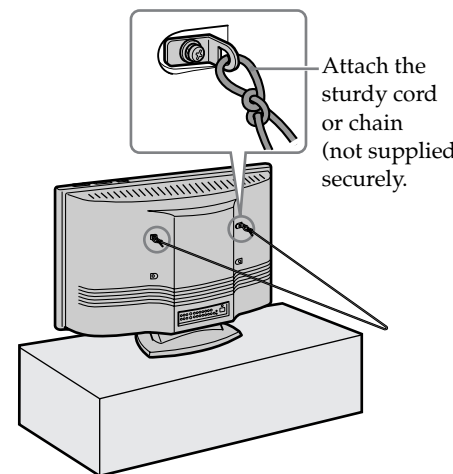

5 Fix the cord or chain to a wall or pillar. Side view

Rear view

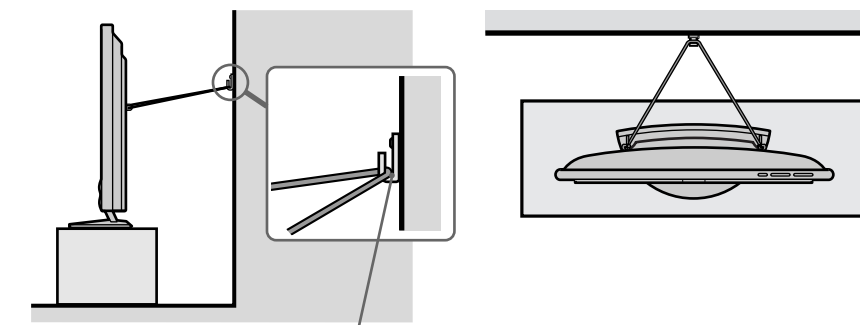

Screw a hook (not supplied) to the wall or pillar securely.

## Switching on the set

# 5

## Automatically Tune the TV

You need to tune the TV to receive channels (TV Broadcast).


By following the instructions below, this set automatically searches and stores all available channels for you.

# 7

## Changing the Programme Order of the broadcast channels

By following the instructions below, you can rearrange the order in which the broadcast channels appear on the screen

# 8

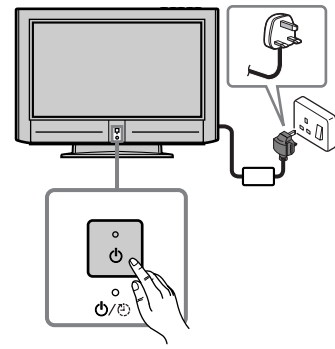


1 Connect the plug to the mains socket (220-240V AC, 50Hz).

2 Press the **Power** switch on the TV set to turn on the TV.

## Selecting the language of the menu screens and the country

This TV set works with menu screens. By following the instructions below, you can select the desired language of the menu screens and the country in which you wish to operate the TV set.


# 6

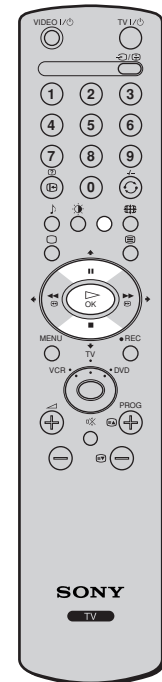

The first time you press the **Power** switch, a **Language** menu displays automatically on the TV screen.




1 Press the **Down** or **Up** button on the remote control to select the language, then press the **OK** button to confirm your selection. From now on all the menus will appear in the selected language.





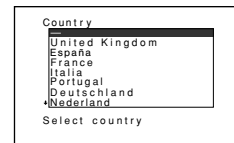


2 The **Country** menu appears automatically on the TV screen. Press the **Down** or **Up** button to select the country in which you will operate the TV set, then press the **OK** button to confirm your selection.

- If the country in which you want to use the TV set does not appear in the list, select “-” instead of a country.
- In case of changing the country selection (including “-”), the next procedure of Auto Tuning always should be done after that.

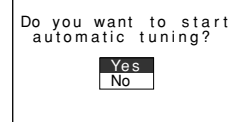

The **Auto Tuning** menu appears on the TV screen.

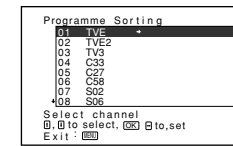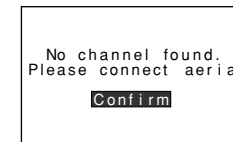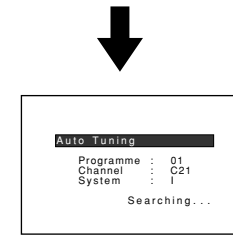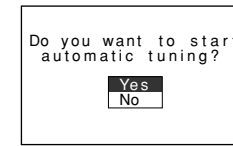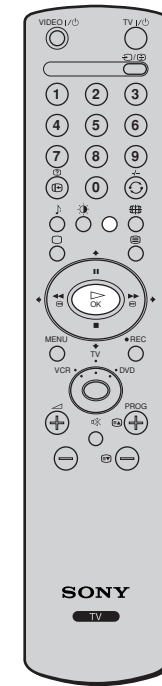


1 Press the **OK** button on the remote control to select **Yes**.

2 The TV starts to automatically search and store all available broadcast channels for you.


⚠ This procedure could take some minutes. Please be patient and do not press any buttons while the auto tuning is in progress, otherwise the auto tuning will not be completed.

⚠ If no channels were found during the auto tuning process then a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (refer to the step 3) and press **OK**. The auto tuning process will start again.

When the auto tuning is finished, the **Programme Sorting** menu appears on the screen.

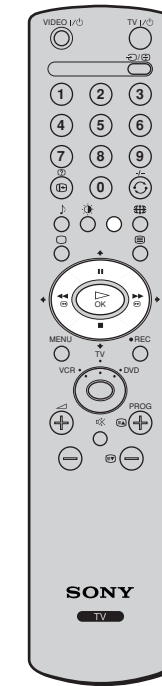


a) If you wish to keep the broadcast channels in the tuned order:

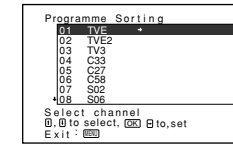

Press the **MENU** button on the remote control to exit and return to the normal TV screen.

👍 Your set is now ready for use.

b) If you wish to store the broadcast channels in a different order:

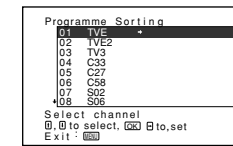

1 Press the **Down** or **Up** button to select the programme number with the channel (TV Broadcast) you wish to rearrange, then press the **Right** button.

2 Press the **Down** or **Up** button to select the new programme number position for your selected channel (TV Broadcast), then press **Left**.

ⓘ The selected broadcast channel now moves to its new programme position and the other broadcast channels move accordingly.

3 Repeat steps 1) and 2) if you wish to change the order of the other channels.

4 Press the **MENU** button on the remote control to exit and return to the normal TV screen.

👍 The TV set is now ready for use.

Your television stations are now stored in your television's memory.