


FM/MW/LW Compact Disc Player



Installation/Connections
 Installation/Anschluss
 Installazione/Connessioni
 Installazione/Collegamenti
 Montage/Aansluitingen

CDX-GT434U
 CDX-GT430U

©2008 Sony Corporation Printed in Thailand

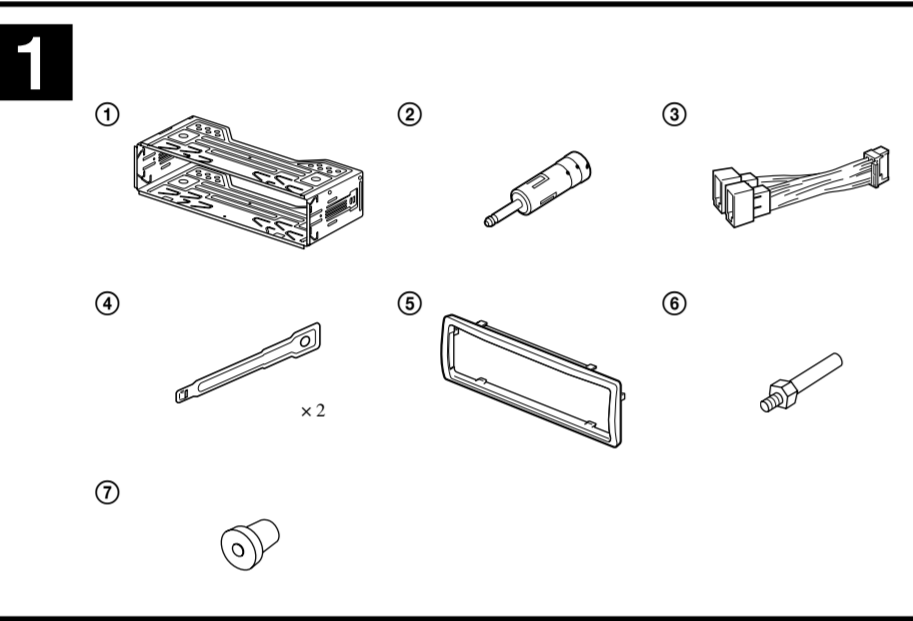

Equipment used in illustrations (not supplied)
 In Abbildungen dargestellte Geräte (nicht mitgeliefert)
 Appareils utilisés dans les illustrations (non fournis)
 Apparecchiatura utilizzata nelle illustrazioni (non in dotazione)
 Apparatuur gebruikt in de afbeeldingen (niet bijgeleverd)

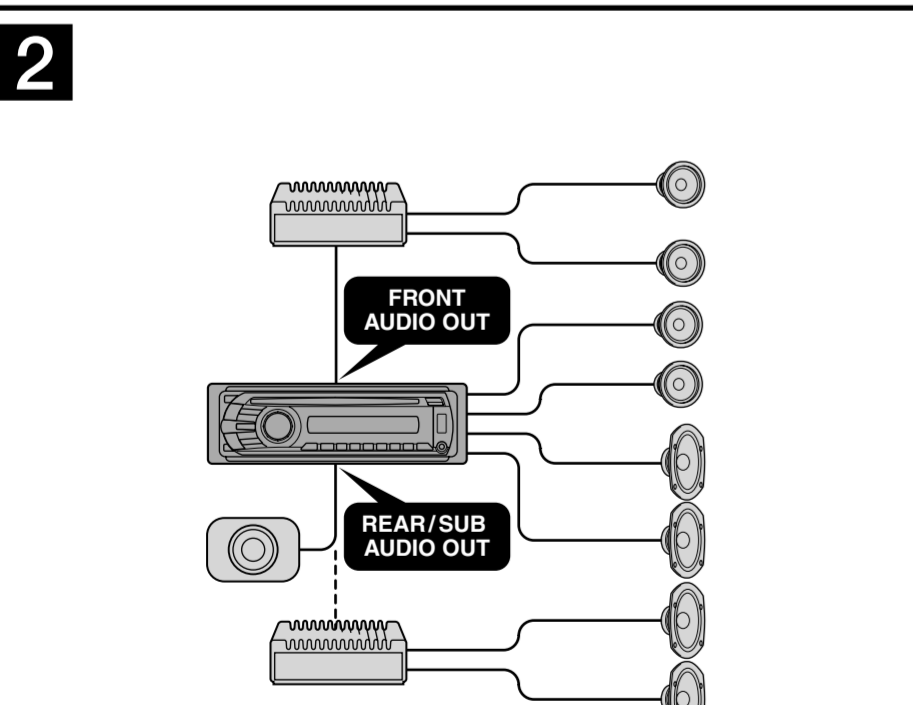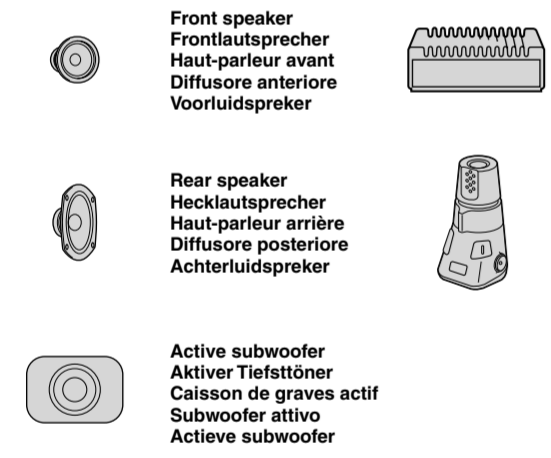


Warning
 If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
 • The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
 • When your car has built-in FM/MW/LW antenna (aerial) in the rear-side glass, connect the power antenna (aerial) control lead (blue) to the access point (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.
 • A power antenna (aerial) without a relay box cannot be used with this unit.

Memory hold connection
 When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection
 • Before connecting the speakers, turn the unit off.
 • Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
 • Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
 • Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the speaker.
 • Do not attempt to connect the speakers in parallel.
 • Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
 • To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (-) lead for the right and left speakers.
 • Do not connect the unit's speaker leads to each other.

Note on amplifier
 If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

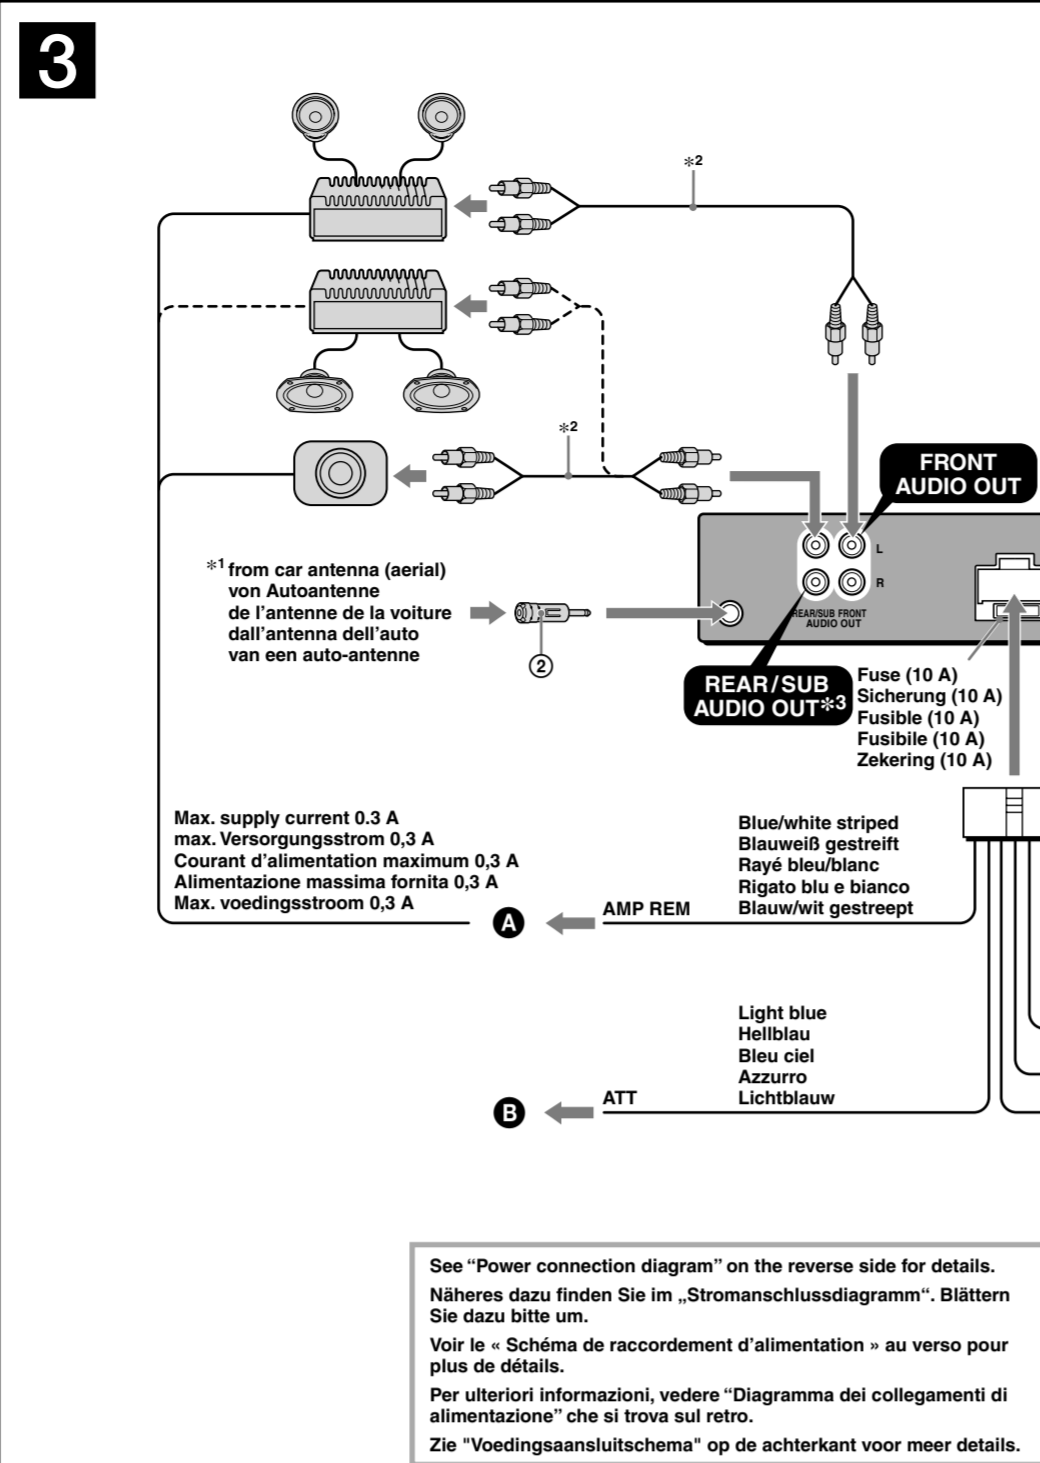

3

1 Note for the antenna (aerial) connecting
 If your car antenna (aerial) is an ISO (International Organization for Standardization) type, use the supplied adaptor (2) to connect it. First connect the car antenna (aerial) to the supplied adaptor, then connect it to the antenna (aerial) jack of the master unit.
 * RCA jack cord (not supplied).
 * AUDIO OUT can be switched SUB or REAR. For details, see the supplied Operating Instructions.
 * Insert with the cord upwards.

2 from car antenna (aerial) von Autoantenne de l'antenne de la voiture dall'antenna dell'auto van een auto-antenne

3 Max. supply current 0.3 A max. Versorgungstrom 0,3 A Courant d'alimentation maximum 0,3 A Alimentazione massima fornita 0,3 A Max. voedingsstroom 0,3 A

4 Fuse (10 A) Sicherung (10 A) Fusibile (10 A) Zekering (10 A)


5 Blue/white striped Blauweiß gestreift Rays bleu/blanc Rigato blu e bianco Blau/Wit gestreept

6 AMP REM

7 ATT

8 Light blue Hellblau Bleu ciel Azzurro Lichtblauw

See "Power connection diagram" on the reverse side for details. Näheres dazu finden Sie im „Stromanschlußdiagramm“. Blättern Sie dazu bitte um.
 Voir le « Schéma de raccordement d'alimentation » au verso pour plus de détails.
 Per ulteriori informazioni, vedere "Diagramma dei collegamenti di alimentazione" che si trova sul retro.
 Zie "Voedingsaansluitschema" op de achterkant voor meer details.

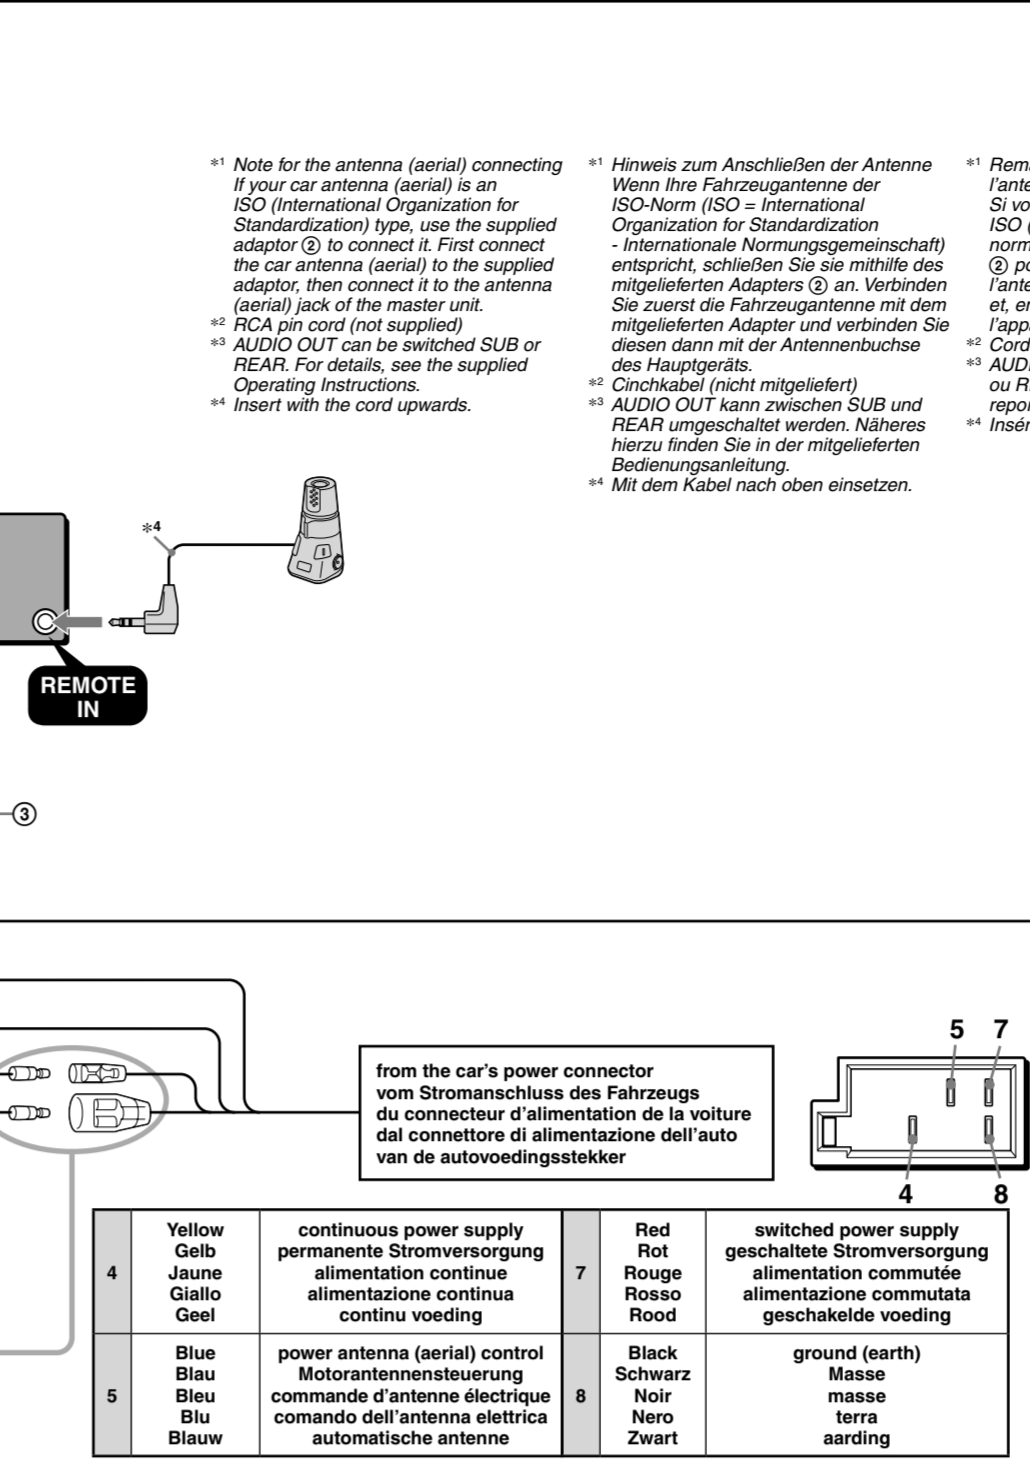

4 Yellow Gelb Jaune Giallo Geel

5 Blue Bleu Blu Bluw

6 continuous power supply permanente Stromversorgung alimentazione continua alimentazione continua continu voeding

7 Red Rouge Rosso Rood


8 Black Noir Nero Zwart

switched power supply geschaltete Stromversorgung alimentazione commutata alimentazione commutata geschakelde voeding

power antenna (aerial) control Motorantennensteuerung commande d'antenne électrique comando dell'antenna elettrica automatische antenne

ground (earth) Masse massa terra aarding

Positions 1, 2, 3, and 6 do not have pins.
 An Position 1, 2, 3 et 6 n'ont pas de broches.
 Le posizioni 1, 2, 3 e 6 non hanno piedini.
 De posities 1, 2, 3 en 6 hebben geen pins.

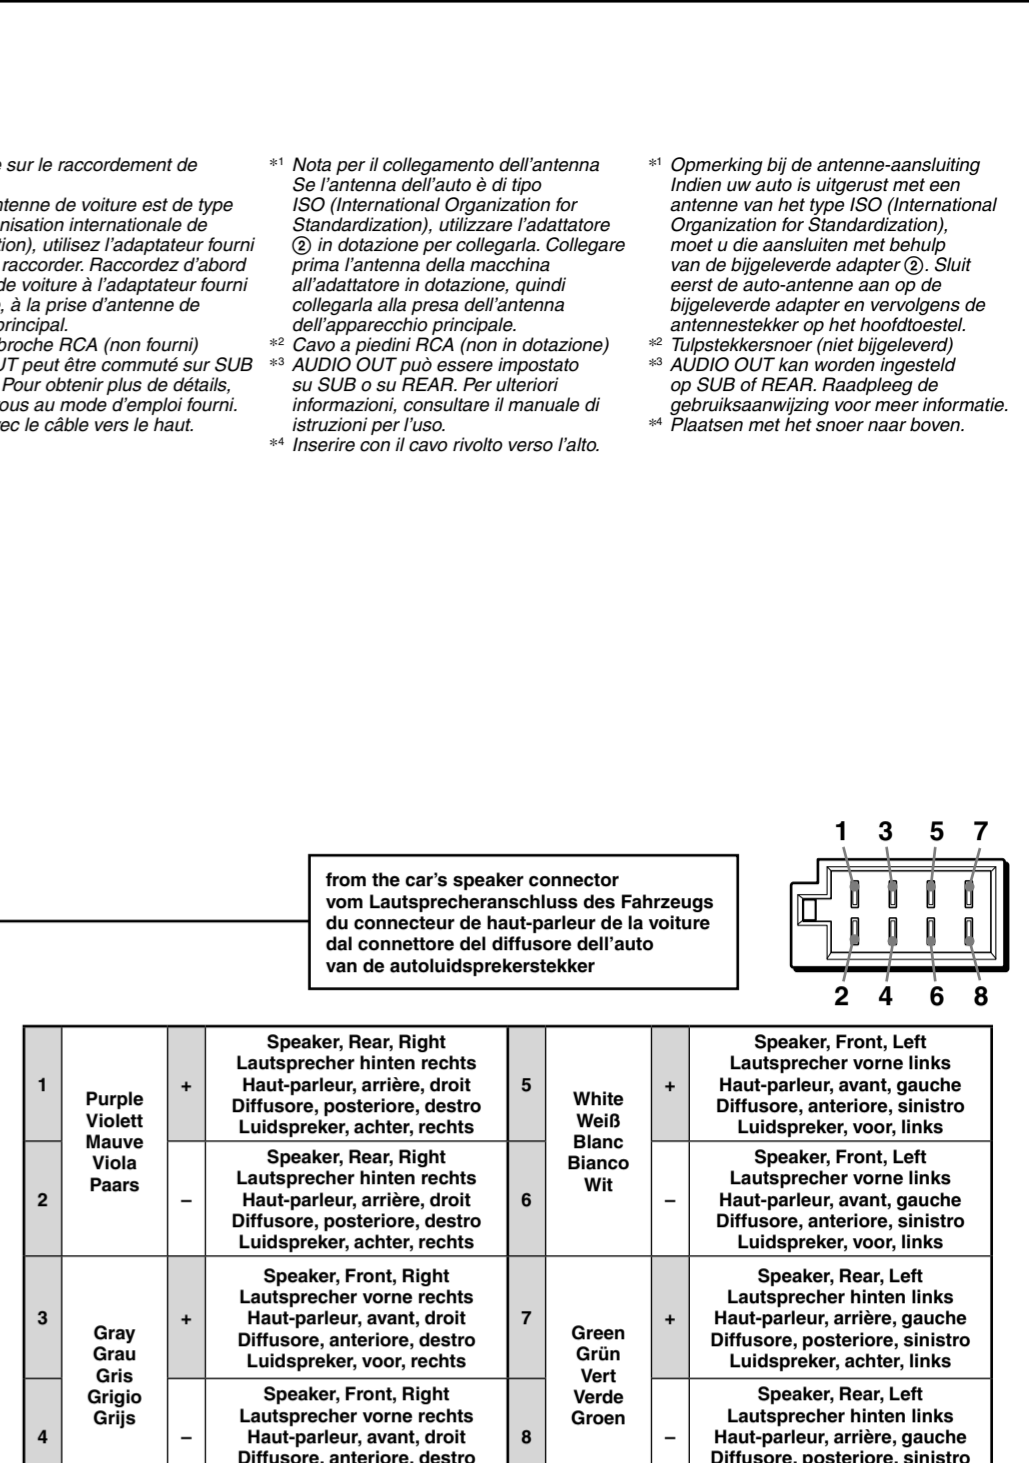

5 Speaker, Rear Right Lautsprecher hinten rechts Haut-parleur, arrière, droit Diffusore, posteriore, destro Luidspreker, achter, rechts

6 Speaker, Rear Right Lautsprecher hinten rechts Haut-parleur, arrière, droit Diffusore, posteriore, destro Luidspreker, achter, rechts

7 Speaker, Front Right Lautsprecher vorne rechts Haut-parleur, avant, droit Diffusore, antérieure, droite Luidspreker, voor, rechts

8 Speaker, Front Right Lautsprecher vorne rechts Haut-parleur, avant, droit Diffusore, antérieure, droite Luidspreker, voor, rechts

1 Purple Violet Mauve Viola Paars

2 Speaker, Rear Right Lautsprecher hinten rechts Haut-parleur, arrière, droit Diffusore, posteriore, destro Luidspreker, achter, rechts

3 Speaker, Front Right Lautsprecher vorne rechts Haut-parleur, avant, droit Diffusore, antérieure, droite Luidspreker, voor, rechts

4 Speaker, Front Right Lautsprecher vorne rechts Haut-parleur, avant, droit Diffusore, antérieure, droite Luidspreker, voor, rechts

5 White Weiß Blanc Bianco Wit

6 Speaker, Front, Left Lautsprecher vorne links Haut-parleur, avant, gauche Diffusore, antérieure, sinistra Luidspreker, voor, links

7 Speaker, Front, Left Lautsprecher vorne links Haut-parleur, avant, gauche Diffusore, antérieure, sinistra Luidspreker, voor, links

8 Speaker, Front, Left Lautsprecher vorne links Haut-parleur, avant, gauche Diffusore, antérieure, sinistra Luidspreker, voor, links

from the car's speaker connector vom Lautsprecheranschluss des Fahrzeugs du connecteur de haut-parleur de la voiture dal connettore del diffusore dell'auto van de auto-luidsprekerstekker

from the car's power connector vom Stromanschluss des Fahrzeugs du connecteur d'alimentation de la voiture dal connettore di alimentazione dell'auto van de autovoedingsstekker

from the car's power connector vom Stromanschluss des Fahrzeugs du connecteur d'alimentation de la voiture dal connettore di alimentazione dell'auto van de autovoedingsstekker

from the car's speaker connector vom Lautsprecheranschluss des Fahrzeugs du connecteur de haut-parleur de la voiture dal connettore del diffusore dell'auto van de auto-luidsprekerstekker

Negative polarity positions 2, 4, 6, and 8 have striped leads. An den negativ gepolten Positionen 2, 4, 6 und 8 befinden sich gestreifte Adern. Le positions de polarité négative 2, 4, 6 et 8 sont dotées de cordons rayés. La posizione a polarità negativa 2, 4, 6 e 8 hanno cavi rigati. De posities voor negatieve polariteit (2, 4, 6 en 8) hebben gestreepte kabels.

1

Cautions

- This unit is designed for negative ground (earth) 12 V DC operation only.
- Do not get the leads under a screw, or caught in moving parts (e.g. seat rattle).
- Before making connections, turn the car ignition off to avoid short circuits.
- Connect the power connecting lead (3) to the unit and speakers before connecting it to the auxiliary power connector.
- Run all ground (earth) leads to a common ground (earth) point.**
- Be sure to insulate any loose unconnected leads with electrical tape for safety.

Notes on the power supply lead (yellow)

- When connecting this unit in combination with other stereo components, the connected car circuit's rating must be higher than the sum of each component's fuse.
- When no car circuits are rated high enough, connect the unit directly to the battery.

Parts list 1

The numbers in the list are keyed to those in the instructions.

- The bracket (1) and the protection collar (2) are attached to the unit before shipping. Before mounting the unit, use the release keys (3) to remove the bracket (1) from the unit. For details, see "Removing the protection collar and the bracket (1)" on the reverse side of the sheet.
- Keep the release keys (3) for future use as they are also necessary if you remove the unit from your car.

Caution
 Handle the bracket (1) carefully to avoid injuring your fingers.

Notes

- Be sure to connect the ground (earth) lead before connecting the amplifier.
- The alarm will only sound if the built-in amplifier is used.

2

Connection example 2

1 To AMP REMOTE IN of an optional power amplifier
 This connection is only for amplifiers. Connecting any other system may damage the unit.

2 To the interface cable of a car telephone

Warning
 If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
 • The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
 • When your car has built-in FM/MW/LW antenna (aerial) in the rear-side glass, connect the power antenna (aerial) control lead (blue) to the access point (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.
 • A power antenna (aerial) without a relay box cannot be used with this unit.

Memory hold connection
 When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection
 • Before connecting the speakers, turn the unit off.
 • Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
 • Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
 • Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the speaker.
 • Do not attempt to connect the speakers in parallel.
 • Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
 • To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (-) lead for the right and left speakers.
 • Do not connect the unit's speaker leads to each other.

Note on amplifier
 If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Vorsichtsmaßnahmen

- Dieses Gerät ist ausschließlich für den Betrieb bei 12 V Gleichstrom (negative Erdung) bestimmt.
- Achten Sie darauf, dass die Kabel nicht unter einer Schraube oder zwischen beweglichen Teilen wie z. B. in einer Sitzschiene eingeklemmt werden.
- Schalten Sie, bevor Sie irgendwelche Anschlüsse vornehmen, die Zündung des Fahrzeugs aus, um Kurzschlüsse zu vermeiden.
- Verbinden Sie das Stromversorgungs-kabel (3) mit dem Gerät und den Lautsprechern, bevor Sie es mit dem Hilfsstromanschluss verbinden.
- Schließen Sie alle Erdungskabel an einen gemeinsamen Massepunkt an.**
- Aus Sicherheitsgründen müssen alle losen, nicht angeschlossenen Drähte mit Isolierband abgedeckt werden.

Hinweise zum Stromversorgungs-kabel (gelb)

- Wenn Sie dieses Gerät zusammen mit anderen Stereo-Komponenten anschließen, muss der Stromkreis der Autostromkreis, an den die Geräte angeschlossen sind, eine höhere Leistung aufweisen als die Summe der Sicherungen der einzelnen Komponenten.
- Wenn kein Autostromkreis eine so hohe Leistung aufweist, schließen Sie das Gerät direkt an die Batterie an.

Teilieliste 1

Die Nummern in der Liste sind dieselben wie im Erläuterungsteil der Anleitung.

- Die Halterung (1) und die Schutzringkappe (2) werden vor dem Ausliefern am Gerät angebracht. Bevor Sie das Gerät montieren, nehmen Sie die Halterung (1) mithilfe der Löseschlüssel (3) bitte vom Gerät ab. Einzelheiten dazu finden Sie unter „Abnehmen der Schutzringkappe und der Halterung (1)“ auf der Rückseite des Blattes.
- Bewahren Sie die Löseschlüssel (3) für den späteren Gebrauch auf. Sie werden z. B. benötigt, wenn Sie das Gerät aus dem Fahrzeug ausbauen wollen.**

Vorsicht
 Seien Sie beim Umgang mit der Halterung (1) vorsichtig, damit Sie sich nicht die Hände verletzen.

Hinweise

- Verwahren Sie sich vor dem Installieren, dass die Verriegelungen an beiden Seiten der Halterung (1) um 2 mm nach innen gebogen sind. Wenn die Verriegelungen gerade oder nach außen gebogen sind, lässt sich das Gerät nicht sicher installieren und kann herauspringen.

3

Connection diagram 3

1 To AMP REMOTE IN of an optional power amplifier
 This connection is only for amplifiers. Connecting any other system may damage the unit.

2 To the interface cable of a car telephone

Warning
 If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
 • The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
 • When your car has built-in FM/MW/LW antenna (aerial) in the rear-side glass, connect the power antenna (aerial) control lead (blue) to the access point (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.
 • A power antenna (aerial) without a relay box cannot be used with this unit.

Memory hold connection
 When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection
 • Before connecting the speakers, turn the unit off.
 • Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
 • Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
 • Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the speaker.
 • Do not attempt to connect the speakers in parallel.
 • Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
 • To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (-) lead for the right and left speakers.
 • Do not connect the unit's speaker leads to each other.

Note on amplifier
 If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Précautions

- Cet appareil est conçu pour fonctionner sur un courant continu de 12 V avec masse négative.
- Évitez de coincer les câbles sous des vis ou dans des pièces mobiles (par exemple, arrimage de siège).
- Avant d'effectuer des raccordements, coupez le moteur pour éviter les courts-circuits.
- Branchez le câble d'alimentation (3) sur l'appareil et les haut-parleurs avant de le brancher sur le connecteur d'alimentation auxiliaire.
- Rassemblez tous les câbles de terre en un point de masse commune.**
- Veillez à isoler tout câble ou câble non connecté avec du ruban isolant.

Remarques sur le câble d'alimentation (jaune)

- Lorsque cet appareil est raccordé à d'autres équipements stéréo, la valeur nominale des circuits du véhicule raccorés doit être supérieure à la somme des fusibles de chaque élément.
- Si aucun circuit de la voiture n'est assez puissant, raccordez directement l'appareil à la batterie.

Liste des composants 1

- Les numéros de la liste correspondent à ceux des instructions.
- Le support (1) et le tour de protection (2) sont fixés à l'appareil en usine. Avant le montage de l'appareil, utilisez les clés de déblocage (3) pour détacher le support (1) de l'appareil. Pour de plus amples informations, reportez-vous à la section « Retrait du tour de protection et du support (1) » au verso de la feuille.
- Conservez les clés de déblocage (3) pour une utilisation ultérieure car vous en aurez également besoin pour retirer l'appareil de votre véhicule.**

Avertissement
 Manipulez le support (1) avec soin pour éviter de vous blesser aux doigts.

Hinweise

- Verwahren Sie sich vor dem Installieren, dass die Verriegelungen an beiden Seiten der Halterung (1) um 2 mm nach innen gebogen sind. Wenn die Verriegelungen gerade oder nach außen gebogen sind, lässt sich das Gerät nicht sicher installieren und kann herauspringen.

4

Exemple de raccordement 2

1 To AMP REMOTE IN of an optional power amplifier
 This connection is only for amplifiers. Connecting any other system may damage the unit.

2 To the interface cable of a car telephone

Warning
 If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
 • The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
 • When your car has built-in FM/MW/LW antenna (aerial) in the rear-side glass, connect the power antenna (aerial) control lead (blue) to the access point (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.
 • A power antenna (aerial) without a relay box cannot be used with this unit.

Memory hold connection
 When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection
 • Before connecting the speakers, turn the unit off.
 • Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
 • Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
 • Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the speaker.
 • Do not attempt to connect the speakers in parallel.
 • Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
 • To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (-) lead for the right and left speakers.
 • Do not connect the unit's speaker leads to each other.

Note on amplifier
 If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Attenzione

- Questo apparecchio è stato progettato per l'uso solo a 12 V CC con massa negativa.
- Evitare che i cavi rimangano bloccati da una vite o incastrati nelle parti mobili (ad esempio nelle guide scorrevoli dei sedili).
- Prima di effettuare i collegamenti, spegnere il motore dell'automobile ed evitare di cambiare i circuiti.
- Collegare il cavo di collegamento dell'alimentazione (3) all'apparecchio e ai diffusori prima di collegarlo al connettore di alimentazione ausiliaria.
- Riunire tutti i cavi di massa a un punto di massa comune.**
- Per sicurezza, assicurarsi di isolare qualsiasi cavo non collegato utilizzando del nastro adesivo.

Note sul cavo di alimentazione (giallo)

- Se questo apparecchio viene collegato in combinazione con altri componenti stereo, la potenza nominale dei circuiti dell'automobile deve essere superiore a quella prodotta dalla somma dei fusibili di ciascun componente.
- Se la potenza nominale dei circuiti dell'automobile non è sufficiente, collegare l'apparecchio direttamente alla batteria.

Elenco dei componenti 1

- I numeri nella lista corrispondono a quelli riportati nelle istruzioni.
- La staffa (1) e la cornice di protezione (2) vengono applicati all'apparecchio in fabbrica. Prima di installare l'unità, utilizzare le chiavette di rilascio (3) per rimuovere la staffa (1) dall'apparecchio. Per ulteriori informazioni, vedere "Rimozione della staffa e della cornice di protezione (2)" sul lato opposto del foglio.
- Conservare le chiavette di rilascio (3) per un uso futuro in quanto sono necessarie per rimuovere l'unità dall'auto.**

Attenzione
 Manipolare la staffa (1) con cautela per evitare di ferirsi le mani.

Hinweise

- Verwahren Sie sich vor dem Installieren, dass die Verriegelungen an beiden Seiten der Halterung (1) um 2 mm nach innen gebogen sind. Wenn die Verriegelungen gerade oder nach außen gebogen sind, lässt sich das Gerät nicht sicher installieren und kann herauspringen.

5

Esempio di collegamento 2

1 To AMP REMOTE IN of an optional power amplifier
 This connection is only for amplifiers. Connecting any other system may damage the unit.

2 To the interface cable of a car telephone

Warning
 If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
 • The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
 • When your car has built-in FM/MW/LW antenna (aerial) in the rear-side glass, connect the power antenna (aerial) control lead (blue) to the access point (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.
 • A power antenna (aerial) without a relay box cannot be used with this unit.

Memory hold connection
 When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection
 • Before connecting the speakers, turn the unit off.
 • Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
 • Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
 • Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the speaker.
 • Do not attempt to connect the speakers in parallel.
 • Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
 • To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (-) lead for the right and left speakers.
 • Do not connect the unit's speaker leads to each other.

Note on amplifier
 If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Aansluitschema 3

1 To AMP REMOTE IN of an optional power amplifier
 This connection is only for amplifiers. Connecting any other system may damage the unit.

2 To the interface cable of a car telephone

Warning
 If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
 • The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
 • When your car has built-in FM/MW/LW antenna (aerial) in the rear-side glass, connect the power antenna (aerial) control lead (blue) to the access point (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.
 • A power antenna (aerial) without a relay box cannot be used with this unit.

Memory hold connection
 When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection
 • Before connecting the speakers, turn the unit off.
 • Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
 • Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
 • Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the speaker.
 • Do not attempt to connect the speakers in parallel.
 • Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
 • To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (-) lead for the right and left speakers.
 • Do not connect the unit's speaker leads to each other.

Note on amplifier
 If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

