




* 4 1 3 6 1 1 9 1 1 * (1)

4-136-119-11(1)

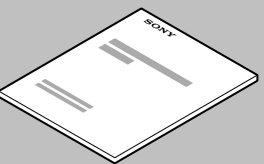



For details, see the Operating Instructions.

Quick Setup Guide


DAV-DZ280

1 Connecting the speakers

Connect the speaker cords to match the color of the SPEAKER jacks of the unit.

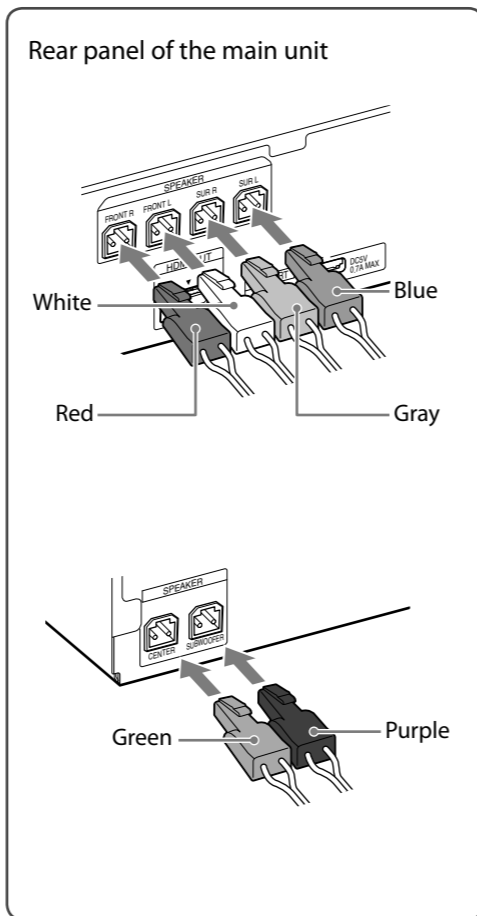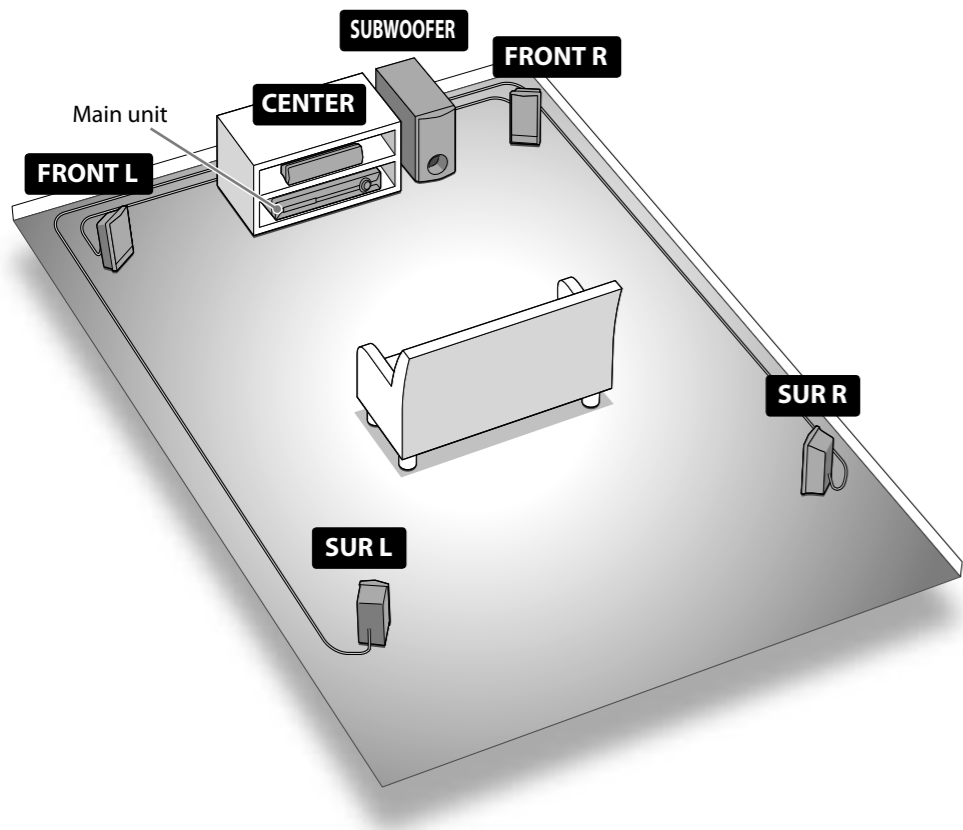


To connect speaker cords to the speaker

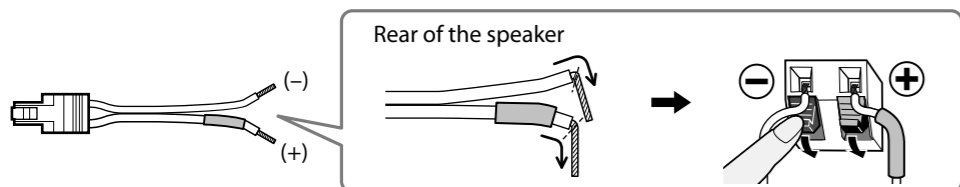


2 Connecting the TV

Depending on the jacks on your TV, select the connection method.

Method 1: SCART (EURO AV) cable connection

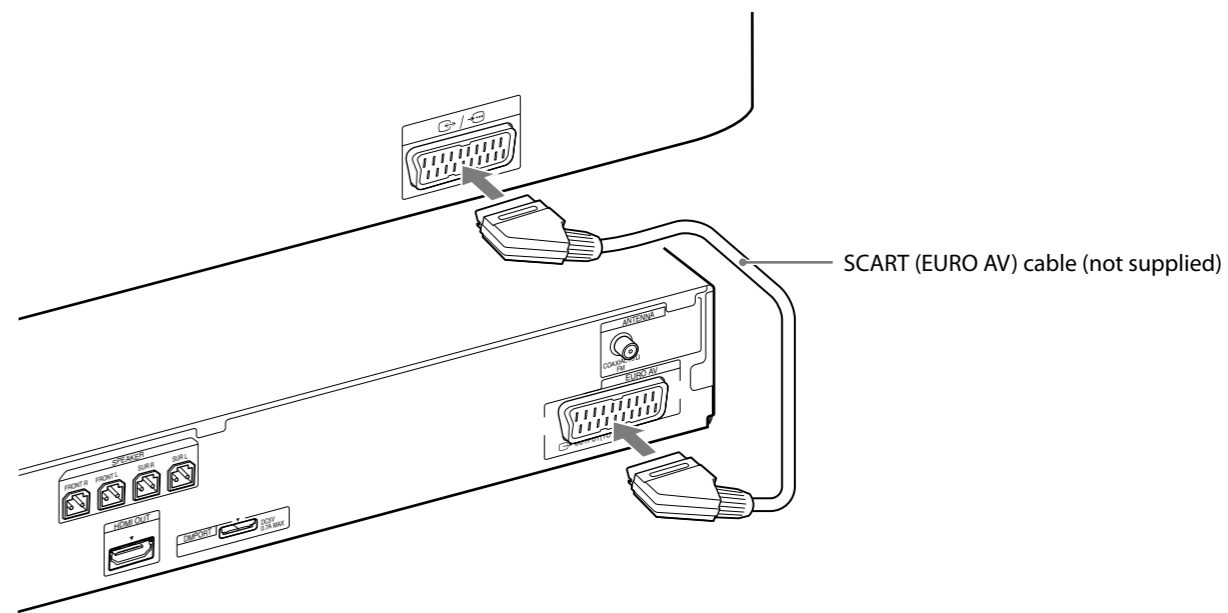

Method 2: HDMI cable and SCART (EURO AV) cable connection

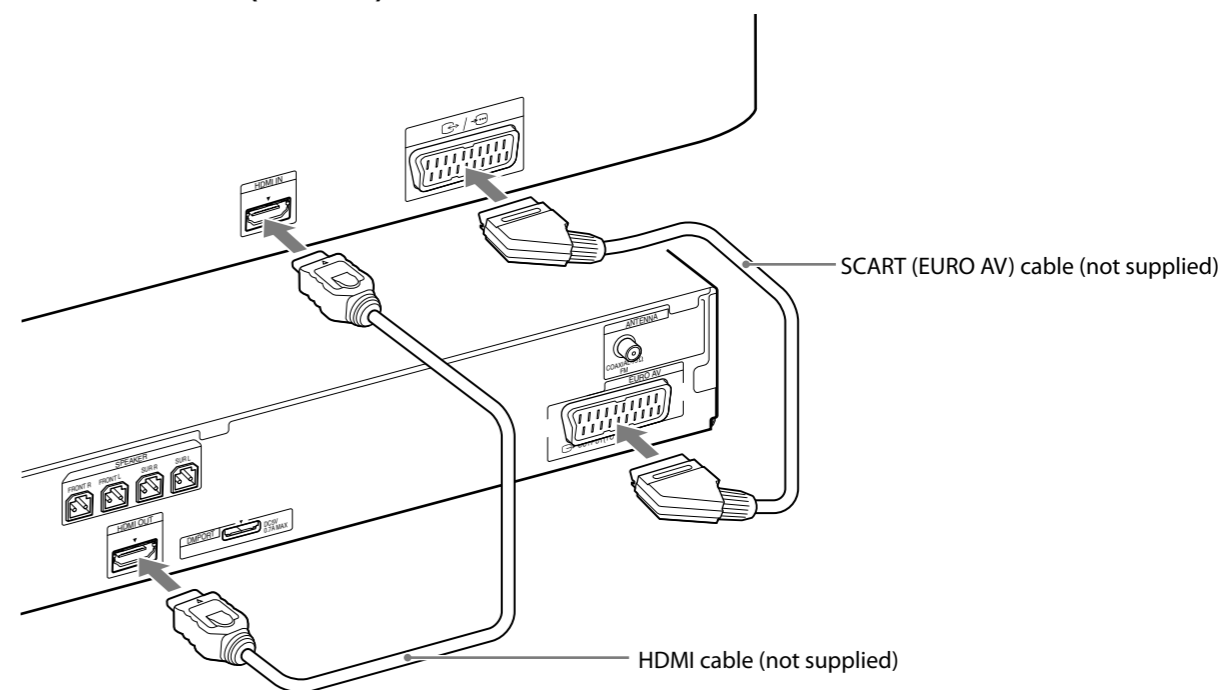


3 Performing the Quick Setup

Note


Do not insert a disc before performing the Quick Setup.

1 Connect the AC power cord (mains lead).

The shape of the wall outlet (mains) differs depending on the area.

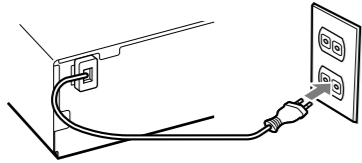


2 Turn on the power of the main unit and TV.

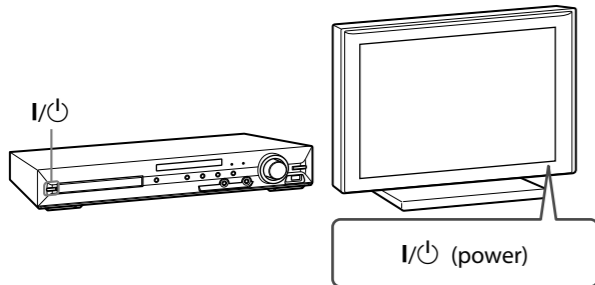

3 Switch the input selector on your TV to display "Sony Home Theatre System."

4 Set each following item, using ←/↑/↓/→ and +.

Displayed items vary depending on the area.

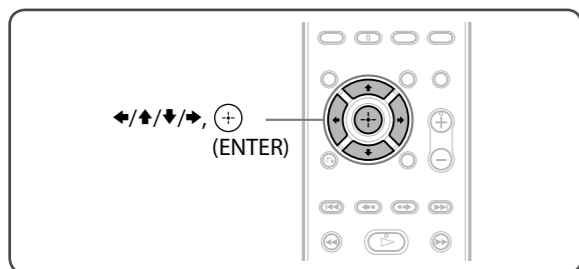

SONY
Home Theatre System

Select an on-screen language.

LANGUAGE SETUP	
OSD:	ENGLISH
MENU:	ENGLISH
AUDIO:	FRENCH
SUBTITLE:	SPANISH
	PORTUGUESE

Select the aspect ratio of the connected TV.

VIDEO SETUP	
TV TYPE:	16:9
LINE:	16:9
PAUSE MODE:	4:3 LETTER BOX
	4:3 PAN SCAN

Select the output method for video signals.

VIDEO SETUP	
TV TYPE:	16:9
LINE:	VIDEO
PAUSE MODE:	VIDEO
	RGB


Select [ON] when you connect the main unit and the TV with an HDMI cable.

HDMI SETUP	
HDMI RESOLUTION:	AUTO (1920x1080p)
CONTROL FOR HDMI:	OFF
VOLUME LIMIT:	OFF
YCbCr/RGB(HDMI):	ON
AUDIO(HDMI):	OFF
JPEG RESOLUTION:	SD

Select the speaker formation.

SPEAKER FORMATION	
	STANDARD

Connect the calibration mic and set it at the listening position.

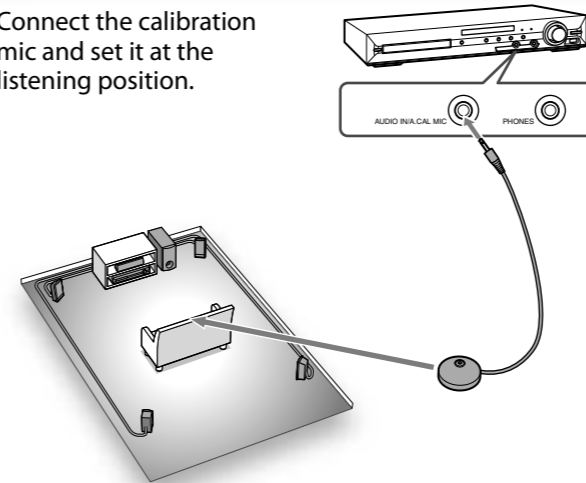

Select [YES] to perform [AUTO CALIBRATION].

AUTO CALIBRATION	
Connect calibration mic. Start measurement?	
YES	NO


Select [YES] to save the measurement results.

Measurement complete.	
FRONT L :	YES
FRONT R :	YES
CENTER :	YES
SUBWOOFER :	YES
SURROUND L :	YES
SURROUND R :	YES
If OK, unplug calibration mic and select "YES".	
YES	NO


SONY	
QUICK SETUP is complete.	
Home Theatre System	

Listening to TV sound from all speakers


1 Press FUNCTION +/- to display "TV."

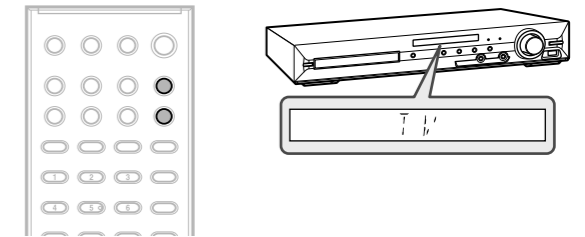


2 Press SYSTEM MENU.

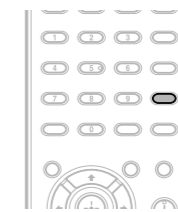

3 Press ↑/↓ to display "DEC. MODE," then press +.

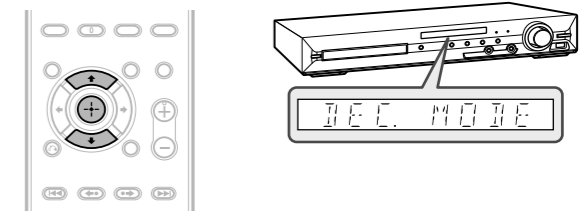

4 Press ↑/↓ to display "PRO LOGIC," then press +.

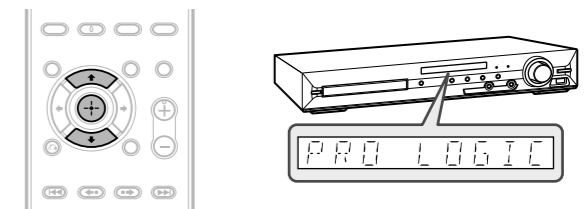

5 Press SYSTEM MENU to exit the menu.

