

TransferJet™ Station

Operating Instructions

TJS-1

Transfer Jet




<http://www.sony.net/>

©2010 Sony Corporation Printed in Japan

Before use

This product enables you to transfer data from/to a TransferJet technology compatible device*. Connect this product to a PC, etc., with a USB cable, and then place a TransferJet technology compatible device (camera, etc.) on this product. Device files can be managed via the PC without the need for direct USB connection to a camera, etc.**

 
* TransferJet technology compatible devices bear the  mark.

This product can communicate with a TransferJet technology compatible device of SCSI Block Device Target.

**Operation may differ from connecting directly with a USB cable.

What is TransferJet?

TransferJet is a close-proximity wireless transfer technology which can rapidly transfer data simply by placing a device you want to connect in close proximity to a reading device. Large volumes of data such as photos or movies can be transferred without connecting a cable.

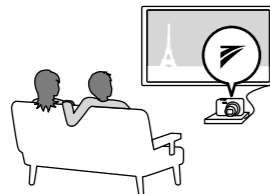

What can you do with this product?

- You can transfer photos or movies to a PC from a TransferJet technology compatible device, such as a digital camera, placed on this product.
 - You can display photos on a digital photo frame* or a TV* from a TransferJet technology compatible device, such as a digital camera, placed on this product.
- * USB port-equipped devices that can display photos can be used.

For the latest information, see the website.

Notes

- Only a connected device guaranteed by the manufacturer to work via its USB port can be used.
- Refer also to the instruction manual(s) of the TransferJet technology compatible device placed on this product.
- Do not use this product outside the area you purchased it. Depending on the area, use of this product may infringe on the wave regulations and may be subject to penalty.

For the latest information and devices that can be connected, see the following website.

<http://support.sony-europe.com/>

WARNING



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives

Close Proximity Wireless transfer interface: TransferJet

The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

Hereby, Sony Corp., declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For details, please access the following URL : <http://www.compliance.sony.de/>

This product is intended to be used in the following countries: IS, LI, NO, AT, BE, BG, CY, CZ, DK, EE, FI, FR, DE, GR, HU, IE, IT, LV, LT, LU, MT, NL, PL, PT, RO, SK, SI, ES, SE, GB, CH.

The use of this equipment is limited to indoors, and if it is used outdoors, it shall not be attached to a fixed installation, a fixed infrastructure, a fixed outdoor antenna, or an automotive or railway vehicle.



Do not use this product in an airplane.

This product should be connected to a USB2.0 compliant device only.


Troubleshooting

If you run into any problems using this product, check the following points once again.

■The power indicator does not light up.

- Check that the USB cable is plugged into the USB port firmly.

■Data cannot be transferred.

- Check that the  marks of this product and TransferJet technology compatible device are properly aligned, according to the connection indicator.
- Check that a metallic device other than a TransferJet technology compatible device is not placed on this product.
- Check that a metallic device other than a TransferJet technology compatible device is not close to this product.
- Check only one device is placed on this product at one time.
- Check that a TransferJet technology compatible device is placed on this product. Depending on the device, a Memory Stick™* with TransferJet may be required to be inserted in the device beforehand.
- Check that the TransferJet technology compatible device is turned on and the TransferJet function is activated.
- If the device is a camera, selecting a destination media may be required. For details on how to operate, refer to the instruction manual(s) of the camera.

■Others

- Depending on the TransferJet technology compatible device, it may not be possible to write and delete files to a TransferJet technology compatible device such as camera from a device such as a PC.
- This product may become warm during operation. This is not a malfunction.
- This product is not designed to charge the battery of the placed device.
- The connection indicator may stay lit for a few seconds after the TransferJet technology compatible device has been removed from this product. This is not a malfunction.
- Do not disconnect the USB cable or remove the device from this product while transferring files as files may be corrupted.
- If this product cannot be recognised from the connected device, disconnect and then reconnect the USB cable.
- Depending on the specifications of the TransferJet technology compatible device, it may not be possible to communicate with this product. For details, see the website in the lower left-hand corner of this sheet.

* A Memory Stick™ with TransferJet is not released depending on the regulations of the country/region.

License and Trademark Notice

- "Memory Stick", "TransferJet" and TransferJet logo are registered trademarks or trademarks of Sony Corporation.
- Microsoft, Windows, and Windows Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are registered trademarks of Apple Inc. in the U.S. and other countries.
- Reproduction of this manual, in whole or in part, without written permission by Sony Corporation is prohibited.
- The content of this manual is subject to change without notice.
- All other company names, product names and system names mentioned herein may be the trademarks or registered trademarks of their respective companies. Furthermore, ™ and © are not mentioned in each case in this manual.

On cleaning

- Clean this product with a soft dry cloth. If it is heavily soiled, clean this product with a soft cloth slightly moistened with a mild detergent solution, and then wipe it with a dry cloth.
- Avoid the following to avoid damage to the finish:
 - Using chemicals such as thinner, benzine, alcohol or insecticide.
 - Leaving the casing in contact with rubber or vinyl objects for a long period of time.
- When using chemical cloths, follow the warnings.

Specifications

Communication system	TransferJet Specifications PHY-CNL Spec.Rev.1.0 Compliant PCL Spec Rev.1.0 Compliant
Frequency band	4.48 GHz (central frequency) (4.20 GHz - 4.76 GHz)
Supported protocol class (communication type or tool)	SCSI Block Device Initiator*
External interface	USB2.0 (High-Speed)
Dimensions (w/d/h)	Approx. 110 mm × 62 mm × 16 mm
Mass	Approx. 100 g (excluding cable)
Operational temperature	0 °C - 40 °C
Power supply	DC 5 V, 0.25 A (supplied from USB)

* This product can communicate with a TransferJet technology compatible device of SCSI Block Device Target protocol class.

 
Design and specifications of this product are subject to change without notice.

Supplied items


TransferJet Station (1), USB cable (length: approx. 0.5 m) (1), Operating Instructions (this manual) (1)

Getting started

Before use, connect the supplied USB cable to the bottom of this product, and then connect the USB cable to a device, such as a PC.

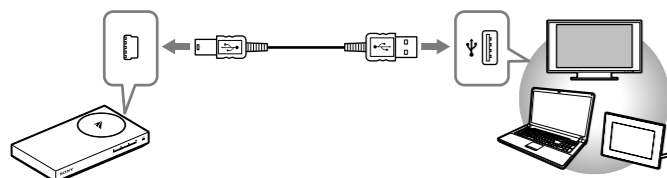

Bottom

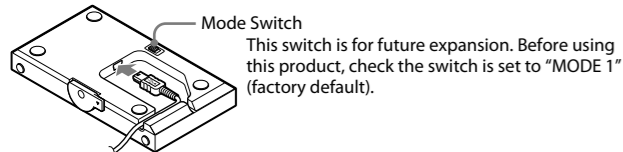



This switch is for future expansion. Before using this product, check the switch is set to "MODE 1" (factory default).

Notes

- Use the supplied USB cable.
- When connecting to a PC, connect the USB cable to the USB port of the PC directly. Operation during connection via a USB hub is not assured.
- If using a Windows PC when disconnecting a USB cable from a PC, click the icon [Safely remove USB Mass Storage Device] at the bottom right of the desktop of the computer, then unplug the USB cable. The screenshots are from Windows Vista. Screen and operation procedure may vary depending on the operating system of the computer.

 
 
How to place a TransferJet technology compatible device on this product

Before placing a TransferJet technology compatible device on this product, turn on the connected device and check that the power indicator of this product lights up. When

placing the device on this product, align the  mark on the device with the  mark on this product.

Then adjust the position of the TransferJet technology compatible device for the highest reading on the connection indicator. The higher the reading, the more rapidly the data can be transferred.*


* Depending on the TransferJet technology compatible device and surrounding wireless device, the connection indicator status may vary.

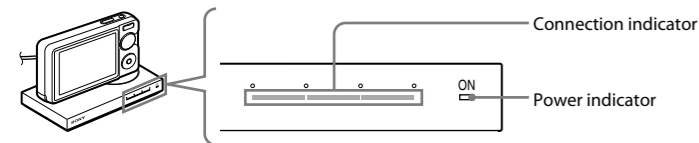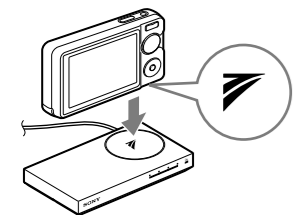


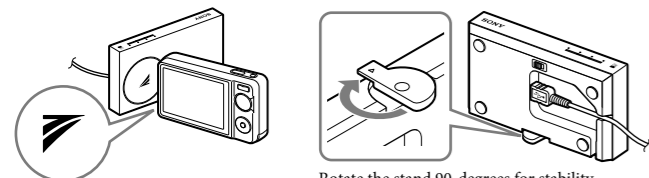 
Notes

- Turn on the TransferJet technology compatible device, and activate the TransferJet function in advance.
- If the device is a camera, operation on the camera may be required.
- If the device is a camera, a Memory Stick™ with TransferJet may be required to be inserted in the camera beforehand.
- The connection indicator may stay lit for a few seconds after the TransferJet technology compatible device has been removed from this product. This is not a malfunction.

Tip

When the  mark is on the side of a device:

 
Set up this product and then place this product and device with their  marks in close proximity.



Rotate the stand 90-degrees for stability. Pass the USB cable through the groove as illustrated above.

Example: Importing photos or movies in a camera to a PC

You can import photos or movies in a TransferJet technology compatible camera to a PC.

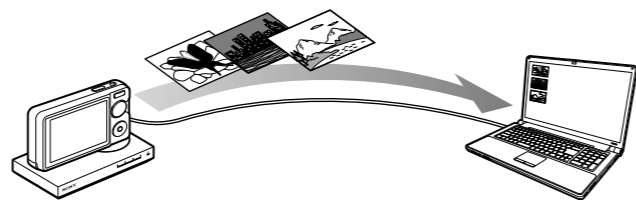

Recommended PC environment

OS: Windows
Windows 7
Windows Vista (Service Pack2)
Windows XP (Service Pack3)
Macintosh
Mac OS X (v10.3-v10.6)

USB port

Notes

- Operation with all computer environments is not assured.
- Depending on the combination of hardware and software, this product may not operate correctly, even if the environment meets the above requirements.
- Depending on the PC, this product may not operate properly if the connected PC has been in standby or sleep mode. In this case, disconnect and then reconnect the USB cable.

1 Turn on the PC.

The power indicator of this product lights up.

2 Place a TransferJet technology compatible camera on this product.

Notes

 
- Turn on the TransferJet technology compatible device, and activate the TransferJet function in advance.
- Depending on a camera, a Memory Stick™ with TransferJet may be required to be inserted in the camera beforehand.
- For details on how to place on this product, see "How to place a TransferJet technology compatible device on this product".

3 Transfer the data to the PC.

- When using a Windows PC with PMB (Picture Motion Browser)* installed:

The [Import Media Files to PMB] window is displayed.

*PMB is a software supplied with certain Sony products such as a camera.

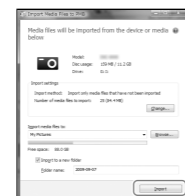

Click [Import] to import photos or movies. If the window is not displayed, select the media on the liquid-crystal display of the camera.

- When using a Windows PC not installed with PMB:

Open the folder for this product from Explore.

Drag and drop the image data in the folder to copy to the PC. The folder in which data is stored varies depending on your PC environment or TransferJet technology compatible device. For Windows Vista and Windows XP, four folders for this product appear. For Windows 7, only the folder in which the data is stored appears.

- When using Macintosh:

 
Open the newly recognised drive icon on the desktop. Drag and drop the image data in it to copy to the Macintosh. The folder in which data is stored varies depending on your Macintosh environment or TransferJet technology compatible device.

Note

Depending on the TransferJet technology compatible device, it may not be possible to write and delete files to the device from the PC.

Example: Displaying photos in a camera on a digital photo frame

You can display photos in a TransferJet technology compatible camera by connecting this product to a USB port-equipped digital photo frame.

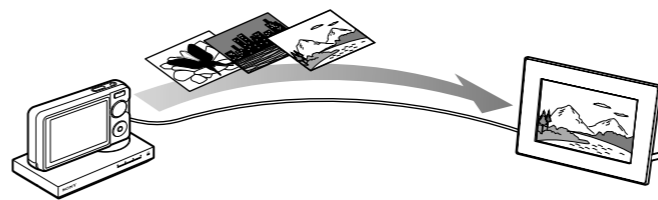

1 Turn on the digital photo frame.

The power indicator of this product lights up.

2 Place a TransferJet technology compatible camera on this product.

3 Operate the digital photo frame to display photos.

For details on how to operate, refer to the instruction manual(s) of the digital photo frame.

Notes

- Turn on the TransferJet technology compatible device, and activate the TransferJet function in advance.
- Depending on the camera, a Memory Stick™ with TransferJet may be required to be inserted in the camera beforehand.
- Only a USB port-equipped device that can display photos can be used.
- For details on how to place on this product, see "How to place a TransferJet technology compatible device on this product".

You can display photos by connecting a TV*.

*Only a USB port-equipped TV that can display photos can be used. Some TV can display a slide show.

Operate the TV to display photos.

For details on how to operate, refer to the instruction manual(s) of the TV.

For the latest information and devices that can be connected, see the following website.

<http://support.sony-europe.com/>