

Thank you for purchasing this Sony product.

After following this step by step guide you will be able to:


Insert Batteries into the Remote Control.

Connect the Aerial to your TV.


Connect the Speakers to your TV.

Tune your TV.


View TV Programmes.

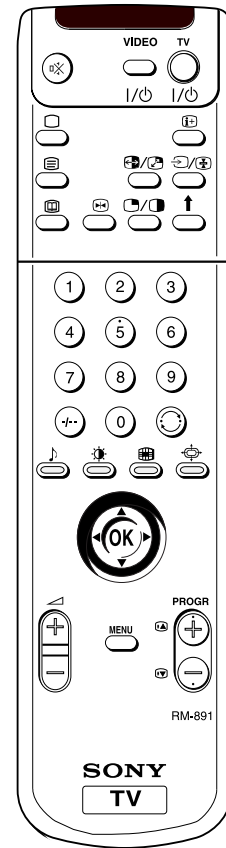

Remote Control

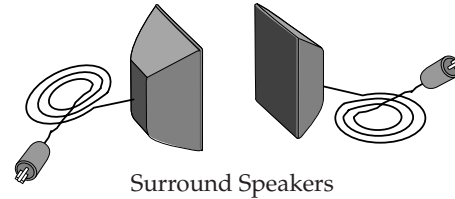


Surround Speakers

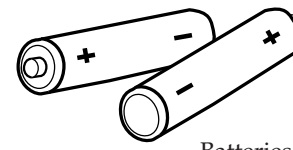

Batteries

Note: The remote control supplied may be type RM-892. However, the operating function of each button will be the same.


! Before switching on the TV, you need to connect the speakers to the TV using the leads provided. The striped lead is for the red terminal of the speaker; the black lead for the black terminal.

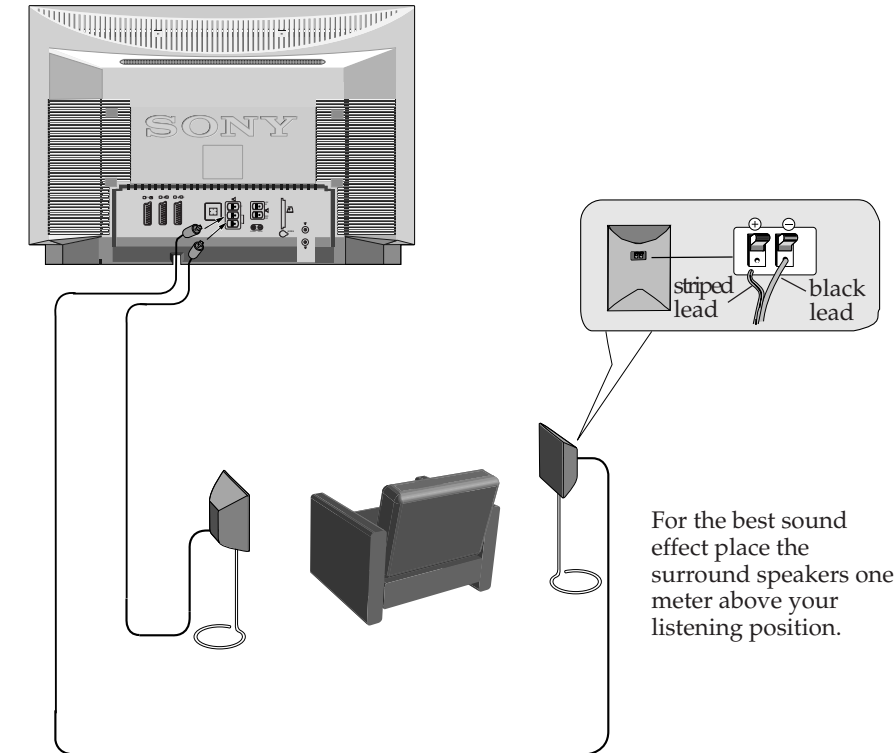


For the best sound effect place the surround speakers one meter above your listening position.


Inserting Batteries into
the Remote Control

Connecting the Aerial

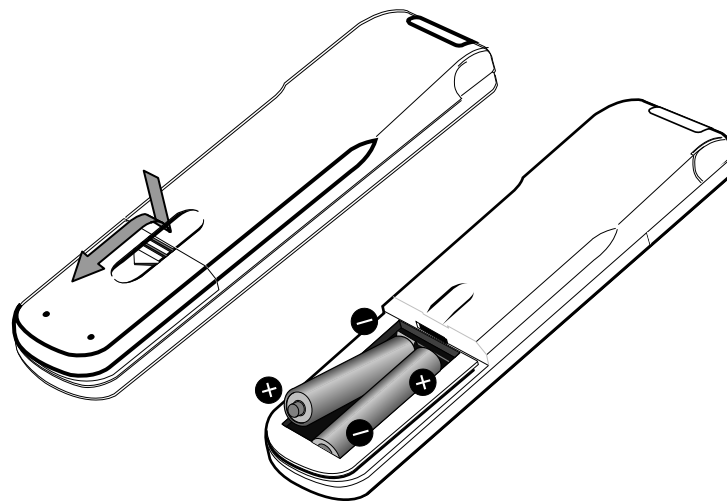

 Always remember to dispose of used batteries in an environmental friendly way.

Connect a conventional aerial to the socket marked  on the rear of the TV.

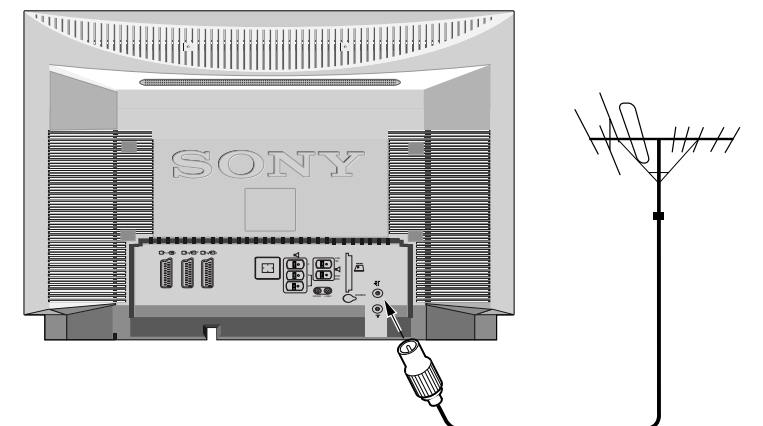

Switching on the TV


5

Automatically Tuning the TV




You can tune the TV to receive the new digital channels and/or the traditional analogue channels. If at any time during this procedure you want to return to the normal TV picture, press the MENU button.

7








Connect the TV plug to the mains socket (220-240V AC, 50Hz) and switch on.

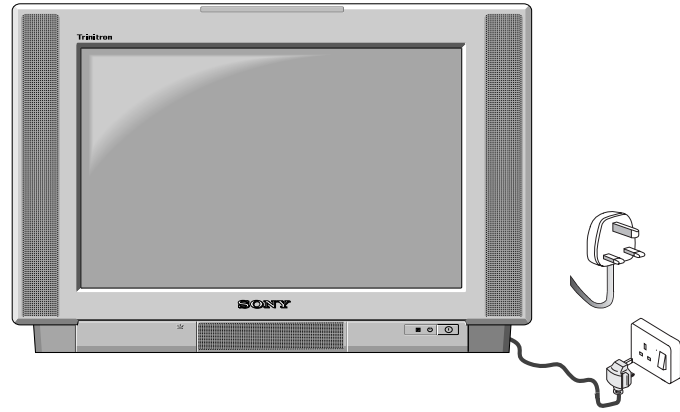

Push in the on/off switch on the front of the TV.

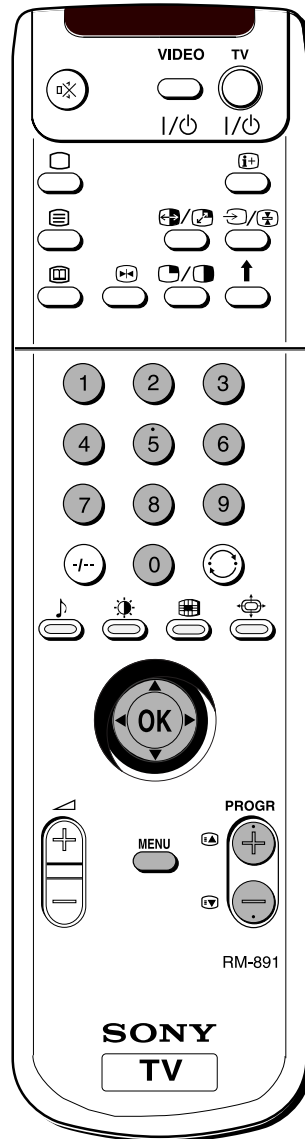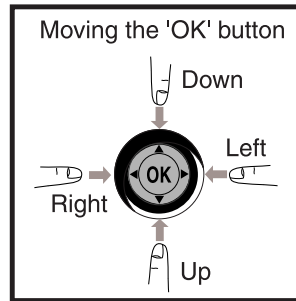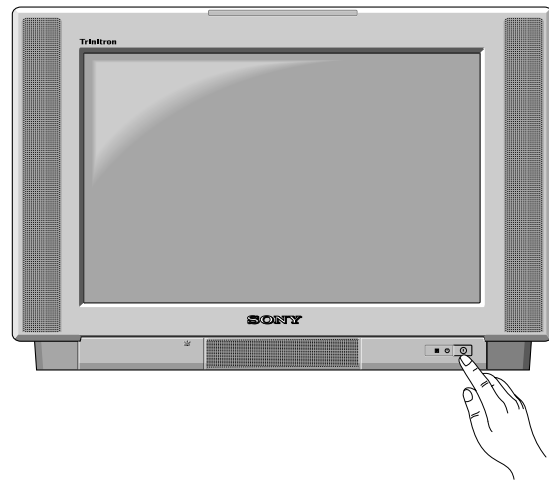


- 1 Press the MENU button on the remote control to display the menu on the TV screen.
- 2 Move the OK button on the remote control DOWN to select the symbol on the menu screen then move RIGHT to enter the 'PRESET' menu.
- 3 Move the OK button DOWN to select "Programme Setup" then move RIGHT to enter the 'PROGRAMME SETUP' menu.
- 4 Move the OK button RIGHT to highlight the brackets then move repeatedly DOWN to select 'Digital' if you wish to view digital channels or 'Analogue' if you wish to view analogue channels.
- 5 Press the OK button to confirm then move LEFT to display the PRESET menu.
- 6 Move the OK button UP to select 'Auto Programme' then move the OK button RIGHT to display the "AUTO PROGRAMME" menu.
- 7 Press the OK button to start the automatic tuning process. The word 'searching' now flashes on the menu screen and the TV starts to store all available channels. When tuning digital channels, please be patient and do not press any buttons as the tuning process takes approximately twenty minutes depending on the number of channels.
- 8 When the autotune procedure is complete, the PRESET menu appears on the screen and the channel currently being broadcast on programme 1 is displayed.
- 9 If you wish to tune in both the digital channels and the analogue channels, repeat steps 3-8, remembering to change your selection in step 4.
- 10 Press the MENU button to remove the 'PRESET' menu from the TV screen.
- 11 Press the PROGR+/- or the numbered buttons on the remote control to view the channels.

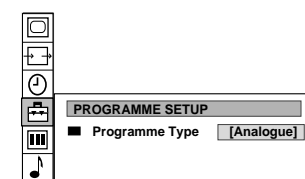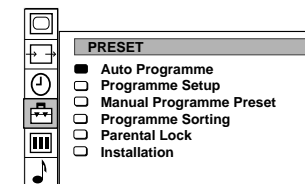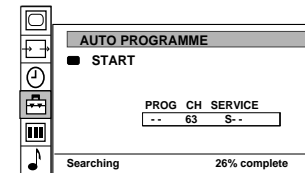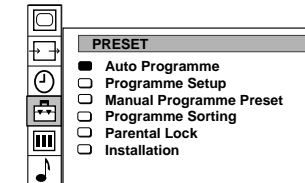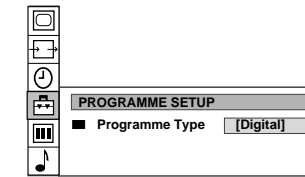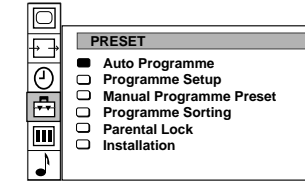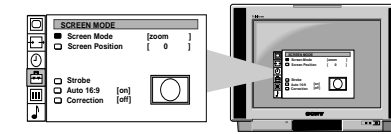

General Operation Of Your Remote Control

6

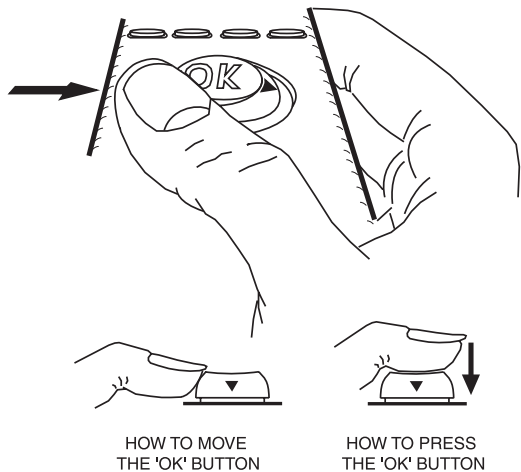

HOW TO MOVE THE 'OK' BUTTON

HOW TO PRESS THE 'OK' BUTTON

- Notes:**
- If you wish to stop the "autotune" procedure, press the OK button then the MENU button on the remote control.
 - If, after tuning is complete, no digital programme is displayed on the TV, repeat steps 1-11 but select 'Analogue' in the Programme Setup menu screen. When digital programmes become available in your area, repeat steps 1-11 above and select 'Digital' in the Programme Setup menu screen.
 - If you wish to rearrange the order of the channels, please refer to the "Exchanging Programme Positions" section of the main instruction manual.