

Thank you for purchasing this Sony product.

After following this step by step guide you will be able to:


Insert Batteries into the Remote Control.

Connect the Aerial to your projection TV.


Select the language of the menu screens.

Tune your projection TV.

View TV Programmes.

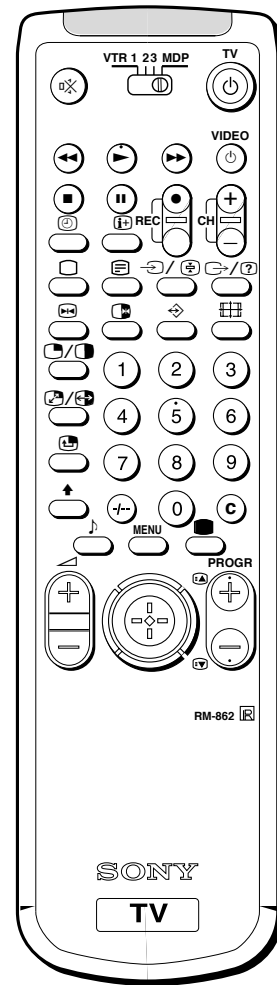


Remote Control

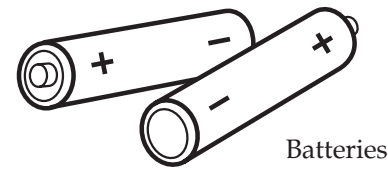

Batteries


Inserting Batteries into  
the Remote Control

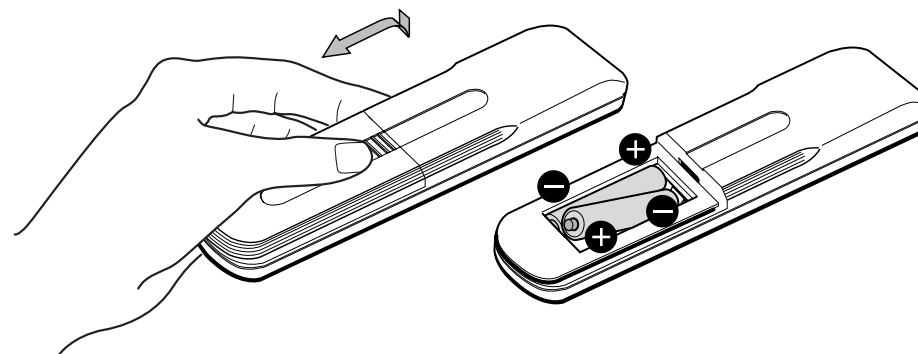

Projection TV

4-205-195-01 (1)

Connecting cables are not supplied.

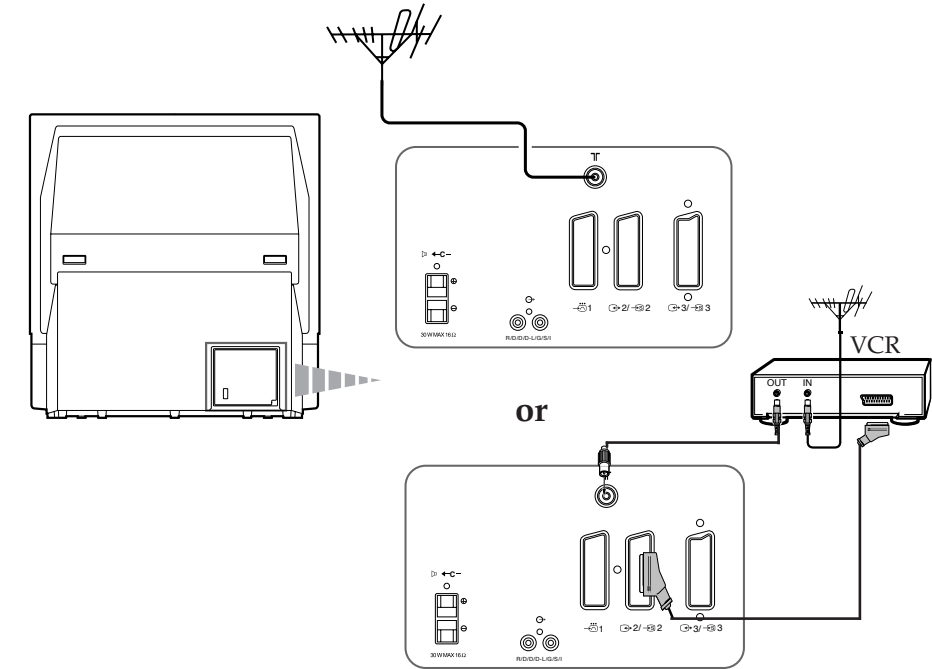

The Scart lead is optional.  
If you use this optional connection it can improve the picture and sound quality when using VCR.

If you do not use a SCART lead, after automatically tuning the projection TV refer to the «Presetting Channels Manually» option in page 10 of the instruction manual, to tune in the TV to the output of your VCR. Also refer to your VCR instruction manual to find out how to find the output channel of your VCR.

# Switching on the projection TV

# 4

# Selecting the language of the menu screens

This projection TV set works with menu screens. By following the instructions below, you can select the desired language of the menu screens.




# 5

# Automatically Tuning the TV

You need to tune the projection TV to receive channels (TV Broadcast).

By following the instructions below, this projection TV automatically searches and stores all available channels for you.



# 6

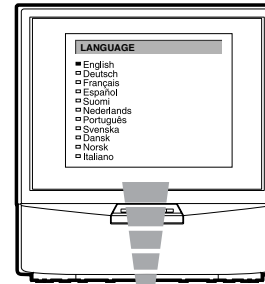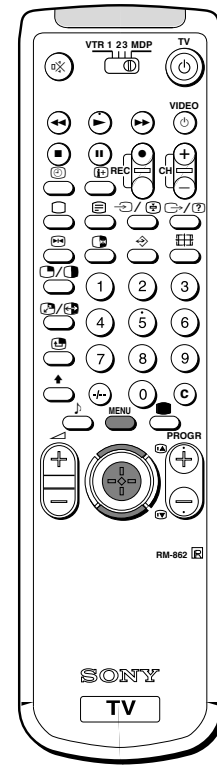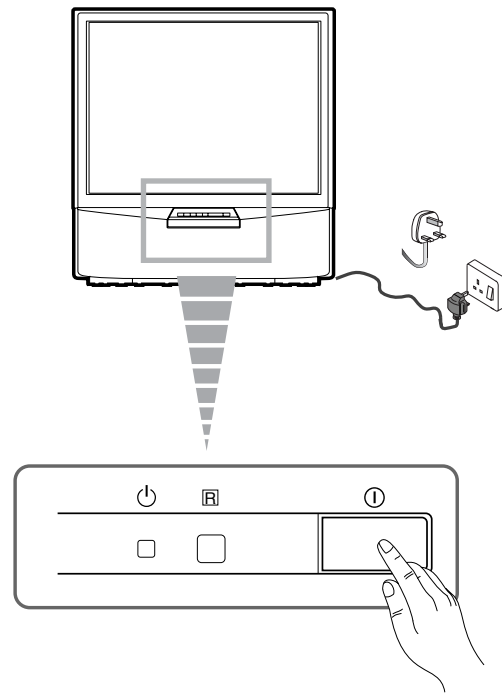


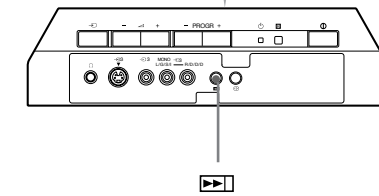
Press the **MENU** button on the remote commander. The **LANGUAGE** menu appears on the screen.



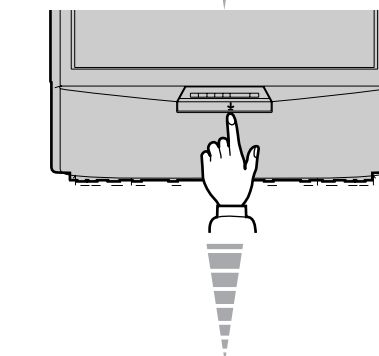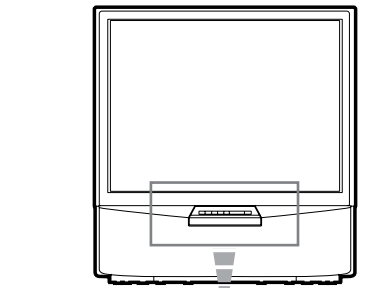

Push the joystick to blue or green to select the language you want. Press the joystick to confirm your selection. Finally press the **MENU** button to restore the normal TV picture.




**1** Press on the mark  on the front panel of the projection TV to reveal the front connectors.




**2** Press and hold the  button on the projection TV until the **AUTO PROGRAMME** menu is displayed and the projection TV automatically searches and stores the channels (TV Broadcast).

 This procedure could take some minutes. Please be patient and do not press any button while the automatic tuning is in progress. Otherwise the automatic tuning will not be completed.

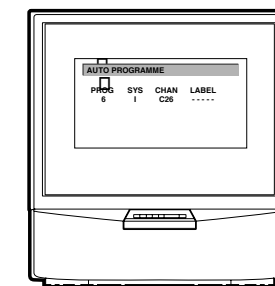

After all available channels are stored, the normal TV picture is shown and your projection TV is ready for use.

 Channels are automatically stored as follows:

Programme 1	BBC1
Programme 2	BBC2
Programme 3	ITV
Programme 4	CH4 or S4C

• You can sort the programme positions to have them appear on screen in the order you like. For details, see "Sorting Programme Positions" on page 11 of the instruction manual.

*Your television stations are now stored in your television's memory.*