

For details, refer to the Operating Instructions.

Quick Setup Guide




DAV-DZ340/DZ740

1 Connecting the speakers

For DAV-DZ740, speaker assembly is necessary. Refer to the supplied "Speaker Installation Guide."
For all models, connect the speaker cords to match the color of the SPEAKERS jacks of the unit.

To connect speaker cords to the speaker

Connect the cord so that the cord's color tube matches the color of the label on the rear of the speaker.

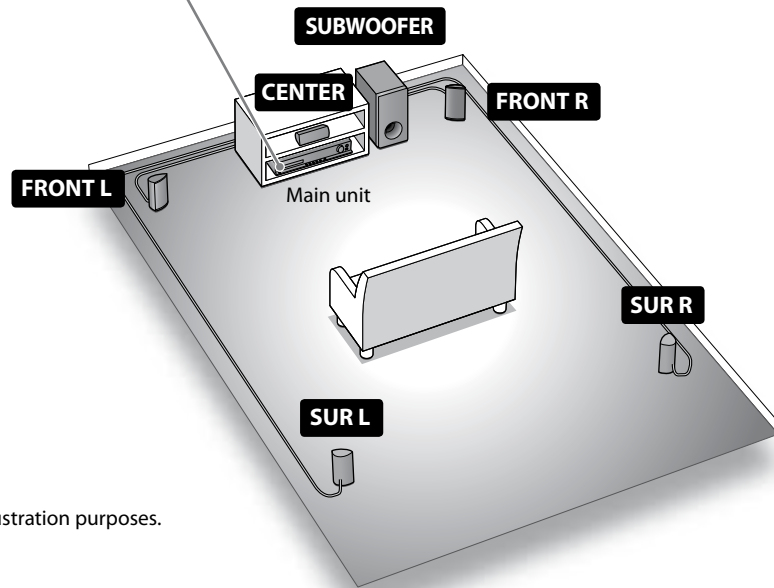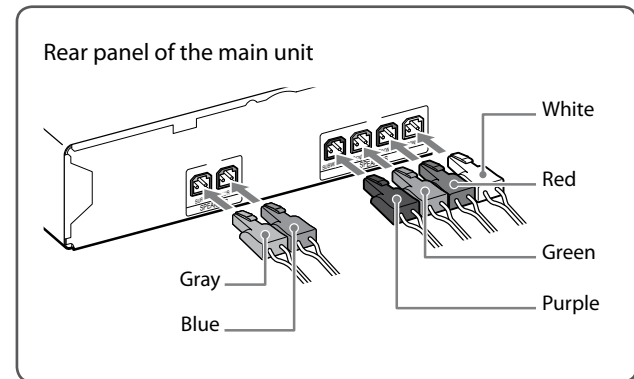
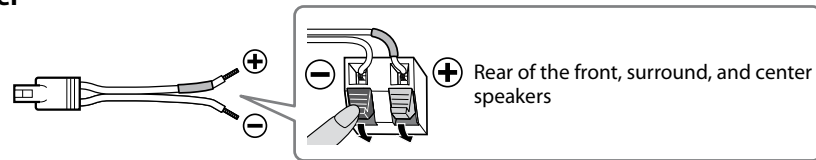


DAV-DZ340 is the model used for illustration purposes.

2 Connecting your TV/set-top box

Depending on the jacks on your TV or set-top box, select the video and audio connection method.



Connecting the video to your TV

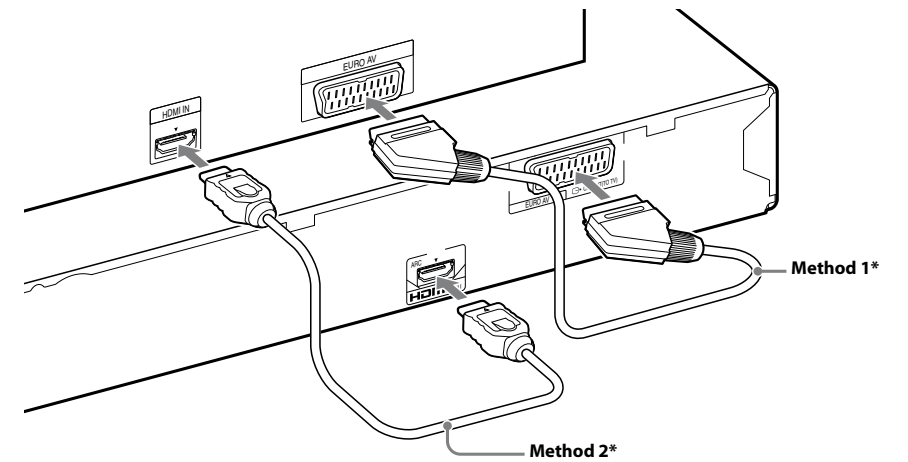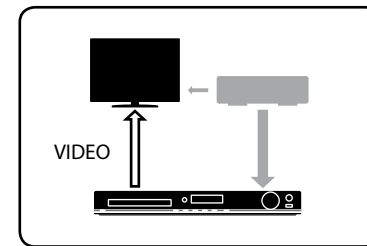

*Not supplied.

Connecting the audio from your set-top box

If you do not use a set-top box, refer to "Connecting your TV/set-top box" in the Operating Instructions.

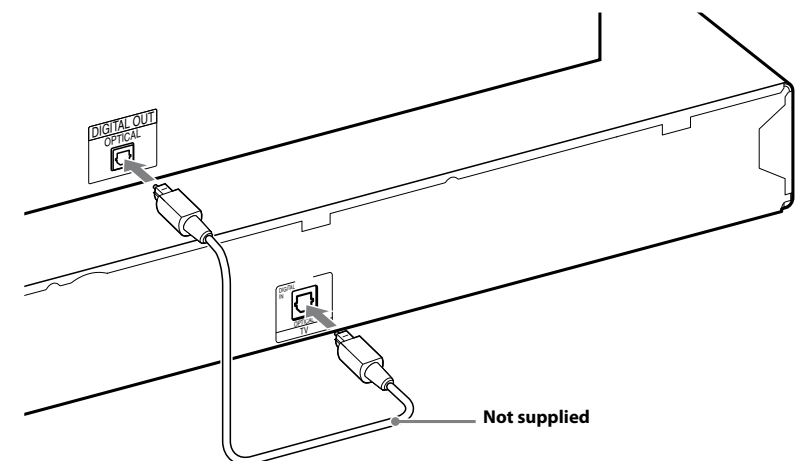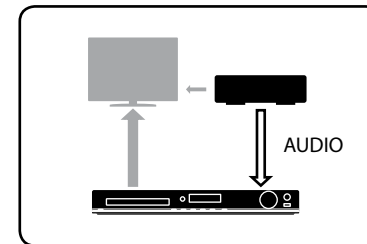


3 Performing the Quick Setup

Note



Do not insert a disc before performing the Quick Setup.

1 Connect the AC power cord.

The shape of the wall outlet differs depending on the area.

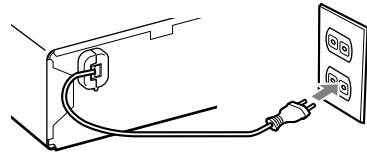


2 Turn on the power of the main unit and TV.

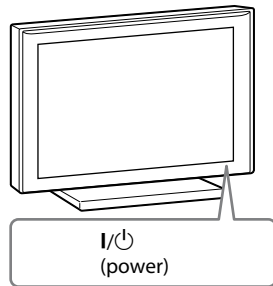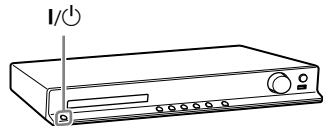



3 Switch the input selector on your TV to display "SONY Home Theatre System."

4 Set each following item, using ←/↑/↓/→ and (+).

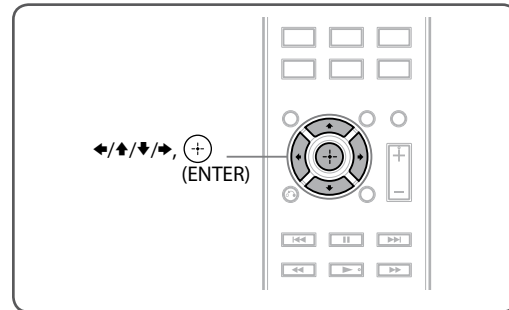


Note


Displayed items vary depending on the area.

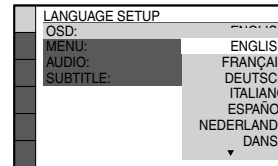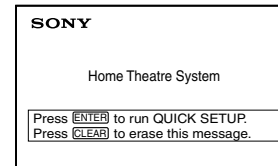


Select an on-screen language.

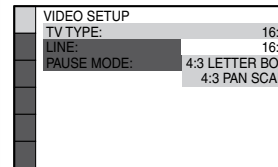


Select the aspect ratio of the connected TV.

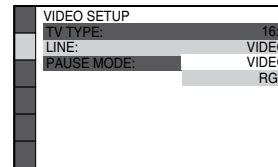

Select the output method for video signals.

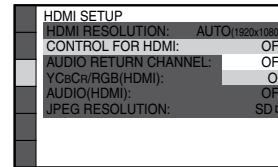

Select [ON] when you connect the main unit and the TV with an HDMI cable.

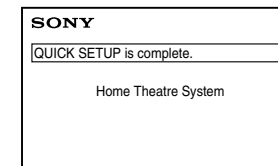

Basic setup is complete. Refer to the supplied Operating Instructions for details on how to enjoy disc playback and many other features.