

Connecting the processor with an optical digital connecting cable


Connection Guide

MDR-DS6500



* 4 2 7 3 0 4 7 1 2 * (1)

© 2011 Sony Corporation Printed in Malaysia

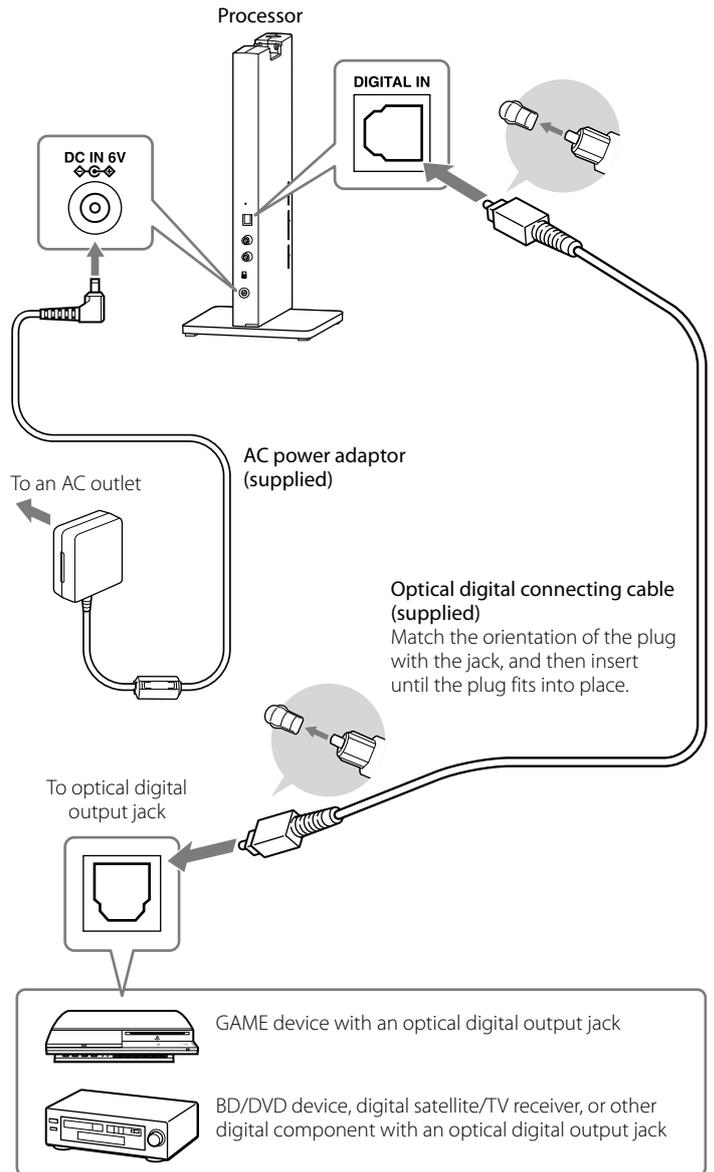

For details, refer to the supplied Operating Instructions.

When no sound is emitted with a digital connection


<input type="checkbox"/>	Are the optical digital output jack of the component and the DIGITAL IN jack of the processor connected?	<input type="checkbox"/>	Start playback on the GAME/BD/DVD device connected to the processor.
<input type="checkbox"/>	Turn on the processor and headphones. Press the POWER button for 2 seconds to turn on the headphones, the power indicator lights up in green.	<input type="checkbox"/>	Raise the volume of the headphones.
<input type="checkbox"/>	Try charging the rechargeable battery of the headphones if it is weak. If the power indicator is still off after charging the battery, take the headphones to your nearest Sony dealer.	<input type="checkbox"/>	Is the optical digital output setting of the connected GAME/BD/DVD device set to ON?
<input type="checkbox"/>	Is DIGITAL selected with the INPUT switch?	<input type="checkbox"/>	Set the sampling frequency of the output signal of the BD/DVD device connected to the processor to 48 kHz/44.1 kHz.

Check the following if no DTS sound is emitted.


- If the GAME/BD/DVD device that you are using does not support DTS, set the GAME/BD/DVD device so that a Dolby Digital or PCM audio track is output.
- If the GAME/BD/DVD device that you are using supports DTS, refer to the instruction manual of the GAME/BD/DVD device and change the DTS digital output setting to ON.

Connecting the processor with an analog cable

When connecting to audio output jacks

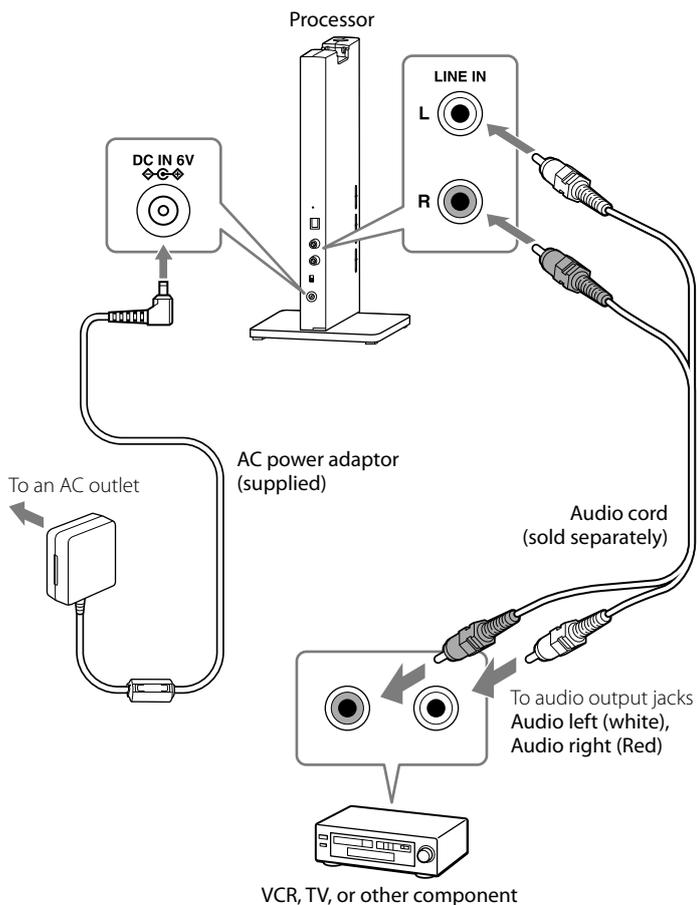

When connecting to stereo mini-jack

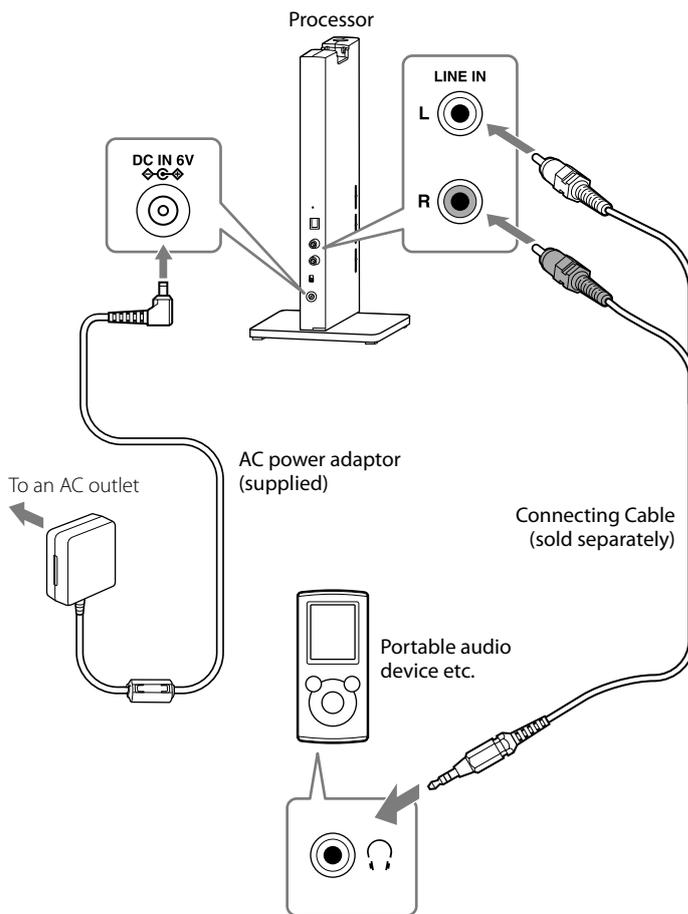

When no sound is emitted with an analog connection

<input type="checkbox"/>	Are the audio output jacks of the component and the LINE IN jacks of the processor connected?	<input type="checkbox"/>	Start playback on the VCR, TV, portable audio device or other component connected to the processor.
<input type="checkbox"/>	Turn on the processor and headphones. Press the POWER button for 2 seconds to turn on the headphones, the power indicator lights up in green.	<input type="checkbox"/>	Raise the volume of the headphones.
<input type="checkbox"/>	Try charging the rechargeable battery of the headphones if it is weak. If the power indicator is still off after charging the battery, take the headphones to your nearest Sony dealer.	<input type="checkbox"/>	Try raising the volume of the connected component.
<input type="checkbox"/>	Is analog selected with the INPUT switch?		