

Micro HI-FI Component System

GB Operating Instructions



©2011 Sony Corporation Printed in China

CMT-CX5BIP

http://www.sony.net/



WARNING

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

The nameplate is located on the bottom exterior of the main unit.

WARNING

To prevent injury, this apparatus must be securely attached to the wall in accordance with the installation instructions.

CAUTION

The use of optical instruments with this product will increase eye hazard.



This appliance is classified as a CLASS 1 LASER product. This marking is located on the bottom exterior of the main unit.

The unit is equipped with three ferrite cores for the speaker cords and power cord. Do not remove the ferrite cores. Doing so may cause EMI (Electro Magnetic Interference) interference.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please

contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Applicable accessory: Remote commander

Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.



Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

License and Trademark Notice


- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- All other trademarks and registered trademarks are of their respective holders. In this manual, ™ and ® marks are not specified.

Location of Controls

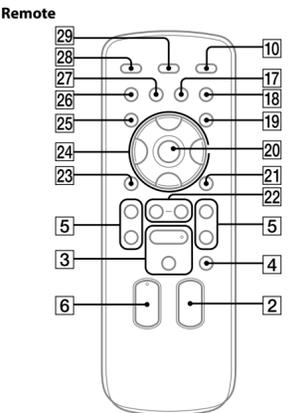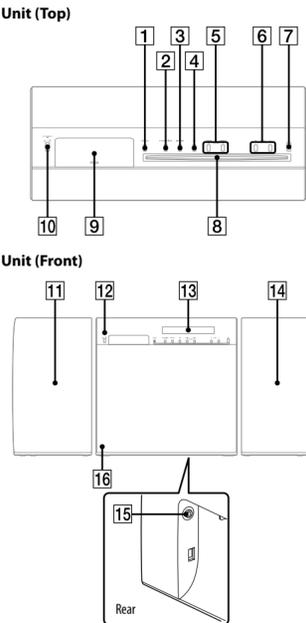

This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.


To use the remote
Slide and remove the battery compartment lid, and insert the two R6 (size AA) batteries (not supplied), side first, matching the polarities shown below.

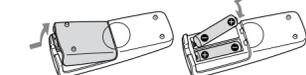

Notes on using the remote

- With normal use, the batteries should last for about six months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.


Getting Started

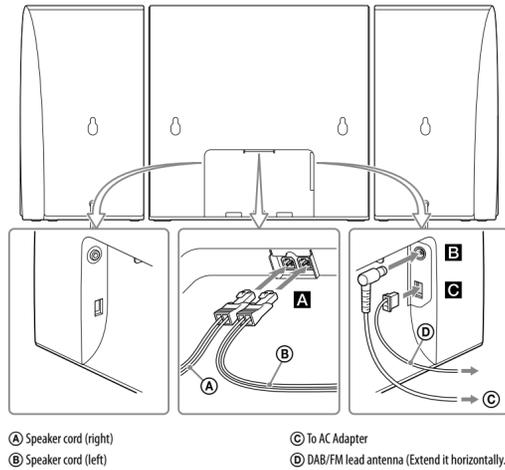

A Speaker cord (right)
B Speaker cord (left)
C To AC Adapter
D DAB/FM lead antenna (Extend it horizontally.)

To use the iPod/iPhone

Push up the panel 9 and insert a Dock Adapter into the Dock before using. When using an iPod model, use the Dock Adapter supplied with your iPod. When using an iPhone model, use the Dock Adapter supplied with the system. For details on the Dock Adapters, refer to the instructions supplied with the Dock Adapters.

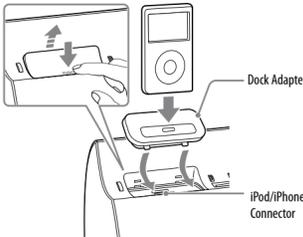

When not using an iPod/iPhone, keep the panel closed. To remove the Dock Adapter, pull it up with your fingernail or a flat object using the slot inside the adapter.

About Dock Adapters for iPhone models

The adapter number is shown on the bottom of Dock Adapter. For iPod models, use the Dock Adapter supplied with your iPod, or purchase a compatible dock adapter from Apple Inc.

- 12: For iPhone
- 15: For iPhone 3G and iPhone 3GS
- 19: For iPhone 4

A Speakers

Connect the speaker cords to the SPEAKERS jacks on the unit.

B Power

- 1 Connect the power cord to the AC adapter.
- 2 Connect the AC adapter to the unit, and then plug the power cord in to a wall outlet.

The demonstration appears in the display. When you press I/⏻ 10, the system turns on and the demonstration automatically ends. When you turn off the system, the demonstration appears again on the display.

When you set the clock, the system goes to Power Saving mode and the demonstration is canceled.

C DAB/ FM antenna

Find a location and an orientation that provide good reception, and then set up the antenna. Keep the antennas away from the speaker cords and the power cord to avoid picking up noise.

To set the dock

- 1 Press I/⏻ 10 to turn on the system.
- 2 Press TIMER MENU 19 to select the clock set mode. If "PLAY SET?" flashes, press ⏪/⏩ 24 repeatedly to select "CLOCK SET?," and then press ⏻ (enter) 20.
- 3 Press ⏪/⏩ 24 repeatedly to set the hour, then press ⏻ (enter) 20.
- 4 Use the same procedure to set the minutes.


The clock settings are reset when you disconnect the power cord or if a power failure occurs.

To display the clock when the system is off

Press DISPLAY 29. The clock is displayed for about 8 seconds.

Installations

Attaching the stand to the system

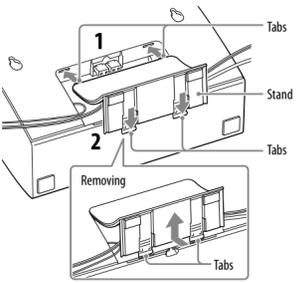

- 1 Insert the tabs of the stand into the grooved section of the unit.
- 2 While holding down bottom of the stand, insert the tabs of the stand into the grooved section.

To remove the stand from the system


While holding down bottom of the stand, pull up the tabs of the stand from the unit.

Hanging the system on a wall


You can install the system on a wall. Before installing, remove the stand from the unit.

- Make sure that the power cord is disconnected from the wall outlet before installing the system.
- Use screws that are suitable for the wall material and strength. Contact a screw shop or professional installer regarding the installation, wall material, or screws.
- Insufficient wall strength or use of inappropriate screws may cause the system to fall and be damaged and may result in personal injury.

- 1 Attach the supplied pads to the rear of the speakers and unit.

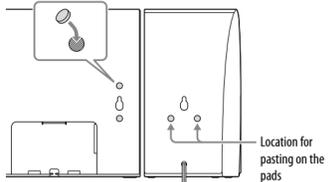


- 2 Prepare screws (not supplied) that are suitable for the holes on the back of the unit and speakers. See the illustrations below.

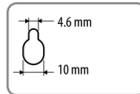


Holes on the back of the unit and speakers


- 3 Fasten the screws to the wall. The commercially available screws should protrude 3 to 4 mm. Install the system on a vertical and flat reinforced area of the wall.

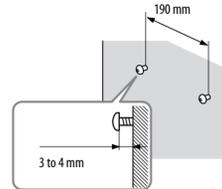

- Tips
- When installing the speakers and unit close together, fasten the screws to the wall according to the ▼ marks on the lower side, as illustrated in this manual.
- The distance between the screw of the unit and a speaker is 90 mm minimum. To install the system leaving space between the unit and speakers, adjust the length of the speaker cord before installing the system.
- You can wrap the speaker cord around the protruding on the rear of the unit, as illustrated.

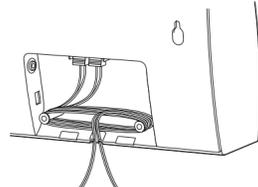

- 4 Hang the system onto the screws. Align the holes the back of the system to the screws, then hang the system onto 4 screws.

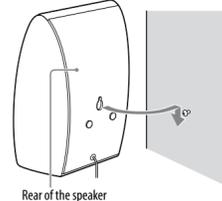

- Notes
- Make sure the screws are properly aligned, with their heads evenly protruding enough to engage the holes on the back of the unit and speakers.
- Be aware that is a person or object happens to hit the system hanging on a wall, it may fall.
- Do not hang or put anything on the system hanging on a wall.
- Depending on the materials of the wall, heat from the system or dust may cause peeling or discoloration of wallpaper.
- Sony is not responsible for accidents or damage caused by improper installation, insufficient wall strength or improper screw installation, natural calamity, etc.

To enjoy better sound quality


You can get better sound quality with optimal location of the speakers. For better sound quality, install the system according to the reference below.

- It is better to arrange left-right placement of the speakers according to the usual orientation of the listener in the room.
- Speakers are better installed at usual ear level in a room.

Operations

Playing a CD/MP3 disc

- 1 Select the CD function. Press FUNCTION +/- 2 repeatedly.
- 2 Insert a disc. Insert a disc in the disc slot with the label side facing forward.

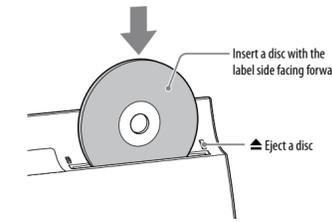

- 3 Start playback. Press ▶ (play) 3.

Notes

- When you turn on the system, the disc is not pulled into the disc slot until "No Disc" appears in the display. Do not attempt to push in the disc until "No Disc" appears.
- Do not insert a disc with non-standard shapes (e.g., heart, square, star). The disc may fall into the system and cause irreparable damage.
- When pressing ▲ (eject) on the unit and then reinserting the disc that appears in the disc slot, do not simply push in the disc. Remove the disc from the disc slot and then reinsert it.
- Do not turn off the system with a disc halfway inserted in the disc slot. Doing so may cause the disc to fall.
- Do not use a disc with tape, seals or paste on it as this may cause malfunction.
- When you eject a disc, handle the disc by its edge. Do not touch the surface.
- Do not push a disc into the disc slot when the system is off. Doing so may cause the system to malfunction.
- Do not insert an 8 cm disc with an adapter. Doing so may cause the system to malfunction.

Other operations

To	Press
Pause playback	⏸ (pause) 3. To resume play, press the button again.
Stop playback	■ (stop) 4.
Select a folder on an MP3 disc	⏪ (select folder) +/- 22 repeatedly.
Select a track or file	⏮ (go back) / ⏭ (go forward) 5.
Find a point in a track or file	Hold down ⏮ (rewind) / ⏭ (fast forward) 5 during playback, and release the button at the desired point.
Select Repeat Play	REPEAT 27 repeatedly until "REP" or "REP1" appears.
Eject a disc	▲ on the unit 7.

To change the play mode

Press PLAY MODE 26 repeatedly while the player is stopped. You can select Normal Play mode (▶) for all MP3 files in the folder on the disc, Shuffle Play mode ("SHUF" or "SHUF*") for folder shuffle), or Program Play mode ("PGM").

* When playing a CD-DA (audio) disc, SHUF (SHUF) Play performs the same operation as normal (SHUF) Play.

Note on Repeat Play

"REP1" indicates that a single track or file is repeated until you stop playback.

Notes on Shuffle Play mode

- When Shuffle Play mode is set to "SHUF" the system shuffle-plays all tracks or files on the disc. When Shuffle Play mode is set to "SHUF*," the system shuffle-plays all tracks or files in selected folder.
- When you turn off the system, the selected Shuffle Play mode ("SHUF" or "SHUF*") is cleared and the play mode returns to Normal Play mode (▶).

Notes on playing MP3 discs

- Do not save other types of tracks or files, or unnecessary folders on a disc that has MP3 files.
- Folders that have no MP3 files are skipped.
- MP3 files are played back in the order that they are recorded onto the disc.
- The system can only play MP3 files that have a file extension of ".mp3".
- Even when file name has the ".mp3" file extension, if the actual file differs, playing this file may generate a loud noise which could damage the speaker system and the system may malfunction.
- The maximum number of:
 - folders is 255 (including the root folder).
 - MP3 files is 511.
 - MP3 files and folders that can be contained on a single disc is 512.
 - folder levels (the tree structure of files) is 8.
- Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.

Notes on playing multisession discs

- If the first session on the disc is a CD-DA session, the other sessions on the disc cannot be recognized regardless of the session format; only CD-DA tracks in the first session can be played back.
- If the session format for the first session is CD-ROM and the following sessions are recorded in the same format, the system will continue to play back MP3 files accordingly in multiple sessions until the system encounters another session recorded in a different format.

