



Cautions for iPod/iPhone connection

- Attach the Dock adapter that matches your iPod/iPhone.
- If you attach a Dock adapter that does not match your iPod/iPhone, or you connect the iPod/iPhone without the Dock adapter, you may damage the connector of both iPod/iPhone and unit. This may result in failure to recognize the iPod/iPhone, or no sound.
- Remove the cover or case from your iPod/iPhone beforehand.

**iPhone, iPhone 3GS, iPhone 3G,
iPhone 4S, iPhone 4**

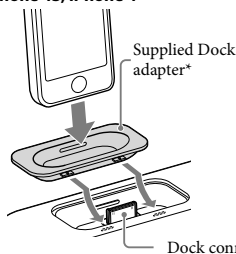

**Except for iPhone, iPhone 3GS,
iPhone 3G, iPhone 4S, iPhone 4**

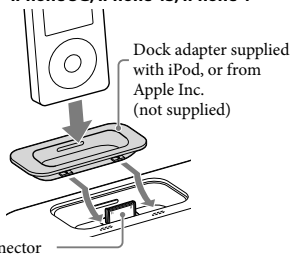

* The adapter number and compatible models

⑫		⑮		⑰	
iPhone		iPhone 3GS iPhone 3G		iPhone 4S iPhone 4	

- When placing or removing the iPod/iPhone, hold it at the same angle as the Dock connector on the unit. Do not pull the iPod forward or push it back on the connector.

