



## Speaker Installation Guide

DAV-DZ840K/DZ940K

©2011 Sony Corporation Printed in China

### Instructions

#### Assembling the tall full stand-type speakers

Spread a cloth on the floor to avoid damaging the floor when you assemble the speakers.

**1 Place the base (D) on the lower part of the speaker (B), and secure it with the 3 screws (E).**  
Be sure to use 3 screws for each speaker.

**2 Fold the speaker cord (C) over about 60 cm to 70 cm and twist it. Thread the speaker cord up through the base (D) and the bottom of the lower part of the speaker (B), and out the top.**

Use the speaker cords as follows:

For DAV-DZ840K/DZ940K: Front left speaker (L): White; Front right speaker (R): Red

For DAV-DZ940K: Surround left speaker (L): Blue; Surround right speaker (R): Gray

**3 Attach the upper part of the speaker (A) on top of the lower part of the speaker (B), and secure it with a screw (F).**

Be careful not to pinch your finger between the lower and upper parts of the speaker.

**4 Connect the speaker cord.**

**5 Remove any slack from the speaker cord by pulling it from below the base (D), and then slide the speaker cord into the indentation at the rear of the upper part of the speaker (A).**

### List of parts

