



# Quick Start Guide

---

## Preparations before connecting to Wi-Fi

Refer to the manuals supplied with your Wi-Fi router (Access Point) or other network communication device and confirm the connection with the network.

## Setting up Wi-Fi

Configure the settings to match your network connection in the Wi-Fi settings window.

## When a Wi-Fi connection problem occurs

Tap [Apps] - [Wi-Fi checker] to launch Wi-Fi checker. Tap [Test] to start checking the connection.




4 2 9 7 7 1 7 1 1



### In the Box

- AC adapter
- AC power cord (mains lead)
- Strap
- Quick Start Guide (this document)
- Important Information

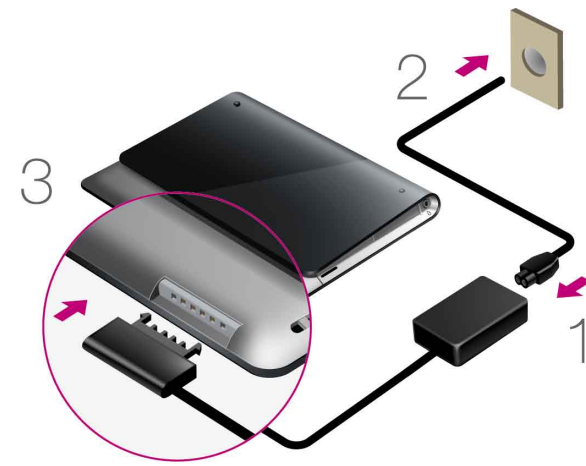


### Charging the Battery

Connect the AC power cord (mains lead), AC adapter, AC outlet (wall socket) and your tablet device in the order shown by the numbers in above figure.

Be sure to plug the AC adapter into the tablet device charge connector in the direction shown above.



### Turning On Your Tablet Device

Press and hold the  (power) button for three seconds. When the tablet device turns on, perform the initial settings according to the displayed instructions.



### Accessing the Help guide

- From your tablet device:  
Tap [Apps] - [Help guide].
- From a PC browser:  
[http://support.sony-europe.com/computing/tablet/manuals/helpguide\\_sgpt1w/GB](http://support.sony-europe.com/computing/tablet/manuals/helpguide_sgpt1w/GB)

### Support Website

For more information about your tablet device, see <http://support.sony-europe.com/computing/tablet/>