





### Inserting a SIM Card

- Make sure all the cables are unplugged from your tablet device, and then shut down the tablet device.
- Make sure there are no protrusions on the cutting surface after detaching the SIM card from its plastic package.


**SONY**<sup>®</sup>

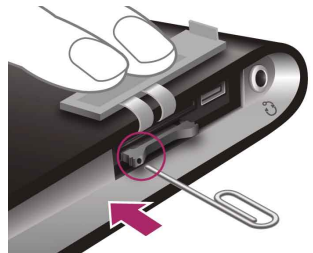


Insert a pin or paper clip (not supplied) into the SIM card eject hole.

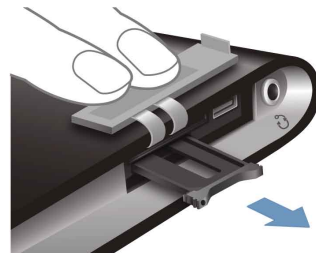

Eject the SIM tray.

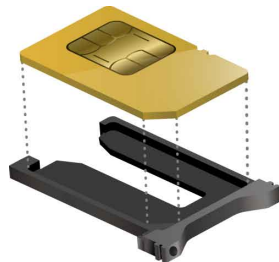

Place a SIM card on the SIM tray so that the cutout of the SIM card fits that of the SIM tray.

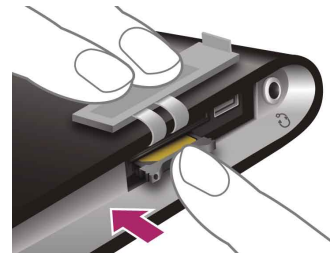

Insert the SIM tray.


# Quick Start Guide





### In the Box

- AC adapter
- AC power cord (mains lead)
- Strap
- Quick Start Guide (this document)
- Important Information

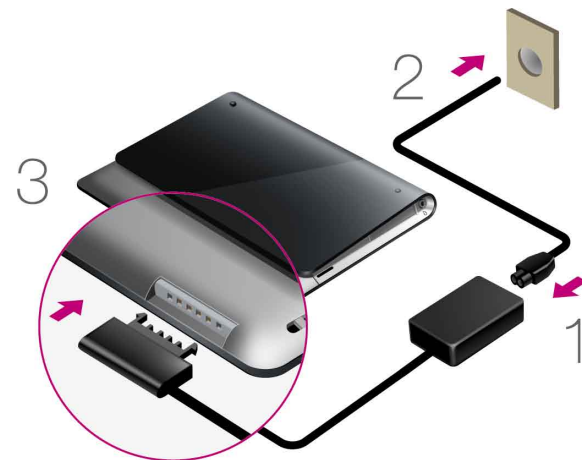


### Charging the Battery

Connect the AC power cord (mains lead), AC adapter, AC outlet (wall socket) and your tablet device in the order shown by the numbers in above figure.

Be sure to plug the AC adapter into the tablet device charge connector in the direction shown above.


 
### Turning On Your Tablet Device

After inserting a SIM card into your tablet device according to the procedures on the back side of this guide, press and hold the  (power) button for three seconds.

When the tablet device turns on, perform the initial settings according to the displayed instructions.



### Accessing the Help guide

- From your tablet device:  
Tap [Apps] - [Help guide].
- From a PC browser:  
[http://support.sony-europe.com/computing/tablet/manuals/helpguide\\_sgpt1/GB](http://support.sony-europe.com/computing/tablet/manuals/helpguide_sgpt1/GB)

### Support Website

For more information about your tablet device, see <http://support.sony-europe.com/computing/tablet/>