

Personal Audio System

GB Operating Instructions



* 4 4 6 2 3 8 1 1 1 * (2)
©2013 Sony Corporation Printed in China

CMT-V11iP

http://www.sony.net/



Made for
iPod iPhone

WARNING

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug of AC adaptor is used to disconnect the AC adaptor from the mains, connect it to an easily accessible AC outlet. Should you notice an abnormality in it, disconnect it from the AC outlet immediately.

 
Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

The AC adaptor is not disconnected from the mains as long as it is connected to the AC outlet, even if the main unit itself has been turned off.

The nameplate is located on the bottom exterior of the main unit and on the surface of the AC adaptor.

CAUTION

The use of optical instruments with this product will increase eye hazard.



This appliance is classified as a CLASS 1 LASER product. This marking is located on the bottom exterior of the main unit.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.

This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.

For customers in Europe and Australia



 
Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Applicable accessory: Remote commander

Location of Controls


Unit (Top)

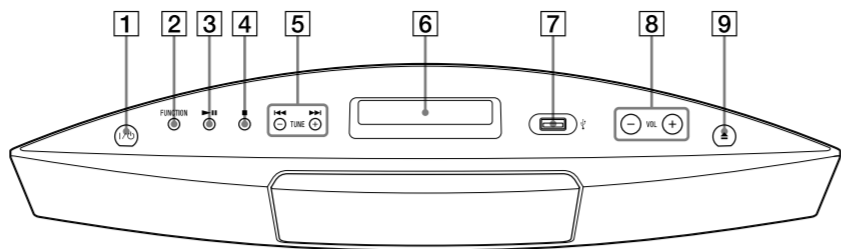

6 Display panel

When the system is powered up, the setting status appears on the display panel. When the system goes to Standby mode, the setting status disappears from the display panel.

 
Unit (Front)

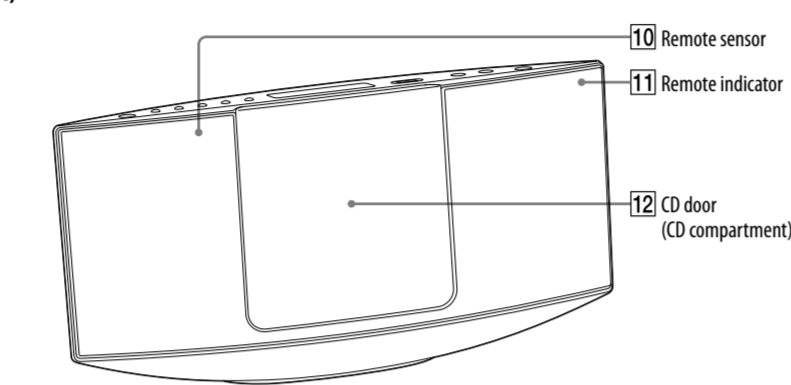

11 Remote indicator

Lights in amber when a signal is received from the remote.

 
Remote

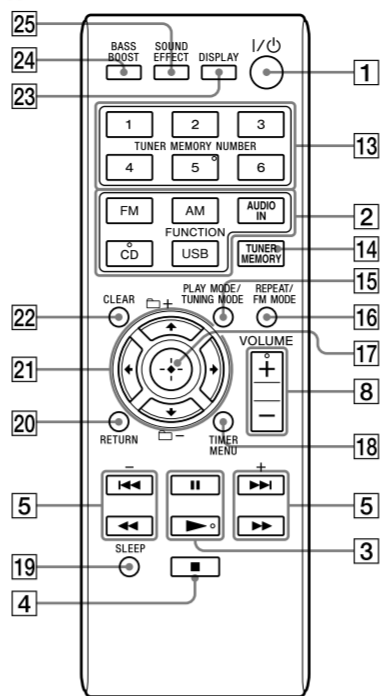

This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

To use the remote

 Remove the battery compartment lid, and insert the two supplied R6 (size AA) batteries, **+** side first, matching the polarities shown below.

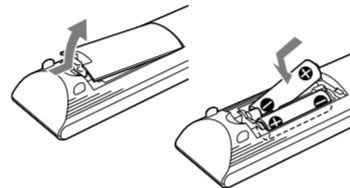

Notes on using the remote

- With normal use, the batteries should last for about 6 months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.
- If you press **1** (1) with the CD door open, the system will automatically close the CD door.
- Do not use a disc with tape, seals or paste on it as this may cause a malfunction.
- When you eject a disc, handle the disc by its edge. Do not touch the surface.

Connecting the iPod/iPhone

Connect an iPod/iPhone to the **+** (USB) port **7** using a USB cable supplied with your iPod/iPhone.

Setting the clock

- 1 Press **1** (1) to turn on the system.
- 2 Press **18** (TIMER MENU) to select the clock set mode. If "PLAY SET" flashes, press **21** (2) repeatedly to select "CLOCK," and then press **17** (17).
- 3 Press **21** (2) repeatedly to set the hour, then press **17** (17).
- 4 Use the same procedure to set the minutes.

 
Note

The clock settings are reset when you disconnect the power cord or if a power failure occurs.

To display the clock when the system is off

Press **23** (DISPLAY). The clock is displayed for about 8 seconds.

Getting Started

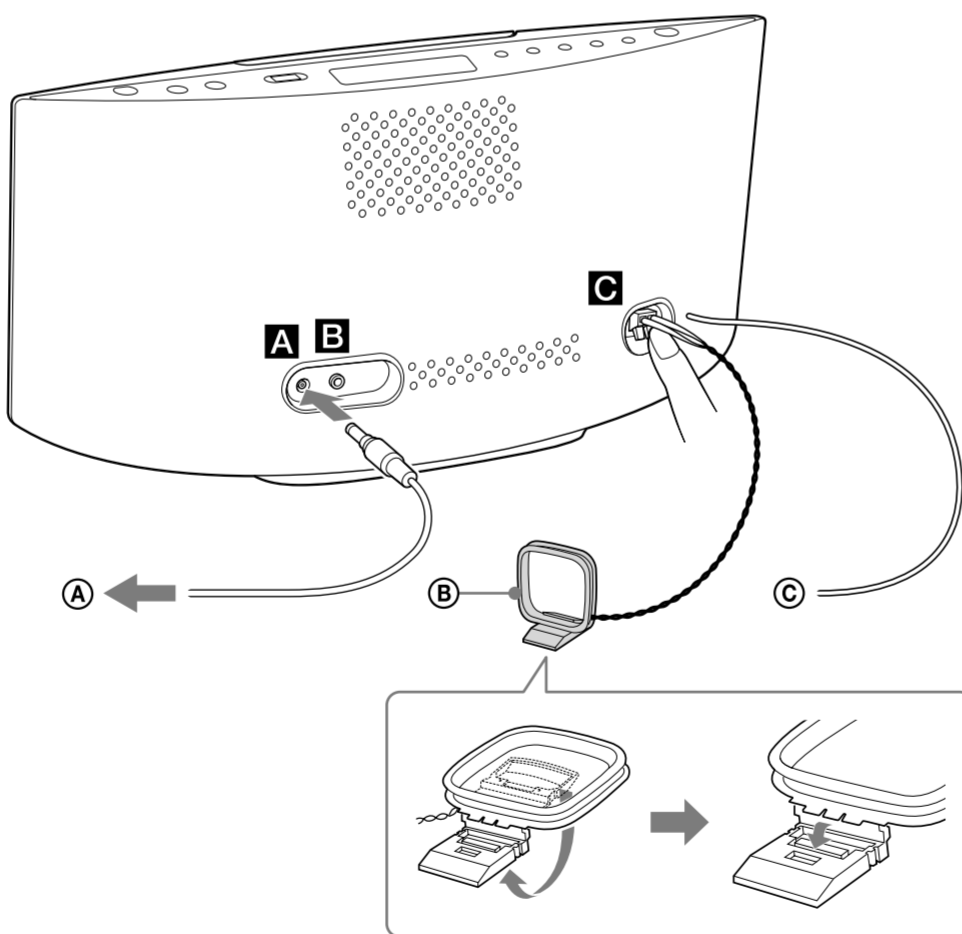

- A** To AC Adaptor
B AM loop antenna
C FM lead antenna (Extend it horizontally.)

A Power (DC IN 9.5 V)

- 1 Connect the AC adaptor to the unit.
- 2 Plug the AC adaptor into a wall outlet.

B AUDIO IN jack

Connect an external audio component.

 
C Antennas

Find a location and an orientation that provide good reception, and then set up the AM antenna. Keep the antenna away from the power cord to avoid picking up noise.

Operations


Playing a CD/MP3 disc

- 1 Select the CD function. Press CD FUNCTION **2** on the remote or press FUNCTION **2** on the unit repeatedly.
- 2 Open the CD door. Press **9** (Open/Close) on the unit. Press **9** (Open/Close) on the unit.

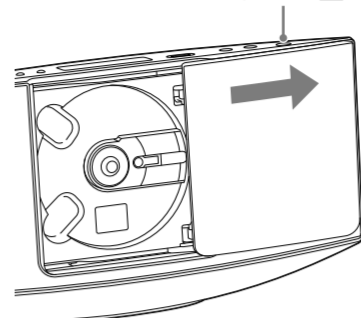

- 3 Set a disc. Push the center part of the disc with two fingers until the disc snaps into its mounted position.

 Set a disc with the label side facing forward.

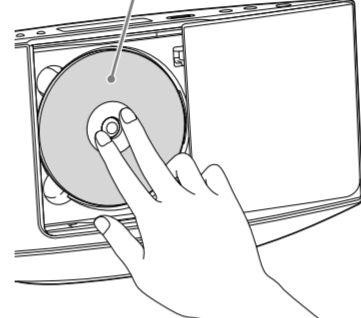

- 4 Close the CD door. Press **9** (Open/Close) on the unit. "READING" appears.
- 5 Start playback. Press **3** on the remote or press **3** on the unit.

To eject a disc

Press **9** (Open/Close) on the unit and remove the disc by pulling up the edge of the disc while holding one finger against the spindle.

Notes

- The system will automatically close the CD door **12** if a few minutes elapse of no operation with the CD door open.
- Do not set a disc with non-standard shapes (e.g., heart, square, star). The disc may fall into the system and cause irreparable damage.
- If you press **1** (1) with the CD door open, the system will automatically close the CD door.
- Do not use a disc with tape, seals or paste on it as this may cause a malfunction.
- When you eject a disc, handle the disc by its edge. Do not touch the surface.

Other operations

To	Press
Pause playback	3 (or 3) on the unit). To resume play, press the button again.
Stop playback	4 .
Select a folder on an MP3 disc	21 repeatedly.
Select a track or file	5 (or 5) on the unit).
Find a point in a track or file	Hold down 5 (or 5) during playback, and release the button at the desired point.
Select Repeat Play	REPEAT 16 repeatedly until "1" appears.
Eject a disc	9 on the unit.

To change the play mode

Press PLAY MODE **15** repeatedly while the player is stopped. You can select Normal Play mode ("Normal") or "FLDR" for all MP3 files in the folder on the disc), Shuffle Play mode ("SHUF" or "FLDR SHUF" for folder shuffle), or Program Play mode ("PGM").

- When playing a CD-DA (audio) disc, FLDR (SHUF) Play performs the same operation as normal (SHUF) Play.
- When Shuffle Play mode is set to "SHUF" the system shuffle-plays all tracks or files on the disc. When Shuffle Play mode is set to "FLDR SHUF" the system shuffle-plays all tracks or files in selected folder.
- When you turn off the system, the selected Shuffle Play mode ("SHUF" or "FLDR SHUF") is cleared and the play mode returns to Normal Play mode ("FLDR").

Notes on Repeat Play

- "1" indicates that all tracks or files will be repeated until you stop playback.
- "1" indicates that a single track or file will be repeated until you stop playback.

Notes on playing MP3 discs

 
- Do not save other types of tracks or files, or unnecessary folders on a disc that has MP3 files.
- Folders that have no MP3 files are skipped.
- The system can only play MP3 files that have a file extension of ".mp3".
- Even if a file name has the ".mp3" file extension, if the actual file differs, playing it may generate loud noise that might even damage the system.
- The maximum number of:
 - folders is 255* (including the root folder).
 - MP3 files is 512.
 - MP3 files in a single folder is 512.
 - folder levels (in the tree structure of files) is 9.

*Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.

* This include folders that have no MP3 or other files. The number of folders that the system can recognize may be less than actual number of folders, depending on the folder structure.

Creating your own program (Program Play)

- 1 Select the CD function. Press CD FUNCTION **2** on the remote or press FUNCTION **2** on the unit repeatedly.
- 2 Select the play mode. Press PLAY MODE **15** repeatedly until "PGM" appears while the player is stopped.
- 3 Select a folder (MP3 disc only). Press **21** repeatedly to select the desired folder.
- 4 Select the desired track or file. Press **5** (or **5**) repeatedly until the desired track or file number appears.

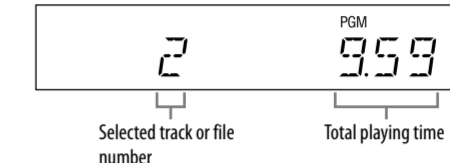

Total playing time for all the programmed tracks or files, including the selected track or file, is displayed at right on the panel.

- 5 Program the selected track or file. Press **17** to enter the selected track or file. "..." appears when the total playing time reaches 100 minutes for a CD or when you program MP3 files.
- 6 Repeat steps 3 through 5 to program additional tracks or files, up to a total of 25 tracks or files.
- 7 To play your program of tracks or files, press **3** (or **3**) on the unit.

The program remains available until you remove the disc from the disc compartment **12** or unplug the power cord. To play the same program again, press **3** (or **3**) on the unit.

To cancel Program Play

Press PLAY MODE **15** repeatedly until "PGM" disappears while the player is stopped.

To delete the last track or file of the program

 
Press CLEAR **22** while the player is stopped.

Listening to the radio

- 1 Select the TUNER function. Press TUNER FM/AM FUNCTION **2** on the remote repeatedly or press FUNCTION **2** on the unit repeatedly.
- 2 Perform tuning.

For automatic scanning

Press TUNING MODE **15** repeatedly until "AUTO" appears, and then press **5** (5). Scanning stops automatically when a station is tuned in, and "TUNED" and "STEREO" (for stereo programs only) light up in the display.



If "TUNED" does not light up and the scanning does not stop, press **4** (4) to stop scanning, then perform manual tuning (below).

When you tune in a station that provides RDS services (European model only), information such as the service name or station name is provided by broadcasts.

For manual tuning

 
Press TUNING MODE **15** repeatedly until "MANUAL" appears, and then press **5** (5) repeatedly to tune in the desired station.

Tip

To reduce static noise on a weak FM stereo station, press FM MODE **16** repeatedly until "MONO" appears to turn off stereo reception.

Presetting radio stations

- 1 Tune in the desired station.
- 2 Press TUNER MEMORY **14** to select the tuner memory mode.

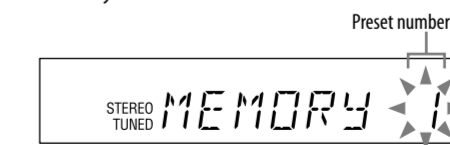

- 3 Press **5** (5) or **21** (21) repeatedly to select the desired preset number. If another station is already assigned to the selected preset number, the station is replaced by the new station.
- 4 Press **17** to register the station.
- 5 Repeat steps 1 through 4 to register other stations. You can preset up to 20 FM and 10 AM stations.

To tune in to a preset radio station

If you registered a radio station to a preset number 1 to 6, the radio station will be tuned in by just pressing the TUNER MEMORY NUMBER (1 to 6) **13** when the system function is set to FM or AM.

If you registered a radio station to a preset number 7 or higher, press TUNING MODE **15** repeatedly until "PRESET" appears then press **5** (5) repeatedly to select the desired preset number.

Playing a file of the USB device

The audio format that can be played back on this system is MP3/WMA*.

* Files with DRM (Digital Rights Management) copyright protection or files downloaded from an online music store cannot be played on this system. If you try to play one of these files, the system plays the next unprotected audio file.

Check the websites below for the information about compatible USB devices.

For customers in Europe:

<http://support.sony-europe.com/>

For customers in Latin America:

<http://www.sony-latin.com/index.crp>

For customers in Asia and other countries/regions:

<http://www.sony-asia.com/support>

- 1 Select the USB function. Press USB FUNCTION **2** on the remote or press FUNCTION **2** on the unit repeatedly.
- 2 Connect the USB device to the **+** (USB) port **7**.
- 3 Start playback. Press **3** on the remote or press **3** on the unit.

Other operations

To	Press
Pause playback	3 (or 3) on the unit). To resume play, press the button again.
Stop playback	4 . To resume play, press 3 (or 3) on the unit). To cancel resume play, press 4 again.
Select a folder	21 repeatedly.
Select a file	5 (or 5) on the unit).
Find a point in a file	Hold down 5 (or 5) on the unit) during playback, and release the button at the desired point.
Select Repeat Play	REPEAT 16 repeatedly until "1" appears.

* When playing a VBR MP3/WMA file, the system may resume playback from a different point.

To change the play mode

Press PLAY MODE **15** repeatedly while the player is stopped. You can select Normal Play mode (playback in sequence of all files on the USB device), Folder Play mode ("FLDR" for all files in the specified folder on the USB device), Shuffle Play mode ("SHUF" or "FLDR SHUF" for folder shuffle), or Program Play mode ("PGM").

Notes on Shuffle Play mode

- When Shuffle Play mode is set to "SHUF" the system shuffle-plays all audio files on the USB device. When Shuffle Play mode is set to "FLDR SHUF" the system shuffle-plays all audio files in selected folder.
- When you turn off the system, the selected Shuffle Play mode ("SHUF" or "FLDR SHUF") is cleared and the play mode returns to Normal Play mode ("FLDR").

Notes on Repeat play

- If you select "1" when the system is in Normal Play mode, the system executes repeat play of all audio files in the USB device until you stop playback. If you select "1" when the system is in Folder Play mode, the system executes repeat play of all audio files in the selected folder until you stop playback.
- If you select "1", the system executes continuous repeat play of the selected file until you stop playback.

Notes

- The playback order for the system may differ from the playback order of the connected digital music player.
- Be sure to turn off the system before removing the USB device. Removing the USB device while the system is turned on may corrupt the data on the USB device.
- When USB cable connection is necessary, connect the USB cable supplied with the USB device to be connected. See the operation manual supplied with the USB device to be connected for details on the operation method.
- It may take time before "READING" appears, depending on the type of USB device connected.
- The system does not support a USB hub. Do not connect the USB device through a USB hub.
- When the USB device is inserted, the system reads all the files on the USB device. If there are many folders or files on the USB device, it may take a long time to finish reading the USB device.
- With some connected USB devices, after an operation is performed, there may be a delay before it is performed by this system.
- Compatibility with all encoding/writing software cannot be guaranteed. If audio files on the USB device were originally encoded with incompatible software, those files may produce noise or interrupted sound, or may not be played back at all.
- This system cannot play audio files on the USB device in the following cases:
 - when the total number of audio files in a folder exceeds 999
 - when the total number of audio files on a USB device exceeds 3000
 - when the total number of folders on a USB device exceeds 1000 (including the "ROOT" folder and empty folders)
 - These numbers may vary depending on the file and folder structure. Do not save other types of files or unnecessary folders on a USB device that has audio files.
- The system can play back to a depth of 9 folders only (including the "ROOT" folder).
- This system does not necessarily support all the functions provided in a connected USB device.
- Folders that have no audio files are skipped.

