

USB Cradle

Manual de instrucciones

Operating Instructions

IMPORTADOR:
SONY ELECTRÓNICOS DE MÉXICO, S.A. DE C.V.
HENRY FORD # 29, FRACC. IND. SAN NICOLAS
TLALNEPANTLA EDO. DE MÉXICO, C.P. 54030
R.F.C. SEM 941001 BJA TEL. 5321-1000

CLIE

PEGA-UC500

Sony Corporation © 2002 Printed in Japan

Español

Nombre del producto: Cradle USB
Modelo: PEGA-UC500

ADVERTENCIA

Para evitar incendios o descargas eléctricas, no exponga la unidad a la lluvia ni a la humedad.

Para evitar recibir descargas eléctricas, no abra el aparato. Solicite asistencia técnica únicamente a personal especializado.

La toma de corriente debe instalarse cerca del equipo y ser de fácil acceso.

- CLIE es una marca comercial de Sony Corporation.
- HotSync es una marca comercial registrada de Palm, Inc. o de sus compañías subsidiarias.
- Las demás marcas comerciales son marcas registradas de sus respectivos propietarios.

Antes de su utilización

Si desea obtener más información sobre la utilización del cradle USB, consulte el manual de instrucciones que se proporciona con el dispositivo de bolsillo CLIE y el presente manual de instrucciones.

Especificaciones

Cradle USB

Dimensiones

71 × 72 × 78 mm (ancho/alto/profundidad) aprox.

Masa 140 g aprox.

Longitud del cable

1,9 m aprox.

Temperatura de funcionamiento

de 5 °C a 35 °C

Adaptador de ca (PEGA-AC510)

Entrada 100 ~ 240 V ca, de 50 a 60 Hz, 0,15 A

Salida 5,7 V cc, 800 mA

Masa 90 g aprox.

Longitud del cable

1,8 m aprox.

Accesorios suministrados

Cradle USB (1)

Adaptador de ca (1)

Manual de instrucciones (1)

El diseño y las especificaciones están sujetos a cambios sin previo aviso.

Notas sobre el uso

- No coloque la unidad en lugares:
 - Extremadamente calientes o fríos
 - Con polvo o suciedad
 - Muy húmedos
 - Sometidos a vibraciones
 - Sujetos a fuertes campos magnéticos
 - Con arena
 - Expuestos a la luz solar directa
- No golpee ni deje caer la unidad.
- Si no va a utilizar la unidad durante un tiempo prolongado, desconecte el adaptador de ca de la toma de ca. Para desconectar el cable de alimentación, tire del enchufe, nunca del cable.
- Asegúrese de que ningún elemento metálico entre en contacto con las piezas metálicas de la unidad. De lo contrario, es posible que se produzca un cortocircuito y que la unidad se dañe.
- No utilice la unidad con el cable dañado, si la ha dejado caer o si está dañada.
- Mantenga siempre limpios los contactos metálicos.
- No desmonte ni modifique la unidad.
- La unidad se calienta durante su funcionamiento. Esto es normal.
- Mantenga la unidad alejada de televisores o receptores AM, ya que pueden interferir con la recepción.

Limpieza

Limpie la unidad con un paño suave y seco, o bien con un paño suave ligeramente humedecido en una solución muy diluida de detergente. No utilice disolventes como el alcohol o la bencina, ya que pueden dañar el acabado.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Owner's Record

The model and lot numbers are located on the bottom of your USB cradle. Record the lot number in the space provided below. Refer to the model and lot numbers when you call your Sony dealer regarding this product.

Model No. PEGA-UC500

Lot No. _____

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

- CLIÉ is a trademark of Sony Corporation.
- HotSync is a registered trademark of Palm, Inc. or its subsidiaries.
- All other trademarks are trademarks of their respective owners.

Before use

For details on how to use the USB cradle, please read the Operating Instructions provided with your CLIÉ handheld and this Operating Instructions manual.

Specifications**USB Cradle**

Dimensions Approx. 71 × 72 × 78 mm (w/h/d)
(Approx. 2⁷/₈ × 2⁷/₈ × 3¹/₈ inches)

Mass Approx. 140 g (4.94 oz.)

Cord length Approx. 1.9 m (74⁷/₈ inches)

Operating temperature
5 °C to 35 °C (41 °F to 95 °F)

AC Adapter (PEGA-AC510)

Input 100 ~ 240 V AC, 50 - 60 Hz, 0.15 A

Output 5.7 V DC, 800 mA

Mass Approx. 90 g (3.17 oz.)

Cord length Approx. 1.8 m (70⁷/₈ inches)

Supplied accessories

- USB cradle (1)
- AC adapter (1)
- Operating Instructions (1)

Design and specifications are subject to change without notice.

Notes on use

- Do not place the unit in locations that are:
 - Extremely hot or cold
 - Dusty or dirty
 - Very humid
 - Vibrating
 - Subject to strong magnetic fields
 - Sandy
 - Exposed to direct sunlight
- Do not apply mechanical shock or drop the unit.
- Unplug the AC adapter from the AC outlet when not in use for a long time. To disconnect the power cord, pull it out by the plug. Never pull the cord itself.
- Be sure that nothing metallic comes into contact with the metal parts of this unit. If this happens, a short circuit may occur and the unit may be damaged.
- Do not operate the unit with a damaged cord or if it has been dropped or damaged.
- Always keep the metal contacts clean.
- Do not disassemble or modify the unit.
- While the unit is in use, it gets warm. This is normal.
- Keep the unit away from TV or AM receivers, as it may disturb reception.

On cleaning

Clean the unit with a soft dry cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine, which may damage the finish.