

SONY®

Gjuha e linjës

Udhëzimet e përdorimit



HT-SF200

KUJDES

Mos e instaloni pajisjen në një hapësirë të mbyllur, siç është një raft librash ose kabinet i integruar.

Për të zvogëluar rrezikun e zjarrit, mos mbuloni hapjen e ventilimit të pajisjes me gazeta, mbulesa tavoline, perde, etj.

Mos e ekspozoni pajisjen në burime të zhveshura të zjarrit (për shembull, qirinj të ndezur).

Për të zvogëluar rrezikun e zjarrit ose goditjeve elektrike, mos e ekspozoni këtë pajisje në dripping ose splashing dhe mos vendosni sende të mbushura me lëngje, të tilla si vazo, në pajisjen.

Pajisja AC nuk është e shkëputur nga rrjeti elektrik për sa kohë që është i lidhur me prizën e rrymës, edhe nëse vetë njësia është fikur.

Pasi që spina kryesore e përshtatësit të rrymës së rrymës përdoret për të shkëputur përshtatësin e rrymës AC nga rrjeti elektrik, lidheni atë me një prizë në dalje të lehtë. Duhet të vëreni një anomali në të, shkëputeni menjëherë nga priza e rrymës.

KUJDES

Rreziku i shpërthimit nëse bateria është zëvendësuar nga një lloj i pasaktë.

Mos i ekspozoni bateritë ose pajisjet me baterinë të instaluar në nxehtësi të tepruar, si rrezet e diellit dhe zjarri.

Vetëm përdorim i brendshëm.

Kabllot e rekomanduara

Kabllot dhe lidhjet e mbrojtura dhe të bazuara duhet të përdoren për t'u lidhur me kompjuterët dhe / ose periferikët pritës.

Për Gjuha e linjës

Emri i tabelës ndodhet në pjesën e poshtme të kryetarit të bareve.

Për përshtatësin AC

Etiketat për adaptorin AC Model nr. dhe Nr. Serial gjenden në pjesën e poshtme të përshtatësit AC.

Për klientët në Evropë

Njoftim për konsumatorët: informacioni i mëposhtëm është i aplikueshëm vetëm për pajisjet e shitura në vendet që zbatojnë direktivat e BE-së.

Ky produkt është prodhuar nga ose në emër të Sony Corporation.
Importues i BE-së: Sony Europe Limited.
Kërkesat në importuesin e BE-së ose në lidhje me përputhjen e produktit në Evropë duhet të dërgohen te përfaqësuesi i autorizuar i prodhuesit, Sony Belgium, Sony Europe Limited, Da Vincilaan 7-D1, 1935 Zaventem, Belgjikë.



Me anë të kësaj, Sony Corporation deklaron se kjo pajisje është në përputhje me Direktivën 2014/53 / BE. Teksti i plotë i deklaratës së konformitetit të BE-së është në dispozicion në adresën në internet: [http:// www.compliance.sony.de/](http://www.compliance.sony.de/)

Kjo pajisje është testuar dhe është konstatuar se është në përputhje me kufijtë e përcaktuar në rregulloren EMC duke përdorur një kablo lidhëse më të shkurtër se 3 metra.



**Shkatërimi i
baterive të
baterive dhe
pajisjeve elektrike
dhe elektronike
(të zbatueshme
në Bashkimin**

**Evropian dhe në vendet e tjera me
sisteme të ndara të grumbullimit)**

Ky simbol i produktit, baterisë ose paketimit tregon se produkti dhe bateria nuk duhet të trajtohen si mbeturina shtëpiake. Për disa bateri ky simbol mund të përdoret në kombinim me simbolin kimik. Simboli kimik për plumbin (Pb) shtohet nëse bateria përmban më shumë se 0,004% të plumbit. Duke siguruar që këto produkte dhe bateritë të eliminohen siç duhet, ju do të ndihmoni për të parandaluar pasojat e mundshme negative për mjedisin dhe shëndetin e njeriut të cilat mund të shkaktohen nga trajtimi i papërshtatshëm i mbeturinave. Riciklimi i materialeve do të ndihmojë në ruajtjen e burimeve natyrore. Në rast të produkteve që për arsye sigurie, performansi ose integriteti të të dhënave kërkojnë një lidhje të përhershme me një bateri të inkuorporuar, kjo bateri duhet të zëvendësohet vetëm nga stafi i kualifikuar i shërbimit. Për të siguruar që bateria dhe pajisjet elektrike dhe elektronike të trajtohen si duhet, dorëzoni këto produkte në fund të jetës në pikën e duhur të grumbullimit për riciklimin e pajisjeve elektrike dhe elektronike. Për të gjitha bateritë e tjera, ju lutemi shihni seksionin se si të hiqni baterinë nga produkti në mënyrë të sigurt. Dorëzoni baterinë në pikën e duhur të grumbullimit për riciklimin e baterive të mbeturinave. Për informacione më të hollësishme rreth riciklimit të këtij produkti ose baterie, ju lutemi kontaktoni Zyrën tuaj Civile lokale, shërbimin tuaj të deponimit të mbeturinave shtëpiake ose dyqanin ku keni blerë produktin ose baterinë.

Përmbajtje

Rreth këtyre udhëzimeve të përdorimit	4
Çfarë është në kutinë.....	5
Çfarë mund të bëni me sistemin	6
Udhëzues për pjesët dhe kontrollet	7

Lidhja e një televizori

Lidhja e një televizori me një kablo HDMI	→ Udhëzuesi i fillimit (dokument të veçantë)
---	--

Lidhja e Sony TV me funksionin BLUETOOTH pa tela	13
Montimi i kryetarit të barit në një mur	15
Kur telekomanda e televizorit nuk punon	17

Dëgjimi i zërit

Dëgjimi i një televizori dhe pajisjeve të tjera	18
Dëgjimi i muzikës në një pajisje USB	19

Përzgjedhja e efektit zanor

Rregullimi i zërit	21
--------------------------	----

Dëgjimi i muzikës / zërit me funksion

BLUETOOTH®

Dëgjimi i muzikës nga një pajisje celulare	23
Aktivizimi i sistemit duke përdorur pajisjen BLUETOOTH	25
Çaktivizimi i funksionit BLUETOOTH	25

Përdorimi i funksioneve të ndryshme

Përdorimi i Funksionit të Kontrollit për HDMI.....	26
Përdorimi i funksionit "BRAVIA" Sync	27
Shënime për lidhjet HDMI	28
Ruajtja e konsumit të energjisë .	28

Problemët dhe zgjidhjet

Problemët dhe zgjidhjet	29
Rivendosja e Sistemit	33

Informacion shtese


Specifikimet	34
Llojet e skedarëve të luajtshëm (USB hyj)	35
Formate Audio të Inputeve të Mbështetura (TV hyk)	35
Në komunikimin BLUETOOTH	36
Masat paraprake	37

Rreth këtyre udhëzimeve të përdorimit


- Udhëzimet në këto udhëzime përdorimi përshkruajnë kontrollet në telekomandë.
- Disa ilustrime paraqiten si vizatime konceptuale dhe mund të jenë të ndryshme nga produktet aktuale.
- Cilësimet e paracaktuara janë nënvizuar në çdo përshkrim të funksionit.

Çfarë është në kutinë

- Gjuha e linjës (1)

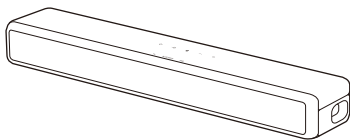


- Telekomanda (1)

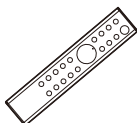

- R03 (size AAA) bateri (2)



- Kablo optike dixhitale (1)

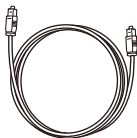

- Përshtatës AC (1)



- Kordoni elektrik i rrymës (1)



- Rritet për montimin e murit (2)



 
- MODELI I MONTIMIT TE PERHEVE (1)



- Udhëzuesi i fillimit



- Udhëzimet e përdorimit




Çfarë mund të bëni me sistemin

"Dëgjimi i një televizori dhe pajisjeve të tjera" (faqe 18)




"Lidhja e Sony TV me funksionin BLUETOOTH pa tel" (faqe 13)

 Lojtar Blu-ray Disc™, kabllore, satelitore etj.



Lidhja e televizorit (referojuni "Udhëzuesi i fillimit" (dokument i veçantë))

"Përdorimi i Funksionit të Kontrollit për HDMI" (faqe 26)
"Përdorimi i" Funksionit Sync "të BRAVIA" (faqe 27)

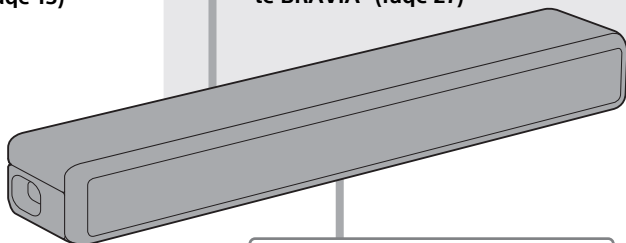

"Dëgjimi i muzikës nga një pajisje celulare" (faqe 23)




"Dëgjimi i muzikës në një pajisje USB" (faqe 19)



Udhëzues për pjesët dhe kontrollet

Detajet janë lënë jashtë nga ilustrimet.

Gjuha e linjës

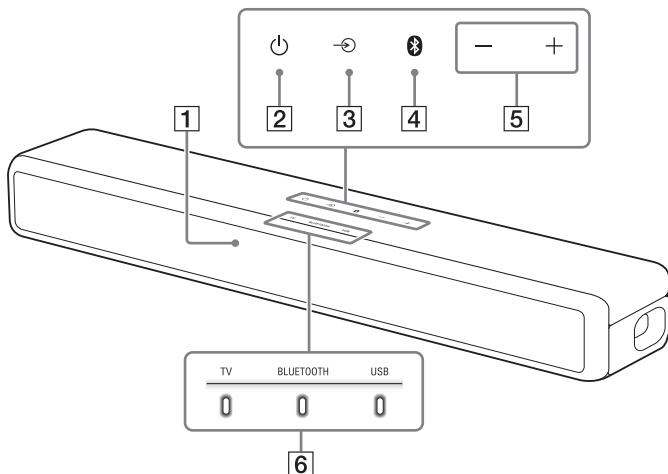Pjesa e përparme



- 1 Sensori i telekomandës**
Pikësoni telekomandën në sensorin e telekomandës për të përdorur sistemin.
- 2  (power) buton**
Aktivizon sistemin ose e vendos në gjendjen e gatishmërisë.
- 3  (input select) buton (faqe 18)**
- 4 BLUETOOTH buton (faqe 23)**
- 5 +/- (volume) butonat**
- 6 Treguesit**
Për detaje, shihni "Për treguesit në kryetarin e bareve" (faqe 8).

Për treguesit në Gjuha e linjës


Ndriçimi dhe ndezja e treguesit (tregjeve) në Kryetarin e Barit tregojnë hyrjen ose gjendjen e pajisjes së hyrjes.

Treguesit	Status
TV 0	<ul style="list-style-type: none">• Dritat: Është përzgjedhur hyrja e televizorit.
BLUETOOTH 0	<ul style="list-style-type: none">• Dritat në ngjyrë blu: Lidhja BLUETOOTH është vendosur (përzgjedhet hyrja BLUETOOTH).• Ndizet dy herë: Modaliteti i luajtjes ndryshohet.• Flakëron ngadalë në ngjyrë blu (rreth një herë në sekondë): Lidhja me BLUETOOTH është duke u tentuar.
USB 0	<ul style="list-style-type: none">• Dritat: Është përzgjedhur hyrja e USB.• Ndizet dy herë: Modaliteti i luajtjes ndryshohet.• Ndez tre herë në fillim, pastaj ndizet ngadalë në mënyrë të përsëritur: Kur lidh një pajisje të pambështetur.• Ndizet në mënyrë të përsëritur: Ndërsa lexoni të dhënat e pajisjes së lidhur USB.
TV BLUETOOTH USB 0 0 0	<ul style="list-style-type: none">• Drita: Sistemi lidhet me televizorin me funksionin BLUETOOTH (përzgjidhet hyrja e televizorit).

Treguesit flenë kur ndezën ose fikën funksionin e funksionimit ose funksionojnë telekomanda.

Treguesit	Status
TV 0	<ul style="list-style-type: none">• Ndizet dy herë: Një nga funksionet e mëposhtme është caktuar.<ul style="list-style-type: none">– Modaliteti i natës (faqe 21)– Modaliteti i zërit (faqe 21)• Ndez një herë: Kanali audio është vendosur në Main (faqe 22), modaliteti i zërit është përzgjedhur (faqe 21) ose një nga funksionet e mëposhtme është caktuar për të fikur.<ul style="list-style-type: none">– Modaliteti i natës (faqe 21)– Modaliteti i zërit (faqe 21)
USB 0	<ul style="list-style-type: none">• Ndizet dy herë: Një nga funksionet e mëposhtme është caktuar.<ul style="list-style-type: none">– Dolby DRC (faqe 22)– Control for HDMI (faqe 26)– BLUETOOTH gatishmëri (faqe 25)– Funksioni BLUETOOTH (faqe 25)– Pritjes automatike (faqe 28)– Riprodhuesi IR (faqe 17)– Volumi automatik (faqe 22)– Modaliteti i montimit në mur (faqe 15)• Ndez një herë: Kanali audio është i vendosur në Nën (faqe 22) ose një nga funksionet e mëposhtme është cilësuar të fikur.<ul style="list-style-type: none">– Dolby DRC (faqe 22)– Control for HDMI (faqe 26)– BLUETOOTH gatishmëri (faqe 25)– Funksioni BLUETOOTH (faqe 25)– Pritjes automatike (faqe 28)– Riprodhuesi IR (faqe 17)– Volumi automatik (faqe 22)– Modaliteti i montimit në mur (faqe 15)

Rear

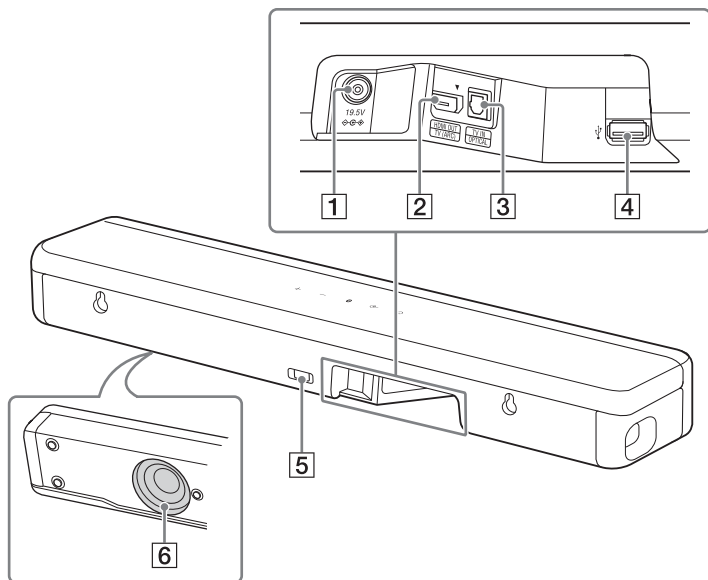

1 DC IN terminal

2 HDMI OUT (TV (ARC)) jack

Connect a TV that has an HDMI input jack with an HDMI cable. The system is compatible with Audio Return Channel (ARC). ARC is the function that sends TV sound to an AV device such as the system from the TV's HDMI jack.

3 TV IN (OPTICAL) jack

4 USB port (page 19)

5 IR repeater (page 17)


Transmits the remote signal of the TV remote control to the TV.

6 Subwoofer

Remote Control

Some buttons function differently depending on how long the button is pressed. The icons below indicate how long to press the button.

- : Press the button.
- (with a horizontal line through it): Press and hold the button for 5 seconds.

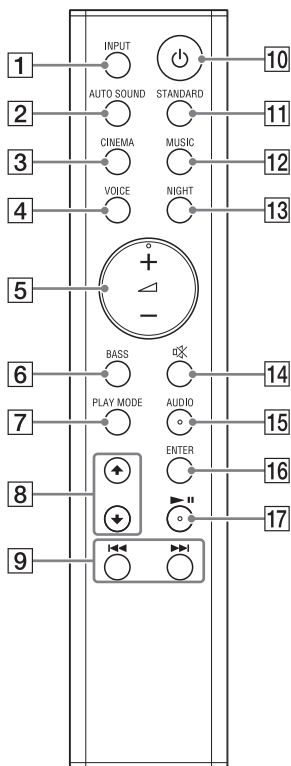

1 INPUT (page 18)

Selects the playback source. When you press INPUT once, the current input indicator flashes.

Press INPUT again to select the device you want.

Each time you press INPUT, the input changes cyclically as follows.
TV input → BLUETOOTH input → USB input

2 AUTO SOUND

●: Selects AUTO SOUND for the sound effect. (page 21)

● (with a horizontal line through it): Turns on/off the indicators on the Bar Speaker. (page 8)

3 CINEMA

●: Selects CINEMA for the sound effect. (page 21)

● (with a horizontal line through it): Turns on/off the auto standby function. (page 28)

4 VOICE

●: Turns on/off the voice mode. (page 21)

● (with a horizontal line through it): Turns on/off the Control for HDMI function. (page 26)

5 ▲ (volume) +*/-

Adjusts the volume.

6 BASS

●: Adjusts the level of the bass tone. (page 22)


● (with a horizontal line through it): Turns on/off the wall mount mode. (page 15)

7 PLAY MODE (page 19)

Selects the play mode for USB playback.


8 ▲/▼ (page 19)

Select the content on the TV screen for USB playback.

9  **(previous/next)**
(page 19, 23)


Pressing the button shortly goes to the beginning of the previous or next file.


Pressing and holding searches backward or forward (rewind/fast forward).

10  **(power)**


Turns on the system or sets it to standby mode.


11 **STANDARD**

: Selects STANDARD for the sound effect. (page 21)


: Turns on/off the IR repeater function. (page 17)


12 **MUSIC (page 21)**


: Selects MUSIC for the sound effect. (page 21)

: Turns on/off the function that adjusts the volume level automatically. (page 22)

13 **NIGHT**


: Turns on/off the night mode. (page 21)


: Turns on/off the BLUETOOTH standby mode. (page 25)

14  **(muting)**



Turns off the sound temporarily or turn on the sound.

15 **AUDIO***

: Selects the audio channel for Dolby Digital multiplex broadcast. (page 22)



: Turns on/off the Dolby DRC function. (page 22)

16 **ENTER (page 19)**

Plays the content that is selected by / for USB playback.

17  **(play/pause)* (page 19, 23)**

Pauses or resumes playback.

* The AUDIO, , and  buttons have a tactile dot. Use it as a guide during operation.

About the replacement of batteries for the remote control

When the system does not respond by operating with the remote control, replace two batteries with new batteries.

Use R03 (size AAA) manganese batteries for replacement.

Connecting a TV


Connecting a TV with an HDMI Cable

Refer to Startup Guide (separate document).

Connecting Sony TV with the BLUETOOTH Function Wirelessly

When using Sony TV* with the BLUETOOTH function, you can listen to sound of the TV or device that is connected to the TV by connecting the system and TV wirelessly.

* The TV needs to be compatible with A2DP (Advanced Audio Distribution Profile).

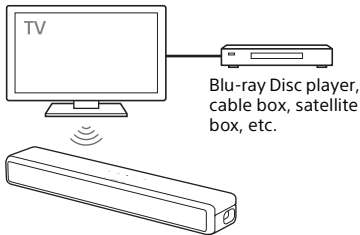

Note


If connecting the system and TV by using the BLUETOOTH function, you cannot display the operation screen for the system such as the USB playback screen, and use the function of the system other than the function of listening to sound of the TV or device that is connected to the TV. To use all the functions of the system, connect the system and TV with an HDMI cable (not supplied). For details about

connections and operations to listen to TV sound by connecting with an HDMI cable, refer to Startup Guide (separate document).

Connecting the System and TV Wirelessly


To connect the system and TV wirelessly, you need to perform pairing of the system and TV by using the BLUETOOTH function.

Pairing is the process required to mutually register the information on BLUETOOTH devices to be connected wirelessly in advance.

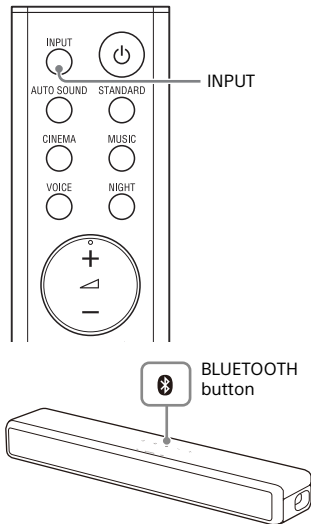

- 1 Press and hold the BLUETOOTH button on the Bar Speaker and INPUT on the remote control simultaneously for 5 seconds.**

The TV and BLUETOOTH indicators flash twice, the system enters the pairing mode, then the BLUETOOTH indicator flashes quickly.

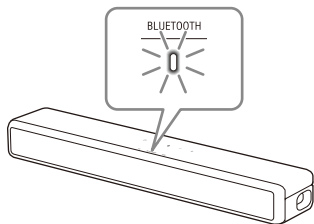

2 On the TV, search the system by performing the pairing operation.


The list of the BLUETOOTH devices that are searched appears on the TV screen.

For the operation method to pair the BLUETOOTH device to the TV, refer to the operating instructions of the TV.

3 Pair the system and TV by selecting "HT-SF200/201" from the list on the TV screen.

4 Make sure that the BLUETOOTH and TV indicators on the Bar Speaker light.

A connection between the system and TV has been established and TV sound is output from the system. After pairing is completed, TV sound is output from the system automatically when the system is turned on.

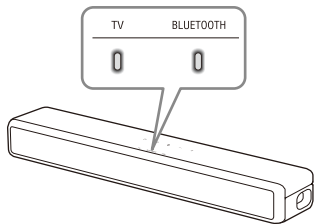

Notes

- If the TV sound is not output from the system, press INPUT repeatedly to select

the TV input and check the status of the indicators on the Bar Speaker.

- The BLUETOOTH and TV indicators light: The system and TV are connected and TV sound is output from the system.
- The BLUETOOTH indicator flashes quickly: Perform pairing on the TV.
- The TV indicator lights: Perform steps again from the start.
- When you connect the system and TV with an HDMI cable (not supplied), the BLUETOOTH connection is canceled. To connect the system and TV with the BLUETOOTH function again, disconnect the HDMI cable, then perform the connecting operation from the start.
- To pair the another TV after the first TV is paired, turn off the paired TV, then pair the new one by following the steps of a mobile device connection (page 23).

Listening to the Sound of the TV or Device that is Connected to the TV

You can turn the system on/off, adjust the volume, and mute the sound by using the TV remote control when connecting the TV to the system wirelessly.

1 Turn the TV on with the TV remote control.

The system is turned on by interlocking with the TV power, and TV sound is output from the system.

2 Select the program or input of the device by using the TV remote control.

The sound of the image displayed on the TV screen is output from the system.

3 Adjust the volume of the system by using the TV remote control.

When pressing the mute button on the TV remote control, the sound is muted temporarily.


Tip

When the TV is turned off, the system is also turned off by interlocking with the TV power.

About operations with the remote control that is supplied with the system

You can use the following buttons.

You can adjust the level of the bass tone and sound quality in addition to turning the system on/off and adjusting volume that can be operated by the TV remote control.

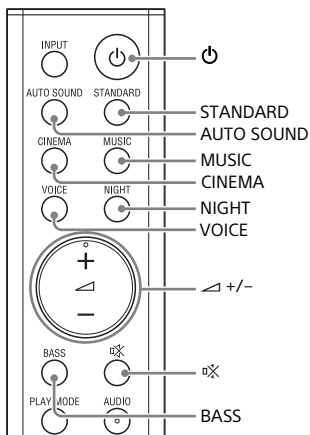


Note

If you select the USB input on the remote control supplied with the system, the TV sound is not output from the system. To output the TV sound, press INPUT on the remote control to select the TV input.

Mounting the Bar Speaker on a Wall



You can mount the Bar Speaker on a wall.

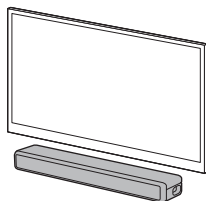

Notes


- Prepare screws (not supplied) that are suitable for the wall material and strength. As a plasterboard wall is especially fragile, attach the screws securely in the wall beam. Install the speakers horizontally, hung by screws in studs in a continuous flat section of the wall.
- Have the installation done by a Sony dealer or licensed contractor and pay special attention to safety during the installation.
- Sony shall not be held responsible for accidents or damage caused by improper installation, insufficient wall strength, improper screw installation or natural disaster, etc.

 - 1** Prepare two screws (not supplied) that are suitable for the wall mount holes on the rear of the Bar Speaker.

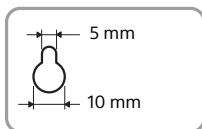

Hole on the rear of the Bar Speaker



- 2** Stick WALL MOUNT TEMPLATE (supplied) on a wall.

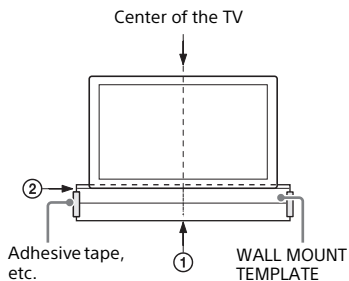

- 1** Align TV CENTER LINE (①) of WALL MOUNT TEMPLATE with the center line of your TV.


- 2** Align TV BOTTOM LINE (②) of WALL MOUNT TEMPLATE with the bottom of your TV, then stick WALL MOUNT TEMPLATE on a wall by using a commercially available adhesive tape, etc.

- 3** Fasten the screws into the marks (A) on SCREW LINE (③) of WALL MOUNT TEMPLATE as in the illustration below.

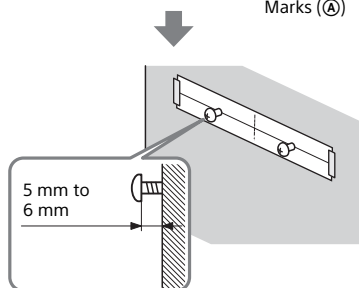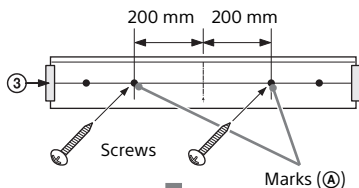


- 4** Remove WALL MOUNT TEMPLATE.

- 5** Attach the cushion pads (supplied) below the holes on the rear of the Bar Speaker.

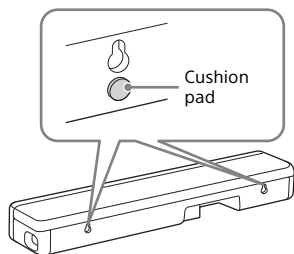

6 Hang the Bar Speaker on the screws.

Align the holes of the rear of the Bar Speaker with the screws, then hang the Bar Speaker on the two screws.

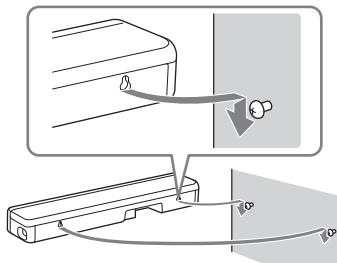

7 Press and hold BASS for 5 seconds to set the wall mount mode to on.

The USB indicator flashes twice. You can optimize the sound of the system that is mounted on a wall.

Notes

- When sticking WALL MOUNT TEMPLATE, smooth it out fully.
- To set the wall mount mode to off, press and hold BASS for 5 seconds. The USB indicator flashes once.

When the TV Remote Control does not Work

When the Bar Speaker obstructs the remote control sensor of the TV, the TV remote control may not work. In that case, enable the IR repeater function of the system.

You can control the TV with the TV remote control by sending the remote signal from the rear of the Bar Speaker.

Press and hold STANDARD for 5 seconds to set the function to on or off.

IR repeater on

The USB indicator flashes twice.


IR repeater off

The USB indicator flashes once.

Notes


- Be sure to check that the TV remote control cannot control the TV, and then set the IR repeater function to on. If it is set to on when the remote control can control the TV, appropriate operation may not be obtained because of the interference between the direct command from the remote control and the command via the Bar Speaker.
- On some TVs, this function may not work correctly. In this case, place the Bar Speaker slightly further away from the TV.

Listening to a TV and Other Devices

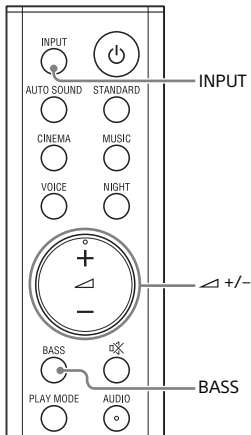

1 Press INPUT repeatedly.

When you press INPUT once, the current input indicator flashes. Press INPUT again to select the device you want. The indicator of the selected device lights up. Each time you press INPUT, the input changes cyclically as follows. TV input → BLUETOOTH input → USB input

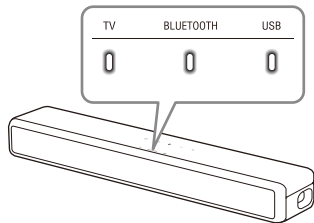

TV input

- TV that is connected to the TV IN (OPTICAL) jack
- TV compatible with the Audio Return Channel (ARC) function that is connected to the HDMI OUT (TV (ARC)) jack

When you connect the TV to both the HDMI OUT (TV (ARC)) and TV IN (OPTICAL) jacks, the jack for audio input is selected depending on which audio signal is input first.

BLUETOOTH input

BLUETOOTH device that supports A2DP
For details, see "Listening to Music/ Sound with the BLUETOOTH® Function" (page 23).

USB input

USB device that is connected to the ψ (USB) port
For details, see "Listening to Music on a USB Device" (page 19).

2 Adjust the volume.

- Adjust the volume by pressing \triangleleft +/- on the remote control.
- Adjust the level of the bass tone by pressing BASS on the remote control (page 22).

Tip

You can also select the input by pressing \rightarrow on the Bar Speaker.


Listening to Music on a USB Device

You can play music files stored on a connected USB device.


For playable types of files, see “Playable Types of Files (USB Input)” (page 35).

Notes

- To view the USB content list on the TV screen, make sure you connect the system to the TV using an HDMI cable.
- Change the input of the TV to the input to which the Bar Speaker is connected.

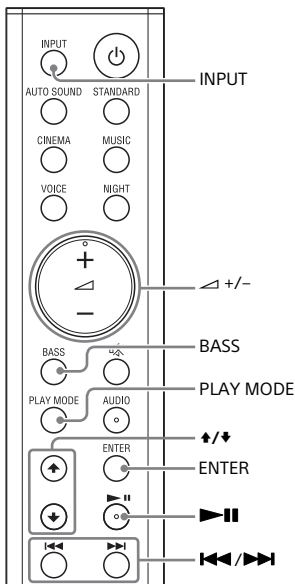

- 1** Connect the USB device to the  (USB) port.

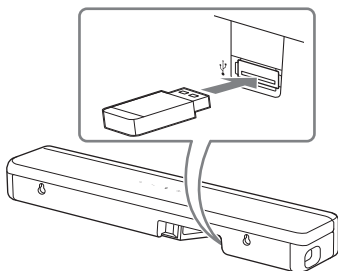

- 2** Press **INPUT** repeatedly to select “USB.”

The USB indicator lights up and the USB content list appears on the TV screen.

- 3** Press **▲/▼** to select the content you want, then press **ENTER**.

 
The selected content starts playing.

- 4** Press **PLAY MODE** repeatedly to select the play mode you want.

- None: Plays back all tracks.
- [1] (Repeat One): Repeats one track.
- [] (Repeat Folder): Repeats all tracks in a folder.
- [] (Random): Repeats all tracks in a folder in random order.
- [] (Repeat All): Repeats all tracks.

The USB indicator flashes twice each time you press **PLAY MODE**.

- 5** Adjust the volume.

- Adjust the volume by pressing  +/- on the remote control.
- Adjust the level of the bass tone by pressing **BASS** on the remote control (page 22).


Other operations

To	Do this
Pause or resume playback	Press ▶ .
Select the previous or next track	Press ◀◀/▶▶ .
Search backward or forward (rewind/fast forward)	Press and hold ◀◀/▶▶ .

Notes

- Do not remove the USB device during operation. To avoid data corruption or damage to the USB device, turn the system off before connecting or removing the USB device.
- The USB indicator flashes three times first, then flashes slowly repeatedly if you connect an unsupported USB device.

Information of USB Device on the TV Screen

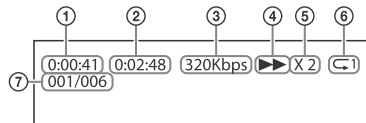

- ① Playing time
- ② Total playing time
- ③ Bit rate
- ④ Playback status
- ⑤ Rewind/fast forward speed
- ⑥ Repeat play status
- ⑦ Selected file index/Total files in the folder

The following messages appear on the TV screen.

- [File Unsupported]
Appears for 1 second at the bottom left side when unsupported file is skipped.
- [Device Not Support]
 - A USB device is not supported.
 - Device inserted is a non-USB device, a bad USB device, or a USB device that has no files on it.
- [No USB]
No USB device is inserted.
- [Waiting]
The system is searching the USB device.
- [This device is empty]
There are no playable files in the USB device.

Notes


- Depending on the playback source, some information may not be displayed.
- Depending on the play mode, the information displayed may be different.

Selecting the Sound Effect

Adjusting the Sound

Enjoying the Sound Effect that is Tailored to Sound Sources (Sound Mode)

You can easily enjoy pre-programmed sound effects that are tailored to different kinds of sound sources.

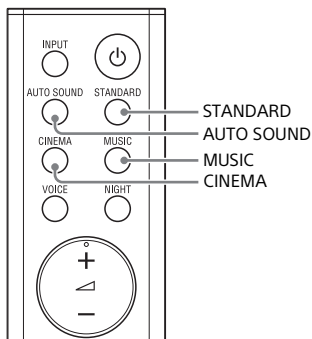

Press AUTO SOUND, CINEMA, MUSIC, or STANDARD to select the sound mode.

When selecting the sound mode, the TV indicator flashes once.

AUTO SOUND

You can enjoy the sound with Sony-recommended sound mode. The sound mode is automatically optimized according to playback content and function.

CINEMA

Sounds are played back with surround effects, and they are realistic and powerful, making them suitable for movies.

MUSIC

Sound effects are optimized for listening to music.

STANDARD

Sound effects are optimized for each individual source.

Enjoying Clear Sound with Low Volume at Midnight (NIGHT)

Sound is output at low volume with minimum loss of fidelity and clarity of dialog.

Press NIGHT to set the function to on or off.

Night mode on

The TV indicator flashes twice.

Night mode off

The TV indicator flashes once.

Note

When you turn the system off, the night mode is set to off automatically.

Making Dialogs Clearer (VOICE)

You can make dialogs clearer by setting the voice mode to on.

Press VOICE to set the function to on or off.

Voice mode on

The TV indicator flashes twice.

Voice mode off

The TV indicator flashes once.

Making Sound with Low Volume Easy to Hear by Compressing Dynamic Range

This function works only when playing the Dolby Digital signal of the device that is connected to the TV IN (OPTICAL)/HDMI OUT (TV (ARC)) jack. When you set Dolby DRC (Dynamic Range Control) to on, dynamic range of the audio signal (range between the maximum and minimum volume) is compressed and sound with low volume is easy to hear.

Press and hold AUDIO for 5 seconds to set the function to on or off.

Dolby DRC on

The USB indicator flashes twice.

Dolby DRC off

The USB indicator flashes once.

Enjoying Multiplex Broadcast Sound (AUDIO)

You can enjoy multiplex broadcast sound when the system receives a Dolby Digital multiplex broadcast signal.

Press AUDIO repeatedly.

The channel changes cyclically as follows.

Main → Sub → Main/Sub

Main

Outputs only the main channel.
The TV indicator flashes once.

Sub

Outputs only the sub channel.
The USB indicator flashes once.

Main/Sub

Main sound is output from the left speaker and sub sound is output from the right speaker.
The TV and USB indicators flash once.

Note

To receive a Dolby Digital signal, you need to connect a TV or other devices to the TV IN (OPTICAL) jack with the optical digital cable (supplied) or the HDMI OUT (TV (ARC)) jack with an HDMI cable (not supplied).

Adjusting the Volume for the Connected Device Automatically

You can adjust the volume automatically depending on the input signal or content from a connected device by setting the auto volume function to on.

Press and hold MUSIC for 5 seconds to set the function to on or off.

Auto volume function on

The USB indicator flashes twice.

Auto volume function off

The USB indicator flashes once.

Adjusting the Level of the Bass Tone

Press BASS repeatedly.

The level of the bass tone changes cyclically as follows.

0 → +1 → 0 → -1 → 0...

0 (Normal)

The TV and BLUETOOTH indicators flash once.

+1 (Strong)

All the indicators flash once.

-1 (Light)

The TV indicator flashes once.

Note

When the input source does not contain much bass sound, such as in TV programs, the bass sound from the subwoofer may be difficult to hear.

Listening to Music/Sound with the BLUETOOTH® Function


Listening to Music from a Mobile Device

You can listen to music stored on a mobile device such as a smartphone or tablet via a wireless connection by connecting the system and the mobile device with the BLUETOOTH function. When connecting to the mobile device with the BLUETOOTH function, you can operate by simply using the supplied remote control without turning the TV on.

Listening to Music by Pairing with a Mobile Device

- 1 Press and hold the BLUETOOTH button on the Bar Speaker for 5 seconds.**

The system enters the pairing mode and the BLUETOOTH indicator flashes quickly.

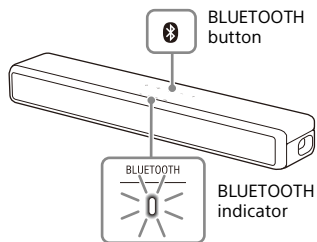

If pairing is not performed for 5 minutes after the system enters the pairing mode, the pairing mode is canceled. In this case, perform pairing from the start.

- 2 On the mobile device, search the system by performing the pairing operation.**

The list of the BLUETOOTH devices that are searched appears on the screen of the mobile device. For the operation method to pair the BLUETOOTH device to the mobile device, refer to the operating instructions of the mobile device.

- 3 Pair the system and mobile device by selecting "HT-SF200/201" from the list on the screen of the mobile device.**

If a Passkey is requested, enter "0000."

- 4 Make sure that the BLUETOOTH indicator on the Bar Speaker lights in blue.**

A connection between the system and mobile device has been established.

- 5 Start audio playback with the music app on the connected mobile device.**

Sound is output from the Bar Speaker.

- 6 Adjust the volume.**

- Adjust the volume by pressing \triangleleft +/- on the remote control.
- Adjust the level of the bass tone by pressing BASS on the remote control (page 22).
- \blacktriangleright \parallel and \blacktriangleleft \parallel \blacktriangleright on the remote control can be used for the BLUETOOTH function. (Rewind and fast forward are also available.)

Notes

- You can pair up to 10 BLUETOOTH devices. If an 11th BLUETOOTH device is paired, the least recently connected device will be replaced by the new one. If the Sony TV with the BLUETOOTH


function is paired, it is counted as the BLUETOOTH device.

- Perform pairing for the second and subsequent mobile devices.

Tips

- You can check the connection status of the BLUETOOTH function by checking the BLUETOOTH indicator status (page 8).
- While the BLUETOOTH input is being selected, the system enters the pairing mode by pressing the BLUETOOTH button on the Bar Speaker shortly.
- While the BLUETOOTH input is not selecting, the system automatically reconnects to the BLUETOOTH device it was most recently connected to by pressing the BLUETOOTH button on the Bar Speaker shortly.

Listening to Music from the Paired Mobile Device

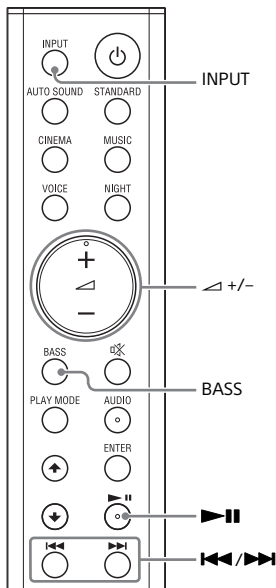

1 Turn the BLUETOOTH function of the mobile device to on.

2 Press INPUT repeatedly to select the BLUETOOTH input or press the BLUETOOTH button on the Bar Speaker shortly.

The BLUETOOTH indicator flashes and the system automatically reconnects to the BLUETOOTH device it was most recently connected to.

3 Make sure that the BLUETOOTH indicator lights in blue.

A connection between the system and mobile device has been established.

4 Start audio playback with the music app on the connected mobile device.

Sound is output from the Bar Speaker.

5 Adjust the volume.

- Adjust the volume by pressing \triangleleft +/- on the remote control.
- Adjust the level of the bass tone by pressing BASS on the remote control (page 22).
- **▶▶** and **◀◀/▶▶** on the remote control can be used for the BLUETOOTH function. (Rewind and fast forward are also available.)

Turning the System On by Operating the BLUETOOTH Device

When the system has pairing information, you can turn the system on and listen to music from a BLUETOOTH device even when the system is in standby mode by setting the BLUETOOTH standby mode to on.

Press and hold NIGHT for 5 seconds to set the function to on or off.

BLUETOOTH standby mode on

The USB indicator flashes twice.

BLUETOOTH standby mode off



The USB indicator flashes once.

Note

While the BLUETOOTH standby mode is on, standby power consumption increases.

Turning the BLUETOOTH Function Off

You can turn the BLUETOOTH function off.

Press and hold , , and - on the Bar Speaker for 10 seconds to set the function to on or off.

BLUETOOTH function on

The USB indicator flashes twice.

BLUETOOTH function off

The USB indicator flashes once.

Note

When the BLUETOOTH function is set to off, the BLUETOOTH input is skipped while selecting input by pressing INPUT.

Using the Various Functions

Using the Control for HDMI Function

Connecting a device such as a TV or Blu-ray Disc player compatible with the Control for HDMI function* using an HDMI cable (not supplied) enables you to easily operate the device by using a TV or Blu-ray Disc player remote control. The following functions can be used with the Control for HDMI function.

- System Power Off function
- System Audio Control function
- Audio Return Channel
- One-Touch Play function

Note

These functions may work with devices other than those manufactured by Sony, but operation is not guaranteed.

* Control for HDMI is a standard used by CEC (Consumer Electronics Control) for allowing HDMI (High-Definition Multimedia Interface) devices to control each other.

Preparing to Use the Control for HDMI Function

Press and hold VOICE for 5 seconds to set the function to on or off.

Control for HDMI function on

The USB indicator flashes twice.

Control for HDMI function off

The USB indicator flashes once.

Enable the Control for HDMI function settings for the TV and other devices connected to the TV.

Tip

If you enable the Control for HDMI ("BRAVIA" sync) function when using a TV manufactured by Sony, the Control for HDMI function of the system is also enabled automatically.

System Power Off Function

When you turn off the TV, the system will turn off automatically.

System Audio Control Function

If you turn on the system while you are watching the TV, the TV sound will be output from the speakers of the system. The volume of the system can be adjusted using the TV remote control. If the TV sound was output from the speakers of the system the previous time you watched the TV, the system will be turned on automatically when you turn on the TV again. Operations can also be made by the TV's menu. For details, refer to the operating instructions of your TV.

Notes

- The number for the system's volume level is displayed on the TV screen depending on the TV.
- Depending on the settings of the TV, the System Audio Control function may not be available. For details, refer to the operating instructions of your TV.

Audio Return Channel

If the system is connected to a TV's HDMI IN jack compatible with Audio Return Channel (ARC), you can listen to TV sound from the speakers of the system without connecting an optical digital cable.

Note

If the TV is not compatible with Audio Return Channel, the optical digital cable (supplied) needs to be connected (refer to the supplied Startup Guide).

One-Touch Play Function

When you play content on a device (Blu-ray Disc player, "PlayStation4," etc.) connected to the TV, the system and TV are turned on automatically, the input of the system is switched to "TV" input, and sound is output from the speakers of the system.

Notes

- If the TV sound was output from the speakers of the TV the previous time you watched the TV, the system does not turn on and the sound and picture are output from the TV even if device content is played.
- Depending on the TV, the beginning part of content being played may not play correctly.

Using the "BRAVIA" Sync Function

In addition to the Control for HDMI function, you can also use the following functions on devices compatible with the "BRAVIA" sync function.

- Sound mode/Scene Select function
- Home Theatre Control

Note

These functions are proprietary functions of Sony. This function cannot operate with products other than those manufactured by Sony.

Sound mode/Scene Select Function

The sound mode of the system is automatically switched according to the setting of the TV's Scene Select function or sound mode. For details, refer to the operating instructions of your TV. Set the sound mode to "AUTO SOUND" (page 21).

Home Theatre Control Function

When using a TV compatible with the Home Theatre Control function, setting the system, setting the sound mode settings, input switching, etc. can be done without switching the TV input. This function can be used when the TV is connected to the Internet. For details, refer to the operating instructions of your TV.

Notes on HDMI Connections

- Use an HDMI-authorized cable.
- We recommend using a Sony High Speed HDMI Cable with Ethernet with the Cable Type Logo.
- We do not recommend using an HDMI-DVI conversion cable.
- Audio signals (sampling frequency, bit length, etc.) transmitted from an HDMI jack may be suppressed by the connected device.

Saving Power Consumption

To use the system while saving power consumption, change the following settings.

Turn the System Off by Detecting the Using State

When you set the auto standby function to on, the system enters standby mode automatically when you do not operate the system for about 20 minutes and the system is not receiving an input signal.

Press and hold CINEMA for 5 seconds to set the function to on or off.

Auto standby on

The USB indicator flashes twice.

Auto standby off

The USB indicator flashes once.

Saving Power in Standby Mode

To save power consumption during the standby mode, set the BLUETOOTH standby mode (page 25) and Control for HDMI function (page 26) to off.

The default settings for them are on.

Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

Power

The system does not power up.

- Check that the AC power cord (mains lead) and AC adapter are connected securely.
- Disconnect the AC power cord (mains lead) from the wall outlet (mains), and then reconnect after several minutes.

The system is turned off automatically.

- The auto standby function is working. Set the auto standby function to off (page 28).

The system does not turn on even when the TV is turned on.

- Set the Control for HDMI function to on (page 26). The TV must support the Control for HDMI function. For details, refer to the operating instructions of your TV.
- Check the speaker settings of the TV. The system power syncs with the speaker settings of the TV. For details, refer to the operating instructions of your TV.
- If the sound was output from the speakers of the TV the previous time, the system does not turn on even when the TV is turned on.

The system turns off when the TV is turned off.

- Check the setting of the Control for HDMI function (page 26). When the Control for HDMI function is set to on and the input of the system is the TV input, the system turns off automatically when you turn off the TV.

The system does not turn off even when the TV is turned off.

- Check the setting of the Control for HDMI function (page 26). When you turn off the TV, the system turns off automatically only if the input of the system is the TV input. The TV must support the Control for HDMI function. For details, refer to the operating instructions of your TV.

Picture

There is no picture or the picture is not output correctly.

- Select the appropriate input (page 18).
- When there is no picture while TV input is selected, select the TV channel that you want using the TV remote control.
- Disconnect the HDMI cable, then connect it again. Make sure that the cable is firmly inserted.

Sound

No TV sound is output from the system.

- Check the type and connection of the HDMI cable or optical digital cable that is connected to the system and the TV (refer to the supplied Startup Guide).
- Disconnect the cables that are connected between the TV and the system, then connect them firmly again. Disconnect the AC power cords


 

of the TV and the system from the AC outlets (mains), then connect them again.

- When the system and TV are connected with an HDMI cable, check the following.
 - The HDMI jack of the connected TV is labeled with “ARC.”
 - The Control for HDMI function of the TV is set to on.
 - On the system, the Control for HDMI function is set to on (page 26).
- If your TV is not compatible with Audio Return Channel, connect the optical digital cable (supplied) (refer to the supplied Startup Guide). If the TV is not compatible with Audio Return Channel, TV sound will not be output from the system even if the system is connected to the TV’s HDMI IN jack.
- If the sound of the device that is connected to the optical input jack of the TV is not output, try the following.
 - Connect the cable box or satellite box directly to the TV IN (OPTICAL) jack of the system.
- Press INPUT repeatedly to select the TV input (page 18).
- Increase the volume on the TV or cancel muting.
- Depending on the order in which you connect the TV and the system, the system may be muted. If this happens, turn on the TV first, then the system.
- Set the speakers setting of the TV (BRAVIA) to Audio System. Refer to the operating instructions of your TV regarding how to set the TV.
- Check the sound output of the TV. Refer to the operating instructions of the TV for the TV settings.
- The system supports the Dolby Digital and PCM audio formats (page 35). When you playback an unsupported format, set the digital audio out setting of the TV (BRAVIA) to “PCM.” For details, refer to the operating instructions of your TV.

The sound is output from both the system and the TV.

- Mute the sound of the system or the TV.

No sound or only a very low-level sound of the device connected to the system is heard from the system.

- Press  + and check the volume level (page 11).
- Press  or  + to cancel the muting function (page 11).
- Make sure the input source is selected correctly. You should try other input sources by pressing INPUT repeatedly (page 18).
- Check that all the cables and cords of the system and the connected device are firmly inserted.
- If the connected device supports up-sampling feature, you need to turn it off.

The surround effect cannot be obtained.



- Depending on the input signal and the sound mode setting, surround sound processing may not work effectively. The surround effect may be subtle, depending on the program or disc.
- To play multi channel audio, check the digital audio output setting on the device connected to the system. For details, refer to the operating instructions supplied with the connected device.

Subwoofer

No sound or only very low-level sound is heard from the subwoofer.


- Press BASS repeatedly to adjust the level of the bass tone (page 22).
- If the input sources contain very little bass sound components (i.e., a TV broadcast), the sound from the

subwoofer may be difficult to hear. Play the built-in demonstration music by following the steps below and check that the sound is output from the subwoofer.

- ① Press and hold  on the Bar Speaker for 5 seconds. The built-in demonstration music is played.
 - ② Press  again. The built-in demonstration music is canceled and the system returns to the previous status.
- Set the night mode to off. For details, see “Enjoying Clear Sound with Low Volume at Midnight (NIGHT)” (page 21).
 - The subwoofer is on the bottom of the Bar Speaker. Make sure not to hit obstacles on the subwoofer.

USB Device Connection

The USB device is not recognized.

- Try the following:
 - ① Turn the system off.
 - ② Remove and reconnect the USB device.
 - ③ Turn the system on.
- Make sure that the USB device is securely connected to the  (USB) port (page 19).
- Check to see if the USB device or a cable is damaged.
- Make sure that the USB device is on.
- If the USB device is connected via a USB hub, disconnect it and connect the USB device directly to the system.

Mobile Device Connection

BLUETOOTH connection cannot be completed.

- Make sure that the BLUETOOTH indicator on the Bar Speaker is lit (page 7).

- Make sure the BLUETOOTH device to be connected is turned on and the BLUETOOTH function is enabled.
- Bring the BLUETOOTH device close to the system.
- Pair this system and the BLUETOOTH device again. You may need to cancel the pairing with this system using your BLUETOOTH device first.
- If the BLUETOOTH function is set to off, set it to on (page 25).

Pairing cannot be achieved.

- Bring the BLUETOOTH device close to the system.
- Make sure this system is not receiving interference from a wireless LAN device, other 2.4 GHz wireless devices, or a microwave oven. If a device that generates electromagnetic radiation is nearby, move the device away from this system.
- Pairing may not be possible if other BLUETOOTH devices are present around the system. In this case, turn off the other BLUETOOTH devices.

Sound of the connected BLUETOOTH mobile device is not output from the system.

- Make sure that the BLUETOOTH indicator on the Bar Speaker is lit (page 7).
- Bring the BLUETOOTH device close to the system.
- If a device that generates electromagnetic radiation, such as a wireless LAN device, other BLUETOOTH devices, or a microwave oven is nearby, move the device away from this system.
- Move the USB 3.0 device and its cable away from this system.
- Remove any obstacle between this system and the BLUETOOTH device or move this system away from the obstacle.

- If the system is installed under the TV, move the system away from the TV.
- Reposition the connected BLUETOOTH device.
- Switch the wireless LAN frequency of any nearby wireless LAN router or PC to 5 GHz range.
- Increase the volume on the connected BLUETOOTH device.
- Enable the Control for HDMI function on the TV. For details, refer to the operating instructions of your TV.
- Wait a while, and then try again. If you unplug the system, it will take a while before operations can be made. Wait for 15 seconds or longer, and then try again.
- Make sure the devices connected to the system support the Control for HDMI function.

The sound is not in sync with the image.

- When you are watching movies, you may hear the sound with a slight delay from the image.

Remote Control

The remote control of this system does not function.

- Point the remote control at the remote control sensor on the Bar Speaker (page 7).
- Remove any obstacles in the path between the remote control and the system.
- Replace both batteries in the remote control with new ones, if they are weak.
- Make sure you are pressing the correct button on the remote control (page 11).
- Enable the Control for HDMI function of the devices connected to the system. For details, refer to the operating instructions of your device.
- The type and number of devices that can be controlled by the Control for HDMI function is restricted by the HDMI CEC standard as follows:
 - Recording devices (Blu-ray Disc recorder, DVD recorder, etc.): up to 3 devices
 - Playback devices (Blu-ray Disc player, DVD player, etc.): up to 3 devices
 - Tuner-related devices: up to 4 devices
 - Audio system (receiver/headphone): up to 1 device (used by this system)

All indicators on the Bar Speaker flash for 10 seconds and the system is turned off.

- The protection feature is activated. Disconnect the AC power cord (mains lead) and check the items below.
 - Make sure that the ventilations of the Bar Speaker are not covered and turn on the system after a while.
 - When the system is using the USB connection, remove the USB device and turn on the system. If the system operates properly, the current of the connected USB device is over the maximum output current of the system 500 mA, or the USB device may have an abnormality.

The TV remote control does not work.

- Install the Bar Speaker so that it does not obstruct the remote control sensor of the TV.
- This problem might be solved by enabling the IR repeater function (page 17).

Others

The Control for HDMI function does not work properly.

- Check the connection with the system (refer to the supplied Startup Guide).

Sensors of the TV do not work properly.

→ The Bar Speaker may block some sensors (such as the brightness sensor), the remote control receiver of your TV or the emitter for 3D glasses (infrared transmission) of a 3D TV that supports the infrared 3D glass system, or wireless communication. Move the Bar Speaker away from the TV within a range that allows those parts to operate properly. For the locations of the sensors and remote control receiver, refer to the operating instructions supplied with the TV.

The system does not work properly.

→ The system may be in demo mode. To cancel demo mode, reset the system. Press and hold **- (volume)** and **⏻ (power)** on the Bar Speaker for more than 5 seconds (page 33).

When you change to the TV input from the USB input by pressing INPUT, the message appears.

• Please select the desired TV channels with the TV's remote control.

* This screen is an example for English.

→ Select the TV program by using the TV remote control.

Resetting the System

If the system still does not operate properly, reset the system as follows.

1 Press and hold **- (volume) and **⏻ (power)** on the Bar Speaker for more than 5 seconds.**

All indicators on the Bar Speaker flash 3 times, and the settings return to their initial status.

2 Disconnect the AC power cord (mains lead).

3 Connect the AC power cord (mains lead), then press **⏻ to turn on the system.**

Tip

The default settings are underlined on each feature description.

Additional Information

Specifications

Amplifier section

POWER OUTPUT (rated)

Front L + Front R: 20 W + 20 W (at 4 ohms, 1 kHz, 1% THD)

POWER OUTPUT (reference)

Front L/Front R speaker: 25 W (per channel at 4 ohms, 1 kHz)

Subwoofer: 30 W (at 4 ohms, 100 Hz)

Inputs

TV IN (OPTICAL)

USB

Outputs

HDMI OUT (TV (ARC))

USB section

🔌 (USB) port:

Type A (For connecting USB memory)

BLUETOOTH section

Communication system

BLUETOOTH Specification version 4.2

Output

BLUETOOTH Specification Power Class 1

Maximum communication range

Line of sight approx. 25 m¹⁾

Frequency band

2.4 GHz band (2.4000 GHz - 2.4835 GHz)

Maximum output power

≤ 6 dBm

Modulation method

FHSS (Freq Hopping Spread Spectrum)

Compatible BLUETOOTH profiles²⁾

A2DP (Advanced Audio Distribution Profile)

AVRCP (Audio Video Remote Control Profile)

Supported Codec³⁾

SBC⁴⁾

Transmission range (A2DP)

20 Hz - 20,000 Hz (Sampling frequency 32 kHz, 44.1 kHz, 48 kHz)

- 1) The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, cordless phone use, reception sensitivity, the operating system, software applications, etc.
- 2) BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.
- 3) Codec: Audio signal compression and conversion format
- 4) Abbreviation for Subband Codec

Speaker section

Speaker system

2-Way 3 Drivers Speaker System, Bass reflex

Speaker

Front L/Front R speaker: 46 mm cone type

Subwoofer: 70 mm cone type

General

Power requirements

DC 19.5 V (using the supplied AC adapter connected to AC 100 V - 240 V, 50 Hz/60Hz power supply)

Power consumption

On: 25 W

Standby mode: 0.5 W or less (Power Saving mode)

(When Control for HDMI function and BLUETOOTH Standby mode are set to off)

Standby mode: 2 W or less*

(When Control for HDMI function and BLUETOOTH Standby mode are set to on)

* The system will automatically enter Power saving mode when there is no HDMI connection and no BLUETOOTH pairing history.

Dimensions* (approx.) (w/h/d)

580 mm × 64 mm × 95 mm

* Not including projection portion

Mass (approx.)

2.3 kg

Design and specifications are subject to change without notice.

Playable Types of Files (USB Input)

Codec	Extension
MP3 (MPEG-1 Audio Layer III)	.mp3
WMA9 Standard	.wma
LPCM	.wav

Notes

- Some files may not play depending on the file format, the file encoding, or the recording condition.
- Some files edited on a PC may not play.
- The system does not play coded files such as DRM and Lossless.
- The system can recognize the following files or folders in USB devices:
 - folder paths up to 128 characters long for FAT16/32 or 124 characters long for NTFS
 - up to 200 folders (including empty folder and root folder)
 - up to 200 audio files/folders in each folder
- Some USB devices may not work with this system.
- The system can recognize Mass Storage Class (MSC) devices.

Supported Input Audio Formats (TV Input)

Audio formats supported by this system are as follows.

- Dolby Digital
- Linear PCM 2ch

On BLUETOOTH Communication

- BLUETOOTH devices should be used within approximately 10 meters (33 feet) (unobstructed distance) of each other. The effective communication range may become shorter under the following conditions.
 - When a person, metal object, wall or other obstruction is between the devices with a BLUETOOTH connection
 - Locations where a wireless LAN is installed
 - Around microwave ovens that are in use
 - Locations where other electromagnetic waves occur
 - BLUETOOTH devices and wireless LAN (IEEE 802.11b/g/n) use the same frequency band (2.4 GHz). When using your BLUETOOTH device near a device with wireless LAN capability, electromagnetic interference may occur. This could result in lower data transfer rates, noise, or inability to connect. If this happens, try the following remedies:
 - Use this system at least 10 meters (33 feet) away from the wireless LAN device.
 - Turn off the power to the wireless LAN device when using your BLUETOOTH device within 10 meters (33 feet).
 - Install this system and BLUETOOTH device as close to each other as possible.
 - The radio waves broadcast by this system may interfere with the operation of some medical devices. Since this interference may result in malfunction, always turn off the power on this system and BLUETOOTH device in the following locations:
 - In hospitals, on trains, in airplanes, at gas stations, and any place where flammable gasses may be present
 - Near automatic doors or fire alarms
 - This system supports security functions that comply with the BLUETOOTH specification to ensure secure connection during communication using BLUETOOTH technology. However, this security may be insufficient depending on the setting contents and other factors, so always be careful when performing communication using BLUETOOTH technology.
 - Sony cannot be held liable in any way for damages or other loss resulting from information leaks during communication using BLUETOOTH technology.
 - BLUETOOTH communication is not necessarily guaranteed with all BLUETOOTH devices that have the same profile as this system.
 - BLUETOOTH devices connected with this system must comply with the BLUETOOTH specification prescribed by the Bluetooth SIG, Inc., and must be certified to comply. However, even when a device complies with the BLUETOOTH specification, there may be cases where the characteristics or specifications of the BLUETOOTH device make it impossible to connect, or may result in different control methods, display or operation.
 - Noise may occur or the audio may cut off depending on the BLUETOOTH device connected with this system, the communications environment, or surrounding conditions.
- If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

Precautions

On safety

- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not climb on the Bar Speaker, as you may fall down and injure yourself, or system damage may result.

On power sources

- Before operating the system, check that the operating voltage is identical to your local power supply. The operating voltage is indicated on the nameplate on the bottom of the Bar Speaker.
- If you are not going to use the system for a long time, be sure to disconnect the system from the wall outlet (mains). To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the wall outlet (mains) only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- AC power cord (mains lead) must be changed only at a qualified service shop.

On heat buildup

Although the system heats up during operation, this is not a malfunction. If you continuously use this system at high volume, the system temperature at the rear and bottom rises considerably. To avoid burning yourself, do not touch the system.

On placement

- Place the system in a location with adequate ventilation to prevent heat buildup and prolong the life of the system.
- Do not place the system near heat sources or in a place subject to direct

sunlight, excessive dust, or mechanical shock.

- Do not place anything on the top of the Bar Speaker.
- If the system is being used in combination with a TV, VCR, or tape deck, noise may result and picture quality may suffer. In such a case, place the system away from the TV, VCR, or tape deck.
- Use caution when placing the system on a surface that has been specially treated (with wax, oil, polish, etc.), as staining or discoloration of the surface may result.
- Take care to avoid any possible injury from the corners of the Bar Speaker.
- When installing the Bar Speaker, make sure not to damage the subwoofer on the bottom of the Bar Speaker.

On operation

Before connecting other equipment, be sure to turn off and unplug the system.

If you encounter color irregularity on a nearby TV screen

Color irregularities may be observed on certain types of TV.

- If color irregularity is observed...
Turn off the TV, then turn it on again after 15 to 30 minutes.
- If color irregularity is observed again...
Place the system further away from the TV.

On cleaning

Clean the system with a soft, dry cloth. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzene.

If you have any question or problem concerning your system, please consult your nearest Sony dealer.

Copyrights and Trademarks

All other trademarks are trademarks of their respective owners.

This system incorporates Dolby* Digital.

* Manufactured under license from Dolby Laboratories.

Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

This system incorporates High-Definition Multimedia Interface (HDMI™) technology. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

“BRAVIA” logo is a trademark of Sony Corporation.

“ClearAudio+” is a trademark of Sony Corporation.

“PlayStation” is a registered trademark or trademark of Sony Interactive Entertainment Inc.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

HDMI

<http://www.sony.net/>



* 4 7 2 7 4 1 4 2 1 * (1)

©2018 Sony Corporation Printed in Malaysia

4-727-414-21(1)