




# CD/DVD Player


Startup Guide / Udhëzuesi i fillimit / Ръководство за стартиране / Vodič za početak rada / Vodič za početak / Alustusjuhend / Pasirengimo darbui vadovas / Sākšanas norādījumi / Водич за почеток / Navodila za namestitev / Vodič za početak

1

A

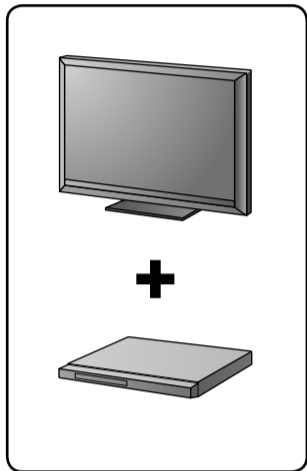


■ HDMI

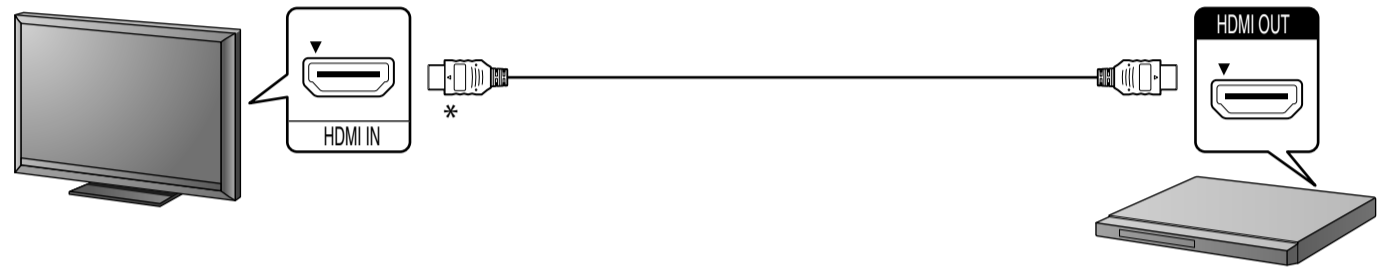


■ VIDEO & AUDIO




B

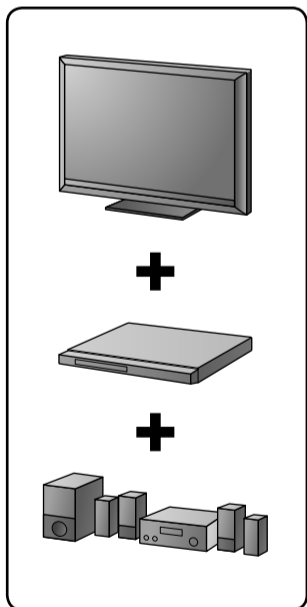

■ HDMI

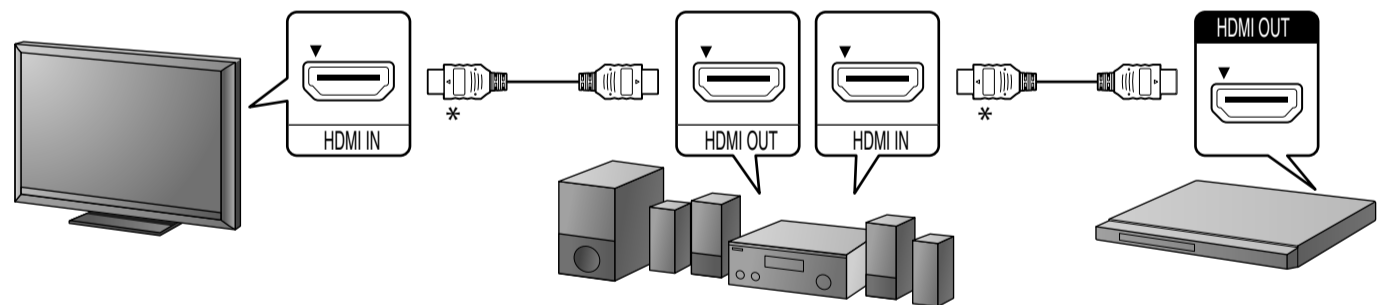


■ COAXIAL

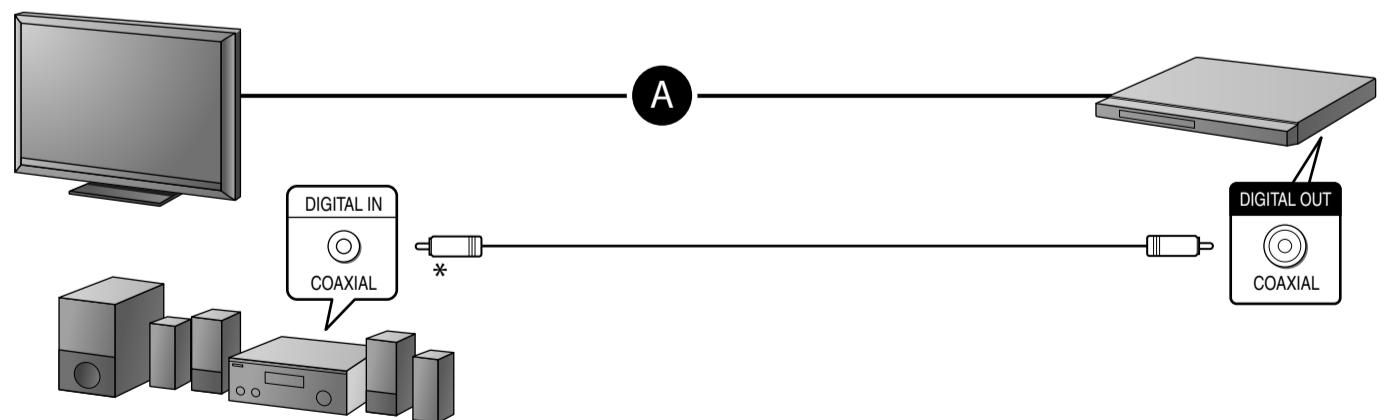


\* Not supplied / Nuk jeрет / Не е включено в комплекта / Nije priložen / Nije priloženo / pole kaasas / Nepridedamas / Komplektācijā nav iekļauts / Не се доставува / ni priloženo / Ne isporučuje se

# 2



## 1

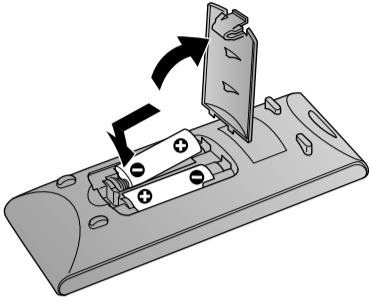

## 2

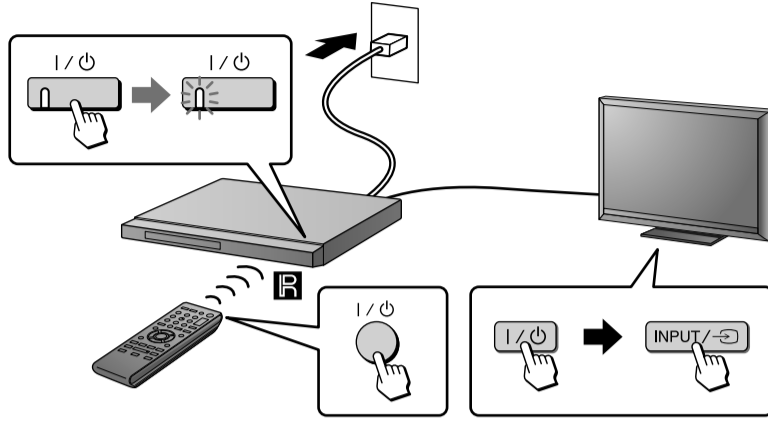


## 3

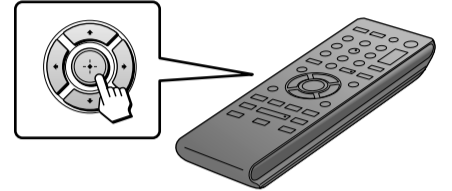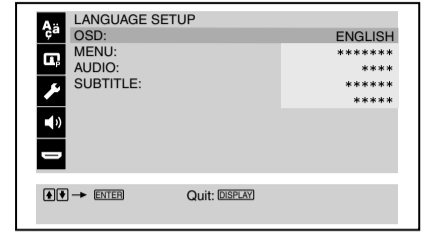

# 3

## 1

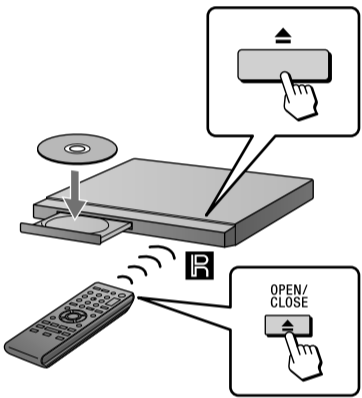

## 2

