



## Component code numbers / 組成機代碼號數 / الأرقام الرمزية للأجهزة

### English

**TV/VCR/COMBO\***

The left row of the table shows the brand, the center row shows the component (TV, VCR or COMBO) and the right row shows the code No.

\* COMBO stands for the unit combined with TV and VCR.

**CBL (Cable box)**

The left row of the table shows the brand and the right row shows the code No.

**DVD**

The left row of the table shows the brand and the right row shows the code No.

### 中文

**TV（電視機）/VCR（錄像機）/COMBO\***

表的左邊的行表示廠牌，中央的行表示組成機種類（TV，VCR 或 COMBO）而右邊的行是表示代碼號。

\* COMBO代表包含有TV（電視機）和VCR（錄像機）的裝置。

**CBL（電纜箱）**

表的左邊的行表示廠牌，而右邊的行是表示代碼號。

**DVD**

表的左邊的行表示廠牌，而右邊的行是表示代碼號。

**To set a Component Code (see the operating instructions for details)**


設定組成機代碼（詳細說明，請參看使用說明書）

<b>لبرمجة رمز جهاز ما (راجع تعليمات التشغيل لمزيد من التفاصيل)</b>
<b>OS</b> <b>+</b> <b>⏻</b>

While pressing the **S (SET)** button, press the ⏻ button.

按住 S (SET) 按鈕的同時，按 ⏻ 按鈕。

بينما تضغط الزر **S (SET)**، إضغط الزر ⏻.

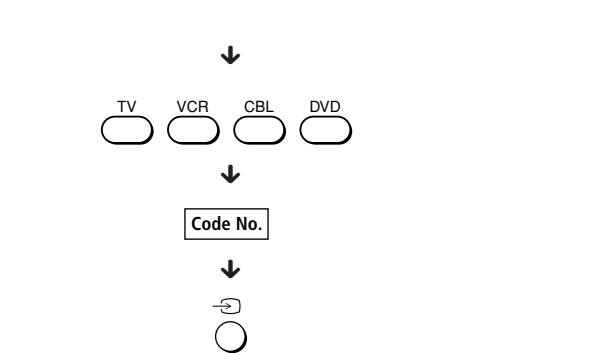

<b>Brand</b>	<b>Component</b>	<b>Code No.</b>
Sony	TV	001 002 003 004 005 006 007
	VCR (VTR1:Betamax)	001 007 010 011
	VCR (VTR2:8mm)	002 008
	VCR (VTR3:VHS)	003 009
	VCR (VTR4:DV)	004
	VCR (VTR5:DV)	005
	VCR (VTR6:DV)	006
Aiwa	TV	051
	VCR	033 065 045
Akai	TV	061 011 020 056 062
	VCR	041 034 043
Alba	TV	081 062
	VCR	039
Amstrad	VCR	039
Audio Sonic	TV	081
Baird	VCR	049 042
B&O	TV	083
(Bang&Olufsen)	VCR	064
Beko	TV	025
Bestar	TV	013
Blaupunkt	TV	026 028
	VCR	018 030
Blue sky	TV	013
Brandt	TV	037
Brionvega	TV	048 046
Bush	TV	121 081 075 062 010 119
	VCR	041
CGM	TV	029
	VCR	046 013 044 045
	COMBO	TV 029&VCR 013
Clatronic	TV	013 014
	VCR	039
Continental	TV	076
Crown	TV	024 033 065
Daewoo	TV	074 011 013 067 123 124
	VCR	058 057
	COMBO	TV 074&VCR 057
Deccacolour	TV	012 084 085
Dual	TV	013 047
Emerson	TV	086 125
Fenner	TV	068 008
Ferguson	TV	038 066 042 041 037
	VCR	067 023 024
	COMBO	TV 074&VCR 057
Finlux	TV	022
First line	TV	013 056
Fisher	TV	056
	VCR	039
Fraba	TV	013
Funai	TV	065
	VCR	029
GoldStar/LG	TV	092 098 101 011 017 018 013 116
	VCR	052 046
	COMBO	TV 054&VCR 052
Goodmans	TV	020 011 062 037 013 014 015 075 120
	VCR	058 012
	COMBO	TV 074&VCR 058
Grundig	TV	091 026 027 009 022 104
	VCR	013 021 018
	COMBO	TV 009&VCR 013
Hansol	TV	117
Hitachi	TV	089 093 094 052 053 010 011 015 105
	VCR	047 035 048
Höher	TV	125 086
Hyper	TV	025 008
ICE	TV	062
Inno-Hit	TV	010
Irradio	TV	011 062 068
JVC	TV	077 062 078 114
	VCR	015 030 059 016

<b>Brand</b>	<b>Component</b>	<b>Code No.</b>
Kendo	TV	054 013
	VCR	052
	COMBO	TV 054&VCR 052
Kiton	TV	010
Lenco	TV	106
Loewe	TV	102 011 017 018 107 086
	VCR	027 052 012
	COMBO	TV 011&VCR 012, TV 017&VCR 012, TV 018&VCR 012
Luxor	TV	022 045
	VCR	032
Mark	TV	063 013 065
Matsui	TV	091 064 056 073 033 076 007 026 068 011
	VCR	036 046
	COMBO	TV 051&VCR 038, TV 052&VCR 038
Medion	TV	013
Mitsubishi	TV	071 072 069 070
	VCR	062 063
Miver	TV	030 029
NEC	TV	055
NEI	TV	011
Nokia	TV	099 020 021 045 036 035 034
	VCR	032 049
Nokia/ITT	TV	034 035
	VCR	049
Nokia Oceanic	TV	036 035
	VCR	032
Nordmende	TV	044 039 040
	VCR	024 023
Okano	TV	011 068
	VCR	036 034 037
Onwa	TV	062
Orion	TV	051 015 049 050 086
	VCR	040
	COMBO	TV 051&VCR 038
Panasonic	TV	096 079 080 112 113
	VCR	028 031
Philips	TV	086 087 088 089 011 015 095 098 101 102 013 014 015 019
	VCR	018 012 017 019 014 029
	COMBO	TV 013&VCR 018, TV 013&VCR 012
Phoenix	TV	011
Phonola	TV	013 015
	VCR	014 012 013
Pioneer	TV	059
Provision	TV	013
PYE	TV	013
Radio	TV	013
Radiola	TV	015
Roadstar	TV	068 108 118
	VCR	045
SABA	TV	100 032 037 023 039 040 044 042 041
	VCR	023 024 060 025
Salora	TV	020
	VCR	032
Samsung	TV	089 097 084 085 018 016 017 011 012 109 122
	VCR	053 055 056 061 022
	COMBO	TV 060&VCR 022, TV 014&VCR 022, TV 060&VCR 055, TV 060&VCR 053
Sanyo	TV	056 110
	VCR	050 049
Schneider	TV	095 011 047 013 062 106 115
	VCR	018 012 020
	COMBO	TV 013&VCR 012
SEG	TV	086 106
	VCR	039
Seleco	TV	031 045
	VCR	045 041
Sharp	TV	082 111
	VCR	032
Siemens	TV	026 027
	VCR	020 049
Sinudyne	TV	045 011
Supertech	TV	068 013
	COMBO	TV 068&VCR 057

<b>Brand</b>	<b>Component</b>	<b>Code No.</b>
Supervision	TV	013
Tandberg	TV	031
	VCR	058
Tatung	TV	013
Teac	TV	010
Techimagen	TV	013
Telefunken	TV	100 032 037 040 039 043 023
	VCR	025 026
Thomson	TV	100 037 032 042 044
	VCR	066 023 068 054
	COMBO	TV 074&VCR 057
Thorn	TV	011
	VCR	049 052
Toshiba	TV	058 057 103
	VCR	051 022
United	TV	090 125
Universum	TV	013 020
	VCR	026 040 052 012
Vestel	TV	013
Vieta	TV	126
W.W.House	TV	013
	VCR	052
Watson	TV	013 068 047 014
	VCR	014 038
	COMBO	TV 051&VCR 038

<b>CBL</b>	
<b>Brand</b>	<b>Code No.</b>
ADB	062
Amstrad	059 024 002 023 046
DGTEC	124 125 126
Hamlin/Regal	113 114 115 116 117
Jerrold/G.I	092 093 094 095 096 097 098 099 109 113 123
Oak	118 119 120
Pace	060 061 016 020 015
Panasonic	110 111 112
Pioneer	105 106
Scientific Atlanta	100 101 102
Tocom	107 108 122
Zenith	103 104

<b>DVD</b>	
<b>Brand</b>	<b>Code No.</b>
Sony	001 024 023 025 039 040 041 049
Aiwa	015
Bose	037
Bush	031
Cyberhome	035
Daewoo	029
Denon	006 017 002
Funai	020 058
Grundig	031
Harman/Kardon	018
Hitachi	008
Jamo	038
JVC	007 046
Kenwood	034
KLH	010
LG	009 056
Marantz	012
Matsui	030 061
Mitsubishi	026
Mustek	036
Nakamichi	032
Onkyo	016
Panasonic	002 006 027 028 043 044 045 051 054 062
Philips	012 059 063
Pioneer	021 019 004 042
RCA	005
Sharp	011 057
Shinco	022
Samsung	014 050
Sylvania	020 053 058
Teac	022 033
Thomson	013 060
Toshiba	003 047 048 055
Yamaha	006
Zenith	009 056