

バックアップ用のリチウム電池を入れる図(図)

1. 本体の底面のリチウム電池ふたをコインなどでOPEN前にもわけて開ける。
2. ②を上にしてリチウム電池CR2025を入れ、ふたを閉めCLOSE側に向わず。

ご注意
リチウム電池だけではラジオを聞くことはできません。必ず乾電池またはACパワーアダプターも使用ください。

FM/AM CD Clock Radio

取扱説明書
Operating Instructions
XXXXX
XXXXXXXX

ボタン類電圧/リチウム電池 についての注意
- 接触不良を防ぐために、使用前に電池を乾いた布でふやかしてください。


リチウム電池の交換時期
- 表示窓が暗くなってきたり、リチウム電池を交換しなくても、必ず乾電池またはACパワーアダプターも使用してください。その場合、主電源(乾電池またはコンセント)がつかっていないことを確認してください。電源が切れていると、記憶した周波数や時刻が消えてしまうことがあります。リチウム電池の交換は、購入後1年を目安に取り換えることをおすすめします。

コンセントで使うには
付属のACパワーアダプターをDC IN 6V端子につなぎ、表示窓が常時照らされますので、それから操作を行ってください。


電圧を合わせたい(ツーリストモデルのみ)
付属のACパワーアダプターの電圧をお使いになる地域の電圧に合わせてから、コンセントにつなぐてください。プラグがコンセントと合わないときは、付属のACプラグアダプターをお使いください。

ICF-CD1000

Sony Corporation © 1996 Printed in Malaysia

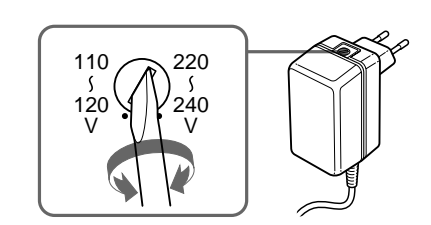

ご注意
- 電源コードは、無理に曲げたり、上に重い物を載せたりしないでください。
- コードを抜くときは、必ずプラグを持って抜いてください。
- 長い間使わないときは、必ずACパワーアダプターをコンセントから抜いてください。このときは必ずそれからプラグも抜いてください。
- DC IN 6V端子にACパワーアダプターをつなぎ、乾電池が入っても自動的に外部電源に切りかわります。
- コンセントを本機を使うときも、内蔵のマイコンのソフトウェア用としてリチウム電池を入れておいてください。
- 乾電池で使ったときは、ソーニの推奨品または同等品をお使いください。プラグの形状、その他の仕様が違う製品を使うと、故障したり性能を十分に発揮できないことがあります。

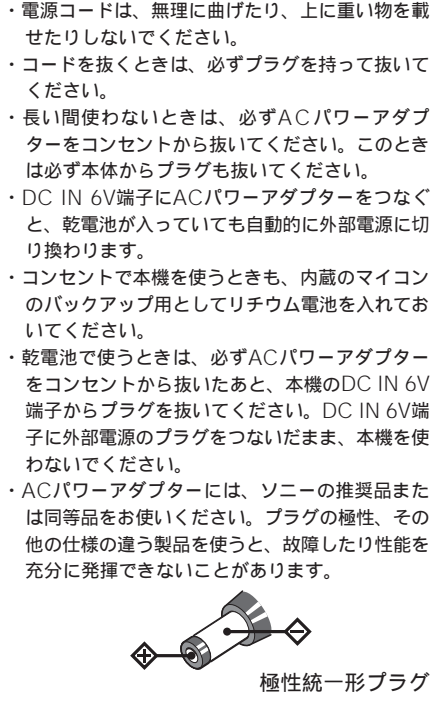

時計を合わせる

初めて乾電池を入れたときは表示窓に0:00が点滅し、LOCALと表示されます。ラジオやCDを聞いているときは、OFF ALARM RESETボタンを押して、時計表示してから時刻を合わせてください。
- 時計は24時間表示です(0:00～真夜中、12:00～午後)。

LOCAL/LOCALボタンを押して、表示窓にLOCALを表示させる。

1. WORLD/LOCALボタンを押して、表示窓にLOCALを表示させる。
2. CLOCK/TRACK・ENTERボタンを押しながらTUNING TIME SETの+、-ボタンを押して時刻を合わせる。
- ボタンと数字が揃えば、ボタンを押し続けると数字が進みます。CLOCK/TRACK・ENTERが指を離すと、時計が動き始め、' ' : が点滅します。

WORLD時刻を合わせる

1. WORLD/LOCALボタンを押して、表示窓にWORLDを表示させる。
2. CLOCK/TRACK・ENTERボタンを押しながらTUNING TIME SETの+、-ボタンで時刻を合わせる。
- CLOCK/TRACK・ENTERが指を離すと、時計が動き始め、' ' : が点滅します。

LOCAL、WORLDの時刻について

この時計は自動調整しません。LOCAL時刻で時刻を合わせ直したときは、WORLD時刻の設定も直してください。

サマータイム*を表示するには
D.S.T.・SUMMER Tボタンを押します。*が表示されるかわれ、時刻がサマータイムに変わります。(表示時刻は1時間進んだ時刻になります。)

電池の持続時間(EIAJ) (単位: 時間)

スピーカー使用時	CD	ラジオ
ソニー準3級(LR6)	9	26

ヘッドホン使用時

CD	ラジオ
ソニー準3級(LR6)	11

AM放送の周波数ステップについて

このラジオは、工場出荷時、AMの周波数間隔が9kHzに設定されています。これは、日本をはじめ世界の大多數の国が9kHzの周波数ステップで放送を行っているためです。周波数ステップが9kHzの間でお使いになるときは、周波数ステップを切り換えてご使用ください(AM放送の周波数ステップ: 間隔/周切り換える参照)。

地域	周波数ステップ
北米・南米の国々	10kHz
その他の国々	9kHz

AM放送の周波数ステップ(間隔)周切り換える

このラジオは工場出荷時、AM 9kHzの周波数間隔で受信するように設定されています。10kHzステップで放送している地域で使いたいときは、周波数ステップを切り換えてください。


地域	周波数ステップ
北米・南米の国々	10kHz
その他の国々	9kHz

1. OFF ALARM RESETボタンを押して時刻表示にする。
2. CLOCK/TRACK・ENTERボタンを押しながらOFF ALARM RESETボタンを「ピピッ」と鳴るまで押し続けます。

・周波数ステップを切り換えると、プリセット番号に記憶しておいた放送局の記憶は消えます。

CDを聞く

1. CDを入れる
ふたを開ける
LIFT OPEN

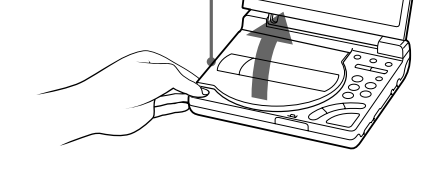

2. CD▶▶ボタンを押す



3. VOLUMEつまみを回して音量を調節する。

内蔵スピーカーで聞くには
本体のふたの内側にスピーカーがあるので、ふたを開けてお聞きください。

操作
- 一時停止する CD▶▶
- 一時停止を解除する CD▶▶
- 今聞いている曲を戻す (一度押し)*
- 次曲を飛ばす (一度押し)*
- 早戻りする (押し)*
- 早送りする (押し)*
- 前の曲、さらに前の曲を飛ばす (押し)*
- 前の曲、さらに前の曲を飛ばす (押し)*
- さるに次の曲を飛ばす (押し)*
- さるに次の曲を飛ばす (押し)*
- 再生を止める OFF ALARM RESET
- 曲番号と現在CLOCK/TRACK・ENTER時刻表示を切り換えます。

*MUSIC/Automatic Music sensorの略です。曲の頭を探検機能です。*これらの操作は、演奏中にも一時停止中にもできます。

CDの取り扱いについて
- 清潔面に手を触れないようにしてください。
- 紐やヘアアクセサリーなど、指を傷つける恐れがあります。ボタンを押し続けると指が傷みます。
- 指が動き始め、' ' : が点滅します。

注意
- CDを聞いているときは、CDのふたを開けないでください。CDが壊れることがあります。
- CD▶▶ボタンを押してもCDが入っていないと、表示窓に00が表示されて、約3秒間点滅します。
- CDを聞いているときに、CDアラームの設定時間になると、アラームで設定した曲になります。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

FM放送を拒否する場合
FM放送は周波数0.05 MHz単位で選局しますが、表示窓に表示される周波数は0.1 MHz単位で変わります。同じ周波数の表示であっても、よりよく受信できる方を優先してください。
例) 88.00 MHzのときも88.05 MHzのときも「88.0 MHz」が表示されます。

ラジオを止めるには
OFF ALARM RESETボタンを押す。

良い受信状態に聞くには
FM ロッドアンテナの長さや方向を調節する。AM/ANアンテナは内蔵されており、ラジオの向きを受信状態が変わる。最も良い受信状態になるようにしてください。(ステール前など金属の上でお使いになると受信状態が悪くなる場合があります。)

プリセット選局
FMまたはAM放送を合計1局、プリセットボタン1-5に設定しておくことができます。聞きたい局の周波数一度記憶しておくだけで、後はこれらのプリセットボタンを押すだけで正確な受信ができます。

ご注意
- ラジオアラームを使うときは、聞きたい局の周波数やプリセットボタンに記憶させてください。希望の時刻がラジオを鳴らすことができます。

プリセットするには
例: AM 1260 kHzプリセット番号2にプリセットする

1. 「マニュアル選局」で、希望の放送局を受信する。
2. CLOCK/TRACK・ENTERボタンを押しながら、記憶させた番号のプリセットボタンを押す。

受信している周波数が記憶され、表示窓にプリセットのラジオを鳴らすことができます。

例: AM 1260 kHzプリセット番号2にプリセットする

数秒後、動作確認表示が現在時刻表示に変わりスリープアラームがスタートし、設定した時間が経過すると、自動的に電源が切れます。

設定後に動作確認を変更するには
RADIO SLEEPを押して、希望の時刻を選択する。

途中で電源を切るには
SNOOZEボタンを押します。

便利な機能
低音を強調する
MEGA BASSスイッチをMIX中またはMAXにします。低音を強調しないときはNORM(普通)にします。MAXにすると音がはずんだように聞こえる場合はNORMまたはMIDにします。

暗いところで時計を見たいには
SLEEP OFF/LIGHTボタンを押します。表示窓が約10秒間照らされます。コンセントでお使いのときは常時照らされます。

希望の時刻にCD、ラジオ、ブザー音を鳴らす
予約した時刻に、CD、ラジオまたはブザー音を鳴らすことができます。

アラーム時刻の設定
CDアラームの設定するには
1. TIME-ALARMボタンを押しながらTUNING TIME SETの+、-ボタンを押してアラーム時刻を合わせる

2. BAND・WAKE UP TRACKボタンを押しながらTUNING TIME SETの+、-ボタンを押して、聞きたい曲の番号を選択する

注意
- 清潔面に手を触れないようにしてください。
- 紐やヘアアクセサリーなど、指を傷つける恐れがあります。ボタンを押し続けると指が傷みます。
- 指が動き始め、' ' : が点滅します。

注意
- CDを聞いているときは、CDのふたを開けないでください。CDが壊れることがあります。
- CD▶▶ボタンを押してもCDが入っていないと、表示窓に00が表示されて、約3秒間点滅します。
- CDを聞いているときに、CDアラームの設定時間になると、アラームで設定した曲になります。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

アラームを止めるには
OFF ALARM RESETボタンを押します。翌日も同じ時間にアラームが鳴ります。

アラームを解除するには
ALARM-MODEボタンを繰り返し押し、CD、RADIO、BUZZER表示を解除します。TIME-ALARMボタンを押すとアラーム時刻を表示することができます。

ご注意
- CDのアラームを設定しているもCDを入れていないと、予約した時刻になるとブザー音が鳴ります。
- ブザーの音は一定です。VOLUMEつまみの位置には関係ありません。

もう少し眠っていたいとき(スヌーズ機能)
1. SNOOZEボタンを押す。
2. CD、ラジオ、ブザーの音がいったん止まり、8分後、自動的に動作します。
- スヌーズ機能が設定されているときは、アラーム音が点滅します。
- スヌーズ機能は何度でも繰り返すことができます。

タイマーをつかう
スリープタイマー
設定した時間が過ぎると自動的に電源が切れます。

1. RADIO SLEEPを押してラジオを消音状態にする。

2. もう一度RADIO SLEEPを押す。繰り返し押しして希望の時間を表示させ、押し続けることによって自動的に切り換わります。

90 → 60 → 30 → 15
周波数表示 OFF

数秒後、動作確認表示が現在時刻表示に変わりスリープアラームがスタートし、設定した時間が経過すると、自動的に電源が切れます。

設定後に動作確認を変更するには
RADIO SLEEPを押して、希望の時刻を選択する。

途中で電源を切るには
SNOOZEボタンを押します。

便利な機能
低音を強調する
MEGA BASSスイッチをMIX中またはMAXにします。低音を強調しないときはNORM(普通)にします。MAXにすると音がはずんだように聞こえる場合はNORMまたはMIDにします。

暗いところで時計を見たいには
SLEEP OFF/LIGHTボタンを押します。表示窓が約10秒間照らされます。コンセントでお使いのときは常時照らされます。

希望の時刻にCD、ラジオ、ブザー音を鳴らす
予約した時刻に、CD、ラジオまたはブザー音を鳴らすことができます。

アラーム時刻の設定
CDアラームの設定するには
1. TIME-ALARMボタンを押しながらTUNING TIME SETの+、-ボタンを押してアラーム時刻を合わせる

2. BAND・WAKE UP TRACKボタンを押しながらTUNING TIME SETの+、-ボタンを押して、聞きたい曲の番号を選択する

注意
- 清潔面に手を触れないようにしてください。
- 紐やヘアアクセサリーなど、指を傷つける恐れがあります。ボタンを押し続けると指が傷みます。
- 指が動き始め、' ' : が点滅します。

注意
- CDを聞いているときは、CDのふたを開けないでください。CDが壊れることがあります。
- CD▶▶ボタンを押してもCDが入っていないと、表示窓に00が表示されて、約3秒間点滅します。
- CDを聞いているときに、CDアラームの設定時間になると、アラームで設定した曲になります。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

注意
- CDの周りがひびいて、クリーニングする。レンズの汚れ、クリーニングする。
- 振動のない場所に置く。

ソニー株式会社 〒141-0001 東京都品川区品川6-7-35
お問い合わせはお客センターへ
東京(03)5448-3311 名古屋(052)232-2611 大阪(06)539-5111

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

For Customers in Europe and Saudi Arabia

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERILAITTE
KLASS 1 LASERPPAKAT

This Compact Disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the bottom exterior.

Before You Begin
Thank you for choosing the Sony CD clock radio! The CD clock radio will give you many hours of reliable service and listening pleasure. Before operating the CD clock radio, please read these instructions thoroughly and retain them for your future reference.

Features
• You can wake up to any track of a CD, radio and buzzer with the snooze function.
• The digital tuner with 5 random memory presets.
• A powerful bass is produced with the MEGA BASS sound system.
• You can enjoy stereo sound both by speakers and by headphones.
• Summer time calculation (one-hour skip function).
• World time calculation (parallel time-difference setting).

Notes on AM Channel Step
The AM channel step differs depending on areas. The channel step of this unit is factory set to 10 kHz (models for North and South America/9 kHz (models for other countries)).

Area	Channel step
North and South American countries <td>10 kHz</td>	10 kHz
Other countries <td>9 kHz</td>	9 kHz

Power Sources
Use alkaline batteries
1. Lift up the telescopic antenna.
2. Push and slide up the battery cover toward the direction of the arrow.
3. Install four LR6 (size AA) batteries with correct polarity.

Battery Life (Approx. hours)
Listening by speakers
Listening by headphones

Replacing Batteries
When the batteries become weak, "CS" will appear in the display and the CD and Radio functions will stop. Replace all the dry batteries. When the batteries are exhausted, "CO" will flash and only the clock is displayed.

When the AM channel step is changed, the preset stations will be erased.

Playing a Disc
An 8 cm (3-inch) CD can be played without an adaptor.
1. Lift open the CD compartment lid and place a disc.
2. Press CD ▶▶ and the display lights "01."
And the current number (01 to 99) appears in the display window. After 10 seconds, the indication becomes the current time, but the "CD ▶▶" indication remains.
3. Adjust VOLUME.

Setting the Alarm
You can set the CD, radio and buzzer alarms at the preset time. Before setting the alarm, be sure to set the clock. (See "Setting the Clock.") After setting the alarm time, then set the type of alarm.

Setting the Alarm Mode
Before setting alarm mode, be sure to set the alarm time. (See "Setting the Alarm Time.")
1. Press ALARM-MODE (▶) the alarm you want appears in the display.
Each time you press ALARM-MODE, the alarm indication changes as follows.

Notes
• Do not open the CD compartment lid during playing, otherwise, the disc will be damaged. Be sure to stop the disc first.
• When you set the CD alarm, if there is no disc in the CD player, the buzzer will sound at the time you set.
• The buzzer sound level is fixed, and independent of volume.

To Doze for a Few More Minutes
1. Press SNOOZE. The CD, radio or buzzer will shut off but will automatically come on again after about 8 minutes. You can repeat this process as many times as you want to.
• The buzzer sound level is fixed, and independent of volume.

Operating the Radio Manual Tuning
1. Press RADIO SLEEP.
2. Press BAND・WAKE UP TRACK to select the band, FM or AM.
Each press of BAND・WAKE UP TRACK changes the band.
3. Tune in a station by pressing TUNING TIME SET + or -.
4. Adjust VOLUME.

Listening to the built-in speakers
The built-in speakers are located inside the lid of the unit. Open the lid to use the built-in speakers.

To set the CD alarm
1. While holding down TIME-ALARM, press TUNING TIME SET + or - till the desired time appears in the display.
2. Press CD ▶▶ and the display lights "01."
And the current number (01 to 99) appears in the display window. After 10 seconds, the indication becomes the current time, but the "CD ▶▶" indication remains.
3. Adjust VOLUME.

Setting the Alarm Mode
Before setting alarm mode, be sure to set the alarm time. (See "Setting the Alarm Time.")
1. Press ALARM-MODE (▶) the alarm you want appears in the display.
Each time you press ALARM-MODE, the alarm indication changes as follows.

Notes
• Do not open the CD compartment lid during playing, otherwise, the disc will be damaged. Be sure to stop the disc first.
• When you set the CD alarm, if there is no disc in the CD player, the buzzer will sound at the time you set.
• The buzzer sound level is fixed, and independent of volume.

To Doze for a Few More Minutes
1. Press SNOOZE. The CD, radio or buzzer will shut off but will automatically come on again after about 8 minutes. You can repeat this process as many times as you want to.
• The buzzer sound level is fixed, and independent of volume.

Operating the Radio Manual Tuning
1. Press RADIO SLEEP.
2. Press BAND・WAKE UP TRACK to select the band, FM or AM.
Each press of BAND・WAKE UP TRACK changes the band.
3. Tune in a station by pressing TUNING TIME SET + or -.
4. Adjust VOLUME.

Listening to the built-in speakers
The built-in speakers are located inside the lid of the unit. Open the lid to use the built-in speakers.

To set the CD alarm
1. While holding down TIME-ALARM, press either TUNING TIME SET + or - till the desired time appears in the display.
2. Press CD ▶▶ and the display lights "01."
And the current number (01 to 99) appears in the display window. After 10 seconds, the indication becomes the current time, but the "CD ▶▶" indication remains.
3. Adjust VOLUME.

Setting the Alarm Mode
Before setting alarm mode, be sure to set the alarm time. (See "Setting the Alarm Time.")
1. Press ALARM-MODE (▶) the alarm you want appears in the display.
Each time you press ALARM-MODE, the alarm indication changes as follows.

Notes
• Do not open the CD compartment lid during playing, otherwise, the disc will be damaged. Be sure to stop the disc first.
• When you set the CD alarm, if there is no disc in the CD player, the buzzer will sound at the time you set.
• The buzzer sound level is fixed, and independent of volume.

To handle compact discs
This way
Handle the disc by its edge.
Not this way
Do not stick paper or tape over anything on the surface.

Polarity of the plug
When operating the unit with house currents, do not remove the lithium battery which serve as a backup of the memory.
When operating the unit with the batteries, remove the AC power adaptor in the following order: ① disconnect from the wall outlet and ② disconnect from the DC IN 6V jack of the unit.

Setting the Clock
The display will flash "0:00" when the batteries are first installed. Set the time when the CD or radio is turned off.

To Set Local Time
1. Press WORLD/LOCAL to display "LOCAL."
2. While holding down CLOCK/TRACK・ENTER, press either TUNING TIME SET + or - till the correct time appears in the display.
When you release CLOCK/TRACK・ENTER, the clock begins to operate and " " flashes.

24-hour system: "0:00" = midnight, "12:00" = noon.
To set the current time rapidly, keep pressing the + or - button while holding down CLOCK/TRACK・ENTER.
To set the current time for zero seconds, at step 2, release CLOCK/TRACK・ENTER with the time signal.

To Set World Time
To set WORLD time, press WORLD/LOCAL to display "WORLD," then set, upon calculating the parallel time with the time-zone map, using the CLOCK/TRACK・ENTER and the TUNING TIME SET + or -, until the desired time appears.

If you change either of Local Time or World Time
The two clock's are not linked, adjust the time to either one.

To change the display to the daylight saving time (summer time) indication
Press the D.S.T.・SUMMER T. "S" is displayed and the time indication changes to summer time.
To cancel the summer time indication, press D.S.T.・SUMMER T. again.

When tuning in FM
The FM frequency is raised or lowered by a step of 0.05