

Reader

Quick Start Guide Guide de démarrage

PRS-505

Portable Reader System

© 2007 Sony Corporation Printed in China 3-274-631-01(2)

English

About the serial number

The serial number provided for this unit is required for customer registration. The number is on a label on the back of the unit. Do not remove the label.

Owner's Record

The model and serial numbers are located on the back of the unit. Record them in the space provided below. Refer to these numbers in the spaces whenever you call upon your Sony dealer regarding this product.

Model No. _____
Serial No. _____

On Copyrights

The contents of each book pre-installed on this product are copyrighted works, edited with the cooperation of the publisher and editor hereto mentioned. Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without Sony's permission except for personal use.

- SONY and the SONY logo are registered trademarks of Sony Corporation.
- BBEB, BBEB Book, and their logos are trademarks of Sony Corporation.
- "Memory Stick", "Memory Stick Duo", "Memory Stick PRO", and their logos are trademarks of Sony Corporation.
- Bitstream is a registered trademark, and Dutch, Font Fusion, and Swiss are trademarks of Bitstream Inc.
- Microsoft, Windows, Windows Vista and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and / or other countries.
- Adobe, Adobe Reader and Adobe PDF are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

All other system names and product names appearing in this document are generally the registered trademarks or trademarks of their respective manufacturers. Further, the trademark ™ and registered trademark ® symbols are not indicated throughout this document.

Program ©2006, 2007 Sony Corporation
Documentation ©2006, 2007 Sony Corporation

What You Can Do with Reader


Thank you for purchasing this Sony Portable Reader System PRS-505. Read through this Quick Start Guide to prepare the Reader for use. Once initial preparation is complete, you can transfer content from your computer to the Reader to take it anywhere you wish.

Getting Started

- Read this manual for initial preparation.
- Charge the Reader.
- Install eBook Library on your computer.

Importing

Download eBooks from CONNECT eBooks from your computer.

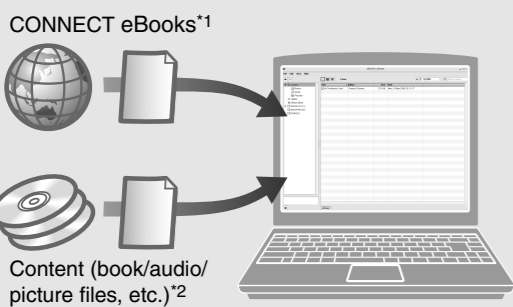


Content (book/audio/picture files, etc.)^{1,2}

- ¹ Online eBook store
 - ² Content that you already have can also be transferred.
- For details on content type compatible with the Reader, refer to the User's Guide (PDF).

Transferring

Transfer content from your computer to the Reader using eBook Library.

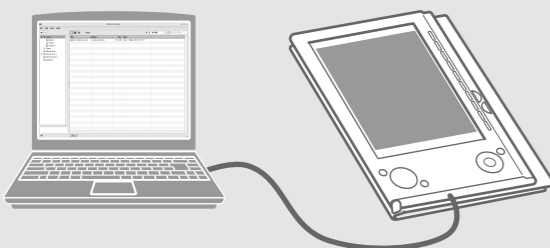

Reading/Playing/Viewing

Enjoy content on the Reader.



Getting Started

1 Checking the package contents


The Reader comes installed with a built-in rechargeable battery.

- Reader (with Soft cover) (1)
- USB cable (1)
- CD-ROM (1)
- eBook Library software
- User's Guide (PDF)
- Sample contents
- Quick Start Guide (this manual) (1)
- Flyers
- Dummy cards (2)

Note
• This CD-ROM will not play in an audio CD player.

2 Charging

First, charge the Reader battery, as battery power may not be sufficient immediately after purchase. Turn on the Reader, then connect the Reader to your computer using the supplied USB cable. The indicator lights up red while charging, and goes off when charging is complete.

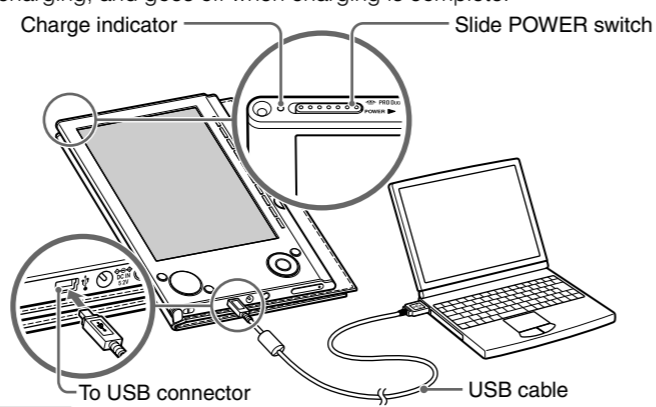

Notes

- When you connect the Reader to your computer, (indicating connection via a USB) is displayed on the Reader's screen. If the battery has been fully depleted, it takes about 40 minutes until is displayed, and you will not be able to turn on the Reader by the POWER switch during this time. In this case, wait until is displayed. The indicator lights up in red while is not displayed, and the Reader is charged.

- If the remaining battery power of a connected notebook computer is low, charging via USB connection may not be possible.
- If you connect the Reader to a notebook computer which is not connected to an AC outlet, the battery of the notebook computer will be drained. Do not leave the Reader connected to a notebook computer which is not connected to an AC outlet for an extended period.

Hint

- The Reader can also be charged by connecting to an AC outlet using the AC Adaptor for Reader (AC-S5220E) (optional).

3 Installing eBook Library

- 1 Turn on the computer and start Windows.**
Log on using an account with administrator privileges and connect to the Internet with your computer.
- 2 Insert the supplied CD-ROM into your computer's drive.**
The launcher appears.
- 3 Select "Install eBook Library."**
The Install Wizard screen appears. Follow the on-screen instructions to install.
Subsequently, install the User's Guide as well by selecting "Install PRS-505 User's Guide (PDF)" on the launcher.

If the installation is not successful, refer to "When installation is not successful - Q&A" on this Quick Start Guide.

To start eBook Library

- 1 Double-click the eBook Library icon () on the Windows desktop.**
- Hint**
- You can also start eBook Library by clicking the Start menu and then selecting "All Programs" - "Reader" - "eBook Library."

4 Customer registration

It is recommended that you perform customer registration by registering your contact information, which enables Sony to send you information regarding technical support, software updates, etc.

- 1 Select "Product Registration Website" on the launcher.**

System requirements

The following are requirements to use eBook Library.

OS	
Microsoft Windows Vista	Windows Vista Home Basic Windows Vista Home Premium Windows Vista Business Windows Vista Ultimate
Microsoft Windows XP	Microsoft Windows XP Home Edition Windows XP Professional Windows XP Media Center Edition Windows XP Media Center Edition 2004 Windows XP Media Center Edition 2005
CPU	800 MHz Celeron class processor or better
RAM	128 MB or more (minimum 512 MB for Windows Vista)
Free space on hard disc	20 MB or more Depending on the content amount, more space may be required.
Monitor	High Color or more, 1024 x 768 pixels or more (True Color, 1280 x 1024 pixels, or more recommended)
Other devices	CD-ROM drive, USB port, pointing device such as mouse or track pad

- Internet connection (broadband recommended, some fees may apply) is also required on your computer.
- This software is not supported by the following environments:
 - An operating system other than those included above
 - Personally built computer or operating system
 - Upgraded manufacturer-installed operating system
 - Multi-boot environment
 - Multi-monitor environment
 - Macintosh

When installation is not successful - Q&A

- Q1 Does your computer meet system requirements?**
A1 Check that your computer meets the system requirements listed above.
- Q2 Were you logged on as an "Administrator," did you close all running software programs before beginning the installation?**
A2 Log on as "Administrator."
Close all running software programs, including background programs such as virus-protection software.
- Q3 The set-up program does not start automatically.**
A3 If the set-up program does not start automatically when you insert the CD-ROM, click "Start" on the Windows taskbar, click "My Computer," and then double-click the optical disc drive icon to start the program.
- Q4 Is the progress bar in the installation window moving, and the access lamp of the CD drive flashing?**
A4 When the bar is moving and the lamp is flashing, the installation is still in progress. Please wait for the installation to finish.

If the solutions listed here do not resolve the issue, refer to "Support" on this Quick Start Guide.

Hint
• For the latest information on eBook Library and to download any software updates, visit the Web site:
<http://www.sony.com/reader>

How to Use


5 Importing eBooks from CONNECT eBooks to eBook Library

You can purchase (download) eBooks from the online eBook store "CONNECT eBooks" to your computer.

Hint
• The following explains how to import/transfer/read eBooks. For details on other content formats supported by the Reader, refer to the User's Guide (PDF) included on the CD-ROM.

Note
• To purchase (download) eBooks, you need to prepare an Internet-accessible environment on your computer.

- 1 Turn on the Reader, then connect it to your computer using the supplied USB cable.**

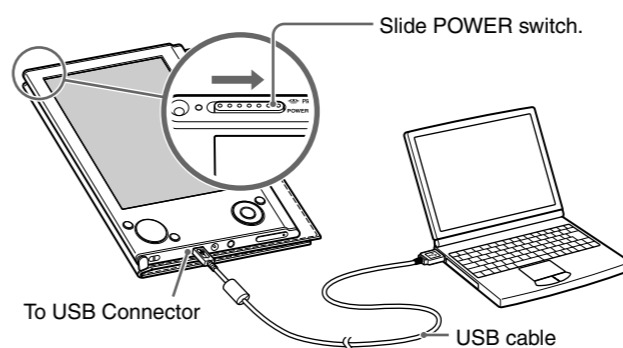


Hint
• When you connect the Reader to your computer with eBook Library started, the date and time of the Reader is automatically synchronized with your computer clock.

- 2 Click the Start menu, then select "All Programs" - "Reader" - "eBook Library" to start eBook Library.**
- 3 Click "eBook Store" in the Source view of eBook Library.**
The eBook Store page appears.
- 4 Follow the instructions in the store to authorize the Reader and your computer.**

Authorization is required only on the first visit to CONNECT eBooks.

- 5 Follow the instructions in the store to purchase (download) eBooks.**
Downloaded eBooks are automatically imported to "Library" in the Source view of eBook Library.

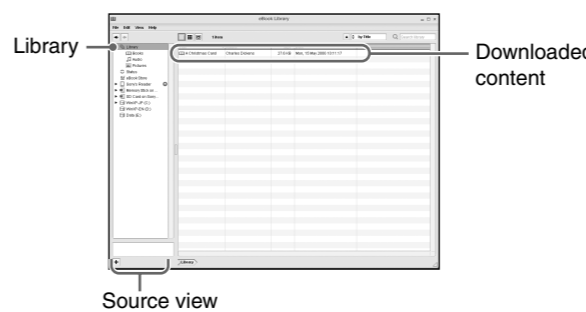


Hint
• eBooks can be read on eBook Library using your computer. For more information about using eBook Library, refer to the eBook Library Help.

6 Transferring eBooks from your computer to the Reader

- 1 Check that eBook Library is running and that the Reader is connected to your computer using the USB cable.**
"Sony's Reader" appears in the Source view of eBook Library.
- 2 Click "Library" in the Source view, then click (List view).**


The View area is switched to the List view and all the content in Library is listed.

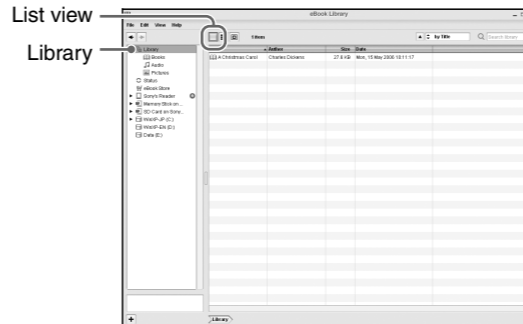

Hints

- When you click "Books," "Audio" or "Pictures" in the Source view, only their respective content types are displayed.
- When you click (Thumbnail view), content can be displayed as thumbnails.

- 3 Select the content you want to transfer from the list.**
To select multiple content, click the content while holding down the Ctrl key.
- 4 Drag the content from the list to "Sony's Reader" in the Source view.**
The content is transferred to the Reader.

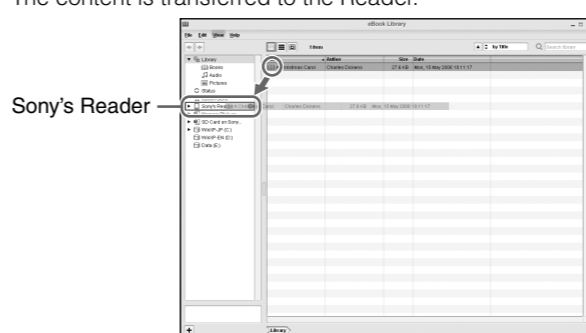


Notes

- Do not disconnect the USB cable from the Reader while data is being transferred.
- Do not leave the Reader connected for extended periods to a notebook computer that is not connected to AC power, because the Reader may drain the computer's battery.
- If the computer enters a power saving mode, such as the system suspend, sleep or hibernation while the Reader is connected to the computer directly, the Reader battery will not be charged. Instead, the Reader will continue to draw power from its battery, discharging it.

On transferring via a memory card

- To transfer eBooks to a memory card on the Reader, insert the memory card in the Reader, then follow the above steps (except drag and drop the content on "Memory Stick on Sony's Reader/SD Card on Sony's Reader" in step 4). For details, refer to "Transferring content via a memory card" in the User's Guide.
- With a memory card slot on your computer or a memory card reader, you can also transfer content directly to the memory card and then insert it in the Reader.
- If a memory card is inserted in your computer or a memory card reader, the memory card icon appears in the Source view. Follow the above steps (except drag and drop the content on "Memory Stick on PC/SD Card on PC" in step 4) to transfer to a memory card.
- When inserting the memory card into the Reader, it may take time for the Reader to recognize the content files in the memory card if the capacity of the content files stored on the memory card is large.

7 Reading eBooks on the Reader

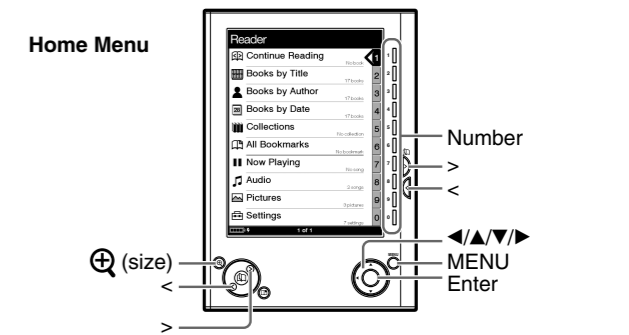

- 1 From the Home menu, press to select "Books by Title", then press Enter.**
The Book list appears.

If the contents of the book on the Reader and the memory card exceed 30 items, the Index menu appears. The Book list can be further sorted by selecting the category item in the Index menu. For details, refer to "Sorting the Book list" in the User's Guide.




Hint
• You can easily select a desired item by pressing the same number button as indicated on the number tab.


- 2 Press to select the desired book from the list, then press Enter.**
The Option menu appears.



- 3 Press to select how to open the book, then press Enter.**



- 4 Press to proceed to the next page.**
To return to the previous page, press .



- 5 Press (size) if you want to zoom in the page.**

The page can be magnified.
To restore the original scale, press (size) repeatedly.

To close the book
Press MENU.

Hint
• To return to the Home menu, press and hold MENU.


Read to learn about advanced features

Included with the Reader is this Quick Start Guide and the PDF-format User's Guide pre-loaded on the Reader. Additionally, after installing the supplied eBook Library, you can refer to the Help within eBook Library.

User's Guide (PDF)

Contains instructions for advanced features of the Reader and troubleshooting information.


Browsing the User's Guide on your computer

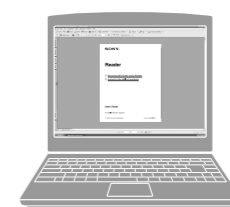

The PDF file of the User's Guide is provided on the supplied CD-ROM. Click the Start menu at the bottom left of the Desktop, then select "All Programs" - "Reader" - "PRS-505 User's Guide" to start Adobe Reader and open the User's Guide. For details on how to use Adobe Reader, refer to Adobe Reader Help.

Hint
• To view the User's Guide, you should have installed Adobe Reader 5.0 or later. Adobe Reader can be downloaded by selecting "Get Adobe® Reader®" on the launcher.

Browsing the User's Guide using Reader

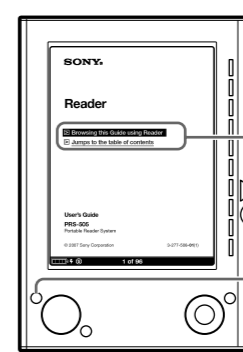


The PDF file of the User's Guide is transferred to PRS-505. From the Home menu, select "Books by Title" - "User's Guide" from the Book list.

Hints

- A mark in this Guide indicates a link. Press to select the desired link, then press Enter to jump to the linked page.
- To zoom in a page, press (size).

eBook Library Help

Provides detailed information about using eBook Library and the Reader.

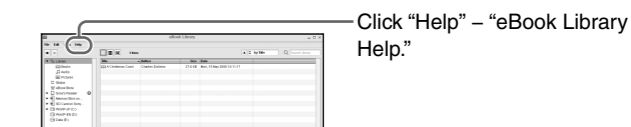

Support

If you encounter an issue, try the following.

- If you cannot install eBook Library
Refer to "When installation is not successful - Q&A" in this Quick Start Guide.
- For other issues
Refer to the "Troubleshooting" section in the User's Guide.

If the issue persists

Visit the support site (<http://www.sony.com/readersupport>).

If the issue still persists

Contact Sony Portable Reader System Support Center.
Phone number : 1-866-962-7669
For details, refer to "Other Information" in the User's Guide.

À propos du numéro de série

Le numéro de série fourni avec cet appareil est requis lors de l'enregistrement du client. Ce numéro est inscrit sur l'étiquette collée au dos de l'appareil. Ne retirez jamais cette étiquette.

Fiche d'identification

Les numéros de modèle et de série sont indiqués à l'arrière de l'appareil. Inscrivez-les dans l'espace ci-dessous. Faites-y référence chaque fois que vous appelez votre détaillant Sony au sujet de ce produit.

N° de modèle
N° de série

À propos des droits d'auteur

Le contenu de chaque livre préinstallé sur ce produit est protégé par des droits d'auteur, et est édité avec la coopération de l'éditeur et du rédacteur mentionnés. La législation sur les droits d'auteur interdit la reproduction, partielle ou totale, des données concernant ce produit ou du contenu de ce manuel (illustrations, documents liés, etc.) sans la permission du détenteur des droits d'auteur.

- SONY et le logo SONY sont des marques déposées de Sony Corporation.
• BBEB, BBEB Book et leurs logos sont des marques de commerce de Sony Corporation.
• « Memory Stick », « Memory Stick Duo », « Memory Stick PRO », et leurs logos sont des marques de commerce de Sony Corporation.
• Bitstream est une marque déposée et Dutch, Font Fusion et Swiss sont des marques de commerce de Bitstream Inc.

Tous les autres noms de système et de produit cités dans ce document sont en général des marques de commerce ou des marques déposées de leur détenteur respectif. Les symboles TM et © n'apparaissent pas dans ce manuel.

Utilisation du Reader

Nous vous remercions d'avoir fait l'acquisition de ce Sony Portable Reader System PRS-505. Lisez tout d'abord le Guide de démarrage avant d'utiliser votre Reader. Une fois les opérations de base effectuées, vous pouvez transférer du contenu de votre ordinateur vers le Reader afin de l'emporter partout où vous le souhaitez.

Mise en service

1 Vérification du contenu du carton d'emballage

- Le Reader dispose d'une batterie rechargeable intégrée.
• Reader (avec étui souple) (1) - Échantillons de contenu
• Câble USB (1) - Guide de démarrage (ce manuel) (1)
• CD-ROM (1) - Logiciel eBook Library • Encarts • Cartes factices (2) (format PDF)


Remarque

• Ce CD-ROM n'est pas lisible sur un lecteur de CD audio.

2 Chargement

Tout d'abord, chargez la batterie du Reader étant donné que l'autonomie de la batterie à l'achat peut être insuffisante. Mettez le Reader sous tension, puis raccordez-le à votre ordinateur à l'aide du câble USB fourni.

Témoin de charge Faites glisser le commutateur POWER

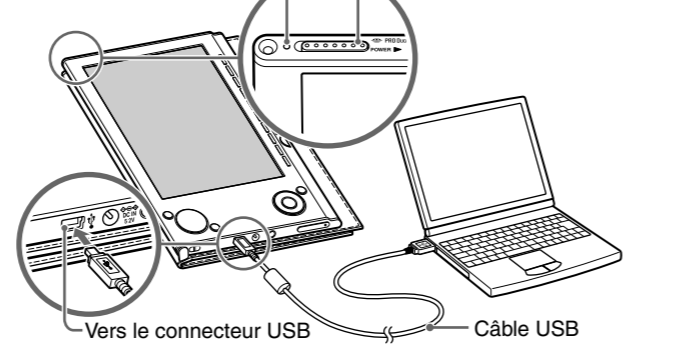

Remarques

• Lorsque vous raccordez le Reader à votre ordinateur, l'indication (connexion USB) s'affiche à l'écran du Reader. Si la batterie est complètement épuisée, l'indication peut mettre environ 40 minutes à s'afficher. Vous ne pourrez pas mettre le Reader sous tension à l'aide du commutateur POWER pendant ce temps. Dans ce cas, attendez que l'indication s'affiche. Un témoin rouge s'allume lors du chargement du Reader si l'indication ne s'affiche pas à l'écran.

• Si le niveau d'autonomie de l'ordinateur portable auquel vous êtes raccordé est faible, il est impossible de procéder à un chargement via une connexion USB.
• Si vous raccordez le Reader à un ordinateur portable qui n'est pas branché sur une prise de courant alternatif, vous risquez d'épuiser la batterie de l'ordinateur.

3 Installation du logiciel eBook Library

- 1 Mettez l'ordinateur sous tension et démarrez Windows. Connectez-vous en tant qu'administrateur et connectez votre ordinateur à Internet.
2 Insérez le CD-ROM fourni dans le lecteur CD de votre ordinateur.
3 Sélectionnez « Install eBook Library ».

L'écran de l'assistant d'installation apparaît. Suivez les instructions indiquées à l'écran pour procéder à l'installation. Ensuite, installez également le Guide de l'utilisateur en sélectionnant « Install PRS-505 User's Guide (PDF) » à partir de l'application de lancement.

Si l'installation échoue, reportez-vous à la section « Échec de l'installation – Questions/Réponses » du présent Guide de démarrage.

Pour lancer eBook Library

- 1 Double-cliquez sur l'icône eBook Library (sur le bureau Windows).
Conseil • Vous pouvez également lancer le logiciel eBook Library en cliquant sur le menu Démarrer, puis en sélectionnant « Tous les programmes » - « Reader » - « eBook Library ».

4 Enregistrement du client

Il est recommandé de procéder à l'enregistrement du client en remplissant une fiche de contact, ce qui permettra à Sony de vous envoyer des informations concernant l'assistance technique, les mises à jour du logiciel, etc.

- 1 Sélectionnez « Product Registration Website » dans l'application de lancement.

Configuration système requise

La configuration du système requise est la suivante :

Table with 2 columns: Système d'exploitation, UC, RAM, Espace disponible sur le disque dur, Moniteur, Autres appareils. Lists requirements such as Windows Vista/XP, Intel Celeron processor, 128MB RAM, and CD-ROM drive.

- Une connexion Internet est également requise sur votre ordinateur (ADSL recommandé, coûts supplémentaires possibles).
• Le logiciel n'est pas pris en charge par les environnements suivants :
- Les systèmes d'exploitation autres que ceux indiqués ci-dessus
- Les ordinateurs ou les systèmes d'exploitation assemblés personnellement
- Les mises à niveau du système d'exploitation installé à l'origine par le fabricant
- Les environnements à double amorçage
- Les environnements à plusieurs moniteurs
- Macintosh

Échec de l'installation – Questions/Réponses

- Q1 Votre ordinateur respecte-t-il la configuration système requise ?
Q2 Êtiez-vous connecté en tant qu'administrateur ? Aviez-vous fermé tous les programmes en cours avant de lancer l'installation ?
Q3 Le programme d'installation ne démarre pas automatiquement.
Q4 Est-ce que la barre de progression dans la fenêtre d'installation bouge et est-ce que le témoin d'accès du lecteur de CD clignote ?

Si aucune des solutions ci-dessus ne permet de résoudre votre problème, reportez-vous à la section « Assistance » du présent Guide de démarrage.

Conseil • Pour obtenir les dernières informations relatives au logiciel eBook Library et pour télécharger les mises à jour logicielles, visitez le site Web suivant : http://www.sony.com/reader

Utilisation

5 Importation de eBook vers eBook Library depuis CONNECT eBooks


Vous pouvez acheter (télécharger) des eBooks depuis la librairie en ligne « CONNECT eBooks » sur votre ordinateur.

Conseil • La procédure à suivre pour importer, transférer et lire des eBooks est expliquée ci-dessous. Pour plus d'informations sur les autres formats de contenu pris en charge par le Reader, reportez-vous au Guide de l'utilisateur (format PDF) enregistré sur le CD-ROM.

Remarque

• Pour acheter (télécharger) des eBooks, votre ordinateur doit disposer d'un accès Internet.

- 1 Mettez votre Reader sous tension, puis raccordez-le à votre ordinateur à l'aide du câble USB fourni.

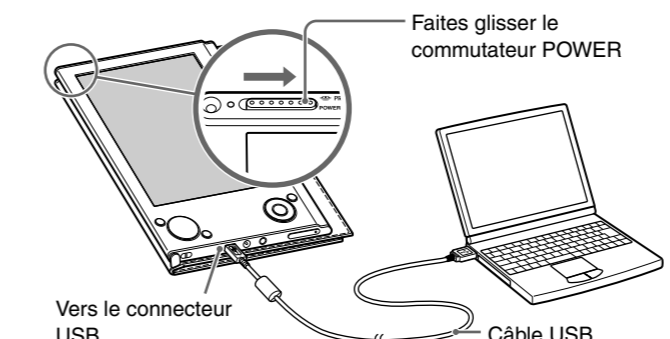

Conseil

• Lorsque vous raccordez le Reader à votre ordinateur et que eBook Library est ouvert, la date et l'heure du Reader sont automatiquement synchronisées avec l'horloge de votre ordinateur.

- 2 Cliquez sur le menu Démarrer, puis sélectionnez « Tous les programmes » - « Reader » - « eBook Library » pour lancer eBook Library.
3 Cliquez sur « eBook Store » dans l'affichage par source de eBook Library.

La page de la librairie en ligne eBook apparaît.

- 4 Suivez les instructions à l'écran pour autoriser votre Reader et votre ordinateur.

Une autorisation est requise uniquement la première fois que vous visitez CONNECT eBooks.

- 5 Suivez les instructions à l'écran pour acheter (télécharger) des eBooks.

Les eBooks téléchargés sont automatiquement importés dans « Library » dans l'affichage par source de eBook Library.




Affichage par source

Conseil • Vous pouvez lire les eBooks sur votre ordinateur à partir de eBook Library. Pour plus d'informations sur l'utilisation du logiciel eBook Library, reportez-vous à l'Aide eBook Library.

6 Transfert de eBooks de votre ordinateur vers le Reader

- 1 Vérifiez que le logiciel eBook Library est lancé et que le Reader est raccordé à votre ordinateur à l'aide du câble USB.
2 Cliquez sur « Library » dans l'affichage par source, puis sur l'icône (affichage par liste).

La zone d'affichage passe à l'affichage par liste et tout le contenu de la Library est répertorié.

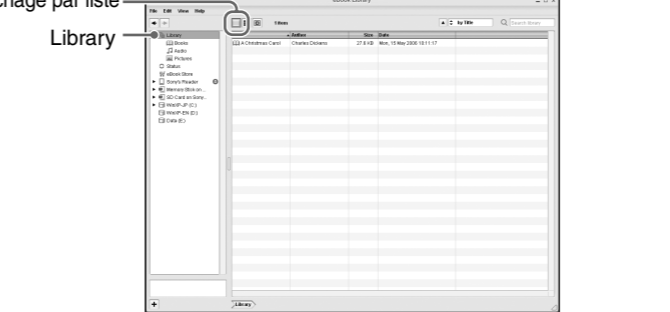


Conseils

- Lorsque vous cliquez sur « Books », « Audio » ou « Pictures » dans l'affichage par source, seul le contenu correspondant s'affiche.
• Lorsque vous cliquez sur l'icône (affichage par vignette), le contenu s'affiche sous forme de vignettes.

- 3 Sélectionnez le contenu que vous souhaitez transférer depuis la liste. Cliquez sur les fichiers tout en maintenant la touche Ctrl enfoncée pour sélectionner plusieurs fichiers à la fois.

- 4 Faites glisser les fichiers depuis la liste vers « Sony's Reader » dans l'affichage par source. Les fichiers sont transférés vers le Reader.

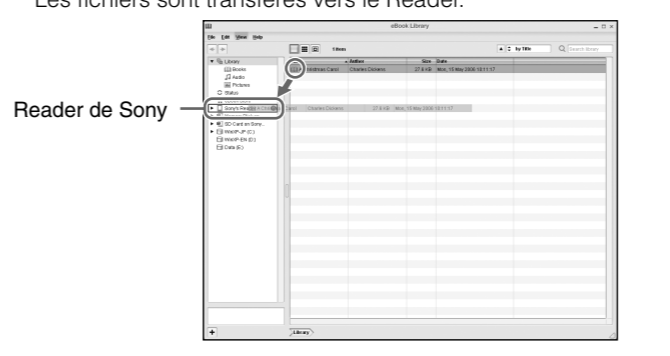


Remarques

- Ne débranchez pas le câble USB du Reader pendant le transfert de données.
• Ne laissez jamais le Reader raccordé à un ordinateur portable qui n'est pas branché sur une prise de courant alternatif pendant une période prolongée car vous risquez d'épuiser la batterie de l'ordinateur.
• Si l'ordinateur passe en mode d'économie d'énergie, tel que le mode de veille ou d'hibernation, lorsque le Reader est directement raccordé à l'ordinateur, la batterie du Reader ne se charge pas. Au contraire, le Reader continue à consommer de l'énergie, déchargeant ainsi sa batterie.

À propos du transfert via une carte mémoire

- Pour transférer des eBooks vers une carte mémoire du Reader, insérez la carte mémoire dans le Reader, puis suivez les étapes décrites ci-dessus (sauf la section concernant le glisser-déposer de fichiers dans un « Memory Stick on Sony's Reader/SD Card on Sony's Reader » à l'étape 4). Pour plus d'informations, reportez-vous à la section « Transfert de contenu via une carte mémoire » du Guide de l'utilisateur.
• Si votre ordinateur est doté d'une fente pour carte mémoire ou d'un lecteur de carte mémoire, vous pouvez également transférer du contenu directement sur la carte mémoire, puis l'insérer dans le Reader. Si vous insérez une carte mémoire dans la fente de votre ordinateur ou dans le lecteur de carte mémoire, l'icône de carte mémoire apparaît dans l'affichage par source. Suivez les étapes ci-dessus (sauf la section concernant le glisser-déposer de fichiers dans le « Memory Stick on PC/SD Card » à l'étape 4) pour transférer du contenu sur une carte mémoire.
• Lorsque vous insérez la carte mémoire dans le Reader, la reconnaissance des fichiers de contenu peut prendre quelques instants, surtout si la taille des fichiers de contenu stockés sur cette carte mémoire est importante.

7 Lecture de eBooks sur le Reader

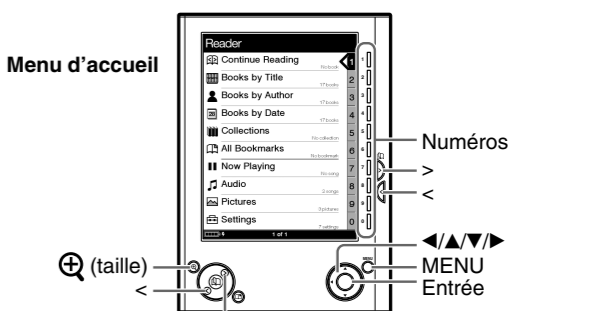

- 1 Dans le menu d'accueil, appuyez sur la touche MENU pour sélectionner « Books by Title », puis appuyez sur Entrée. La liste de livres apparaît.

Si le contenu du livre sur le Reader et la carte mémoire dépasse 30 éléments, le menu d'index apparaît. Vous pouvez trier davantage la liste de livres en sélectionnant un élément de catégorie dans le menu d'index. Pour plus d'informations, reportez-vous à la section « Classement de la liste de livres » du Guide de l'utilisateur.



Conseil • Vous pouvez facilement sélectionner l'élément de votre choix en appuyant sur la touche numérique correspondant au bouton numéroté.


- 2 Appuyez sur la touche MENU pour sélectionner le livre de votre choix dans la liste, puis appuyez sur Entrée. Le menu d'options apparaît.



- 3 Appuyez sur la touche MENU pour sélectionner la façon d'ouvrir le livre, puis appuyez sur Entrée.



- 4 Appuyez sur la touche > pour passer à la page suivante. Pour revenir à la page précédente, appuyez sur la touche <.

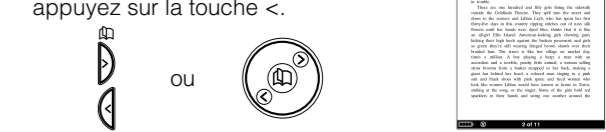

- 5 Appuyez sur la touche (taille) pour effectuer un zoom avant sur la page. La page peut être agrandie.

Pour restaurer la taille d'origine, appuyez plusieurs fois sur la touche (taille).

Pour fermer le livre, appuyez sur MENU.

Conseil • Pour revenir au menu d'accueil, maintenez la touche MENU enfoncée.


Pour en savoir plus sur les fonctions avancées

Le présent Guide de démarrage est livré avec le Reader et le Guide de l'utilisateur (au format PDF) est préchargé sur le Reader. Après avoir installé votre logiciel eBook Library fourni, vous pouvez également vous reporter à l'Aide eBook Library.


Guide de l'utilisateur (format PDF)

Contient des instructions relatives aux fonctions avancées du Reader et des informations concernant le dépannage.

Navigation dans le Guide de l'utilisateur avec votre ordinateur

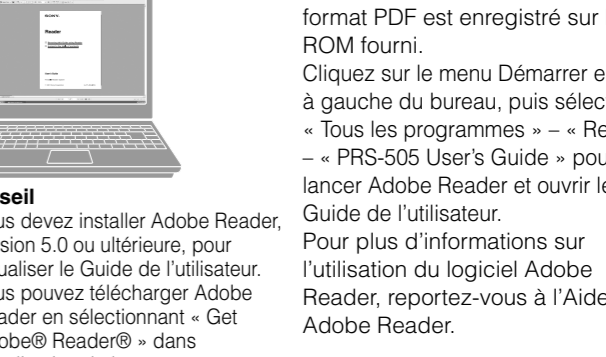

Navigation dans le Guide de l'utilisateur à l'aide du Reader

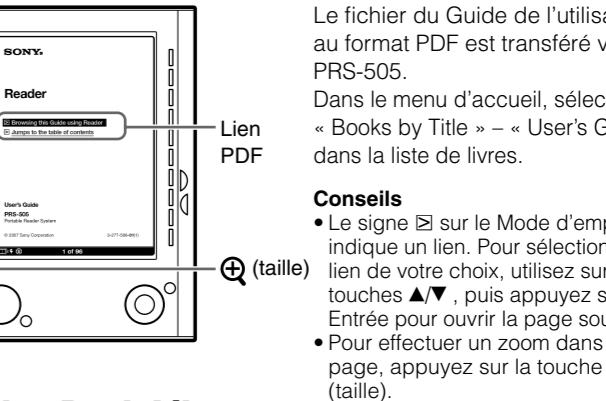

Aide eBook Library

Fournit des informations détaillées sur l'utilisation du logiciel eBook Library et du Reader.



Assistance

Si vous rencontrez un problème, respectez les étapes suivantes.

- Si vous ne réussissez pas à installer eBook Library Reportez-vous à la section « Échec de l'installation – Questions/Réponses » de ce Guide de démarrage.
• Pour d'autres problèmes Reportez-vous à la section « Dépannage » du Guide de l'utilisateur.

Si le problème persiste

Visitez le site de support à la clientèle suivant : http://www.sony.com/readersupport.

Si le problème persiste encore

Contactez Sony Portable Reader System Support Center par téléphone au 1-866-962-7669 Pour plus d'informations, reportez-vous à la section « Informations complémentaires » du Guide de l'utilisateur.